
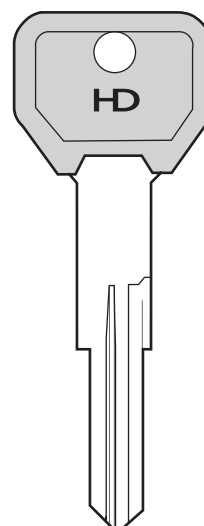
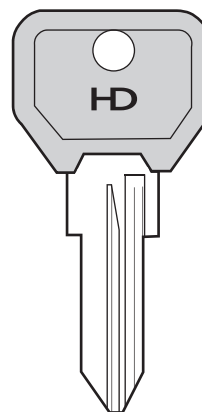
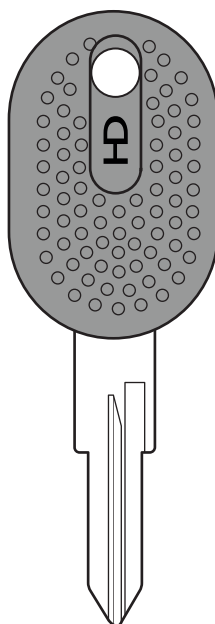
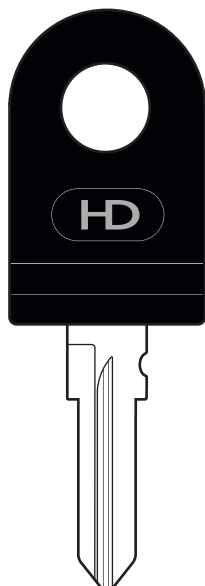


An abstract graphic on the left side of the page, consisting of a network of interconnected nodes and lines, resembling a molecular structure or a complex web. The nodes are represented by small circles of varying sizes, and the lines are thin, light-colored connections between them. The overall shape is irregular and occupies the left half of the image.

NON TRANSPONDER

ALFA ROMEO

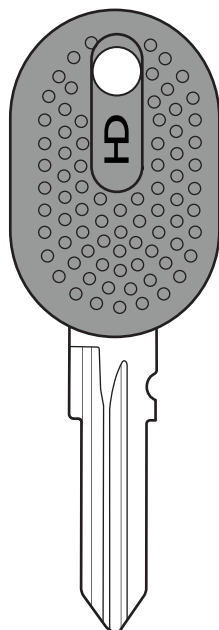

Use for
C246
ARM10

W... 0001-9640

K... 7001-8092
H... 7001-8092

AL... 0001-1274



ARM10P
PT023



G4P
PT006



K4P
PT007






GT16AP
PT025



YS29P
PT024

ALFA ROMEO

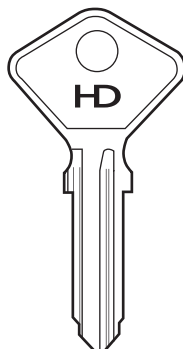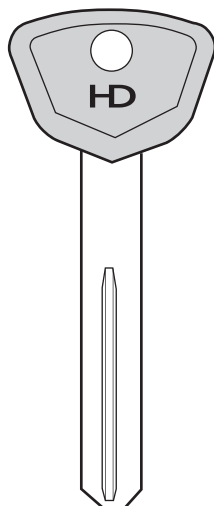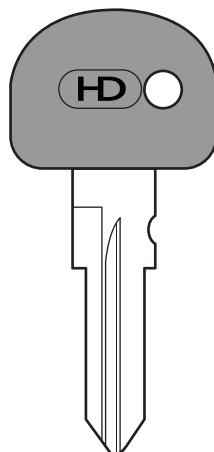

4...100-309
Use for C006 SF7



SF2
C003

6...100-309



SF3
C004

8...100-309





SF4
C005

2...100-309



SF1
C002

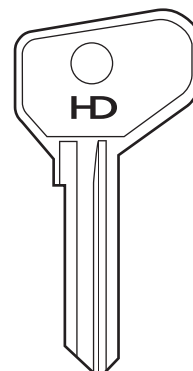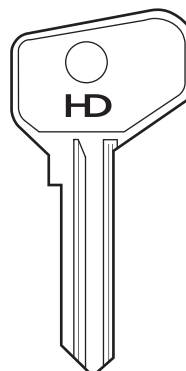

1...501-1000

3...501-1000

Z...100-309



FA1
C170



SF5
C066



GT5BP
XPT078




GI3P
CV011

G...
Z...
70001-9956
G...
2001-4530

...1531-3030

ALFA ROMEO

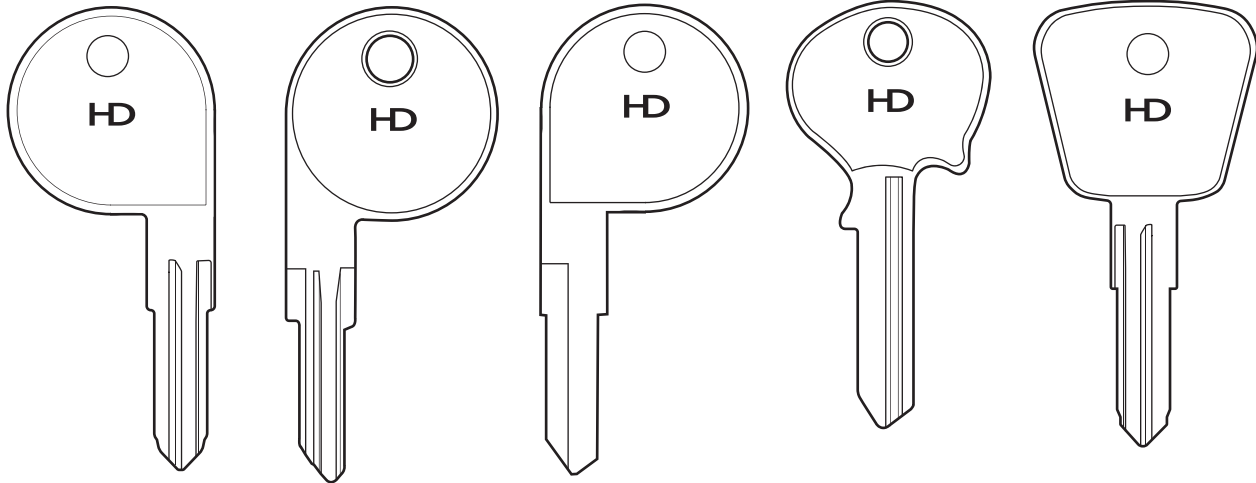

3... 100-789



SP7
C010

...A
1-2-3-4-5

6... 100-309

8... 100-309

5... 100-789

Use for C001 NE23



SF9
C008



SP6
C009



SP8
C011




NE7
C028



SF8
C007

ALFA ROMEO

AMERICAN MOTORS

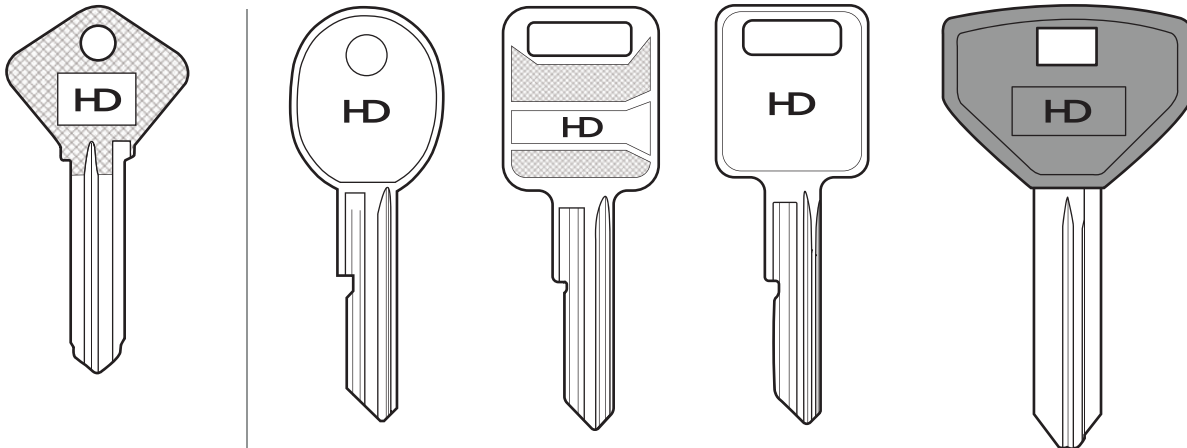

E... 225-814
L... 01-1000

D... 224-814
K... 01-1000

E... (J)000-999
..E.. (J)0.00-9.99
..E. (J)00.0-99.9
F... (J)000-999
..F.. (J)0.00-9.99
..F. (J)00.0-99.9

Use for C365 P1789



AF3B
XC009



S1970AM
C364



1970AM
C336



P1098J
C334



CY16P
XPT001

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS


CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

AMERICAN MOTORS

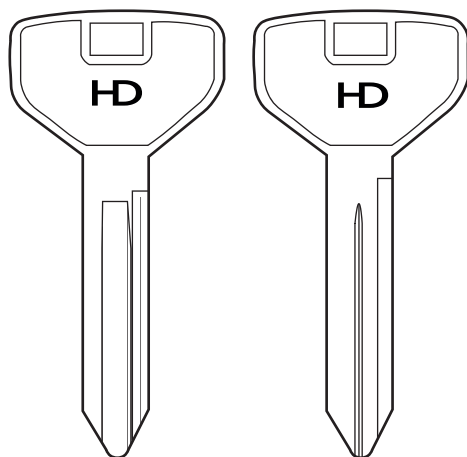


J... 1-3580

L... 1-3580



ASTON MARTIN

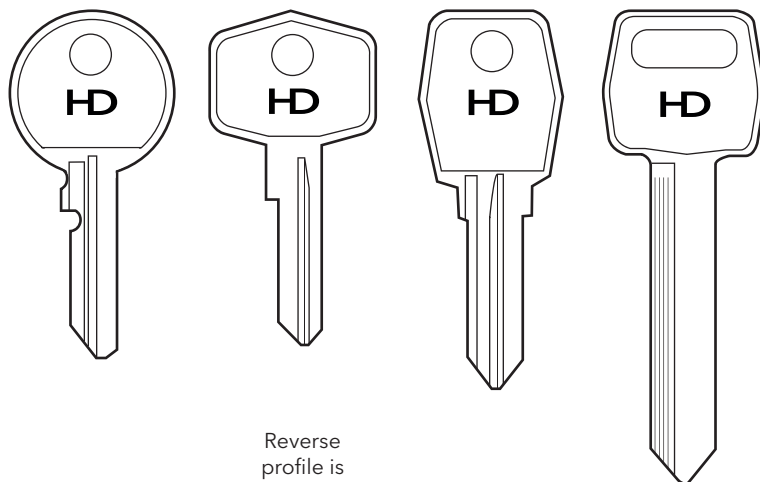

Reverse
profile is
XC115
UNI16R


626-750

001-099
876-955

1001-



ASTON MARTIN

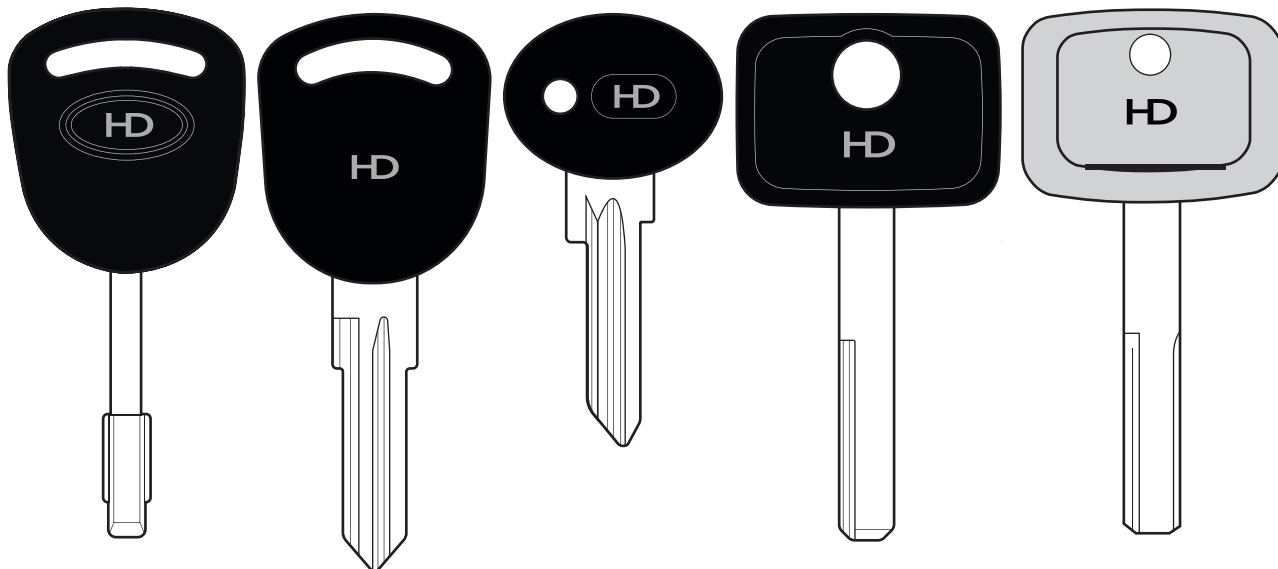

1-1859

Use for
XCV017
YM27PL


WY ...
Y ...
0001-3000

Use for
XCV016
HU43PL


WH ...
H ...
0001-3000





AUDI

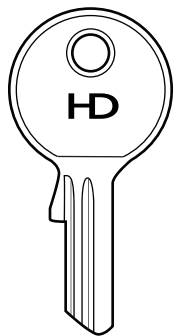


Can also use
C299
BU2

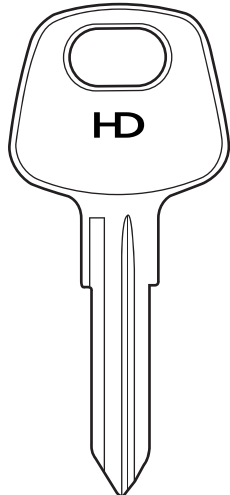

...2001-4949

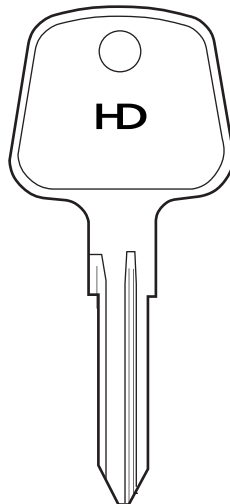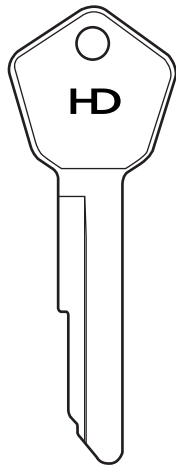

Use for
C155
WT6

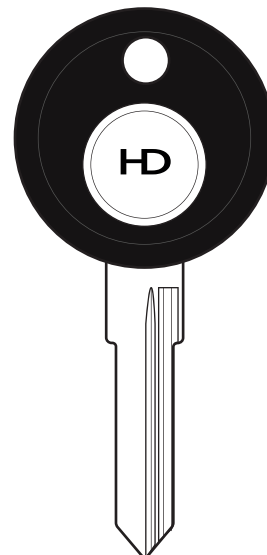

... X ... 11-91

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS

CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI



SBT1
XC210



NE21
C031



WT3
C191




WT7
C156




WT7AP
XPT120

AUDI

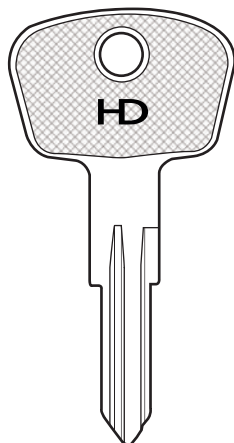


WT4R
XC185

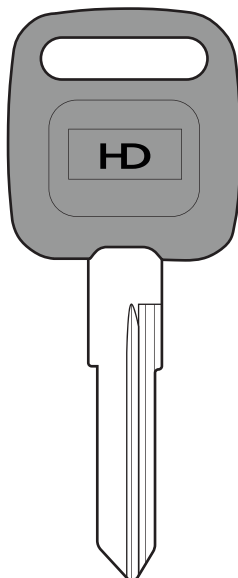


Use for
C157
WT9

HV...1-9282 VB. VH

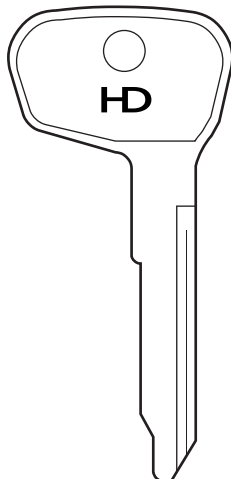

WT5
C194

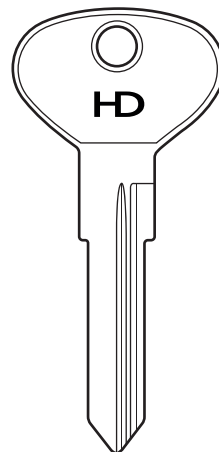


CA1
C149

VB... 2001-2830
3001-3890

NV... 2001-2830
3001-3890
MD... 2001-2830
3001-3890

...V...11-72.001-110

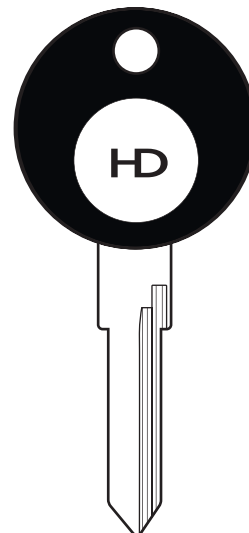

NE62P
PT037






Use for
C264 NE62
and XPT090
WT10P

AH... 1-9282

NON TRANSPONDER

AUDI


AUSTIN

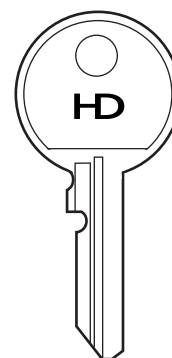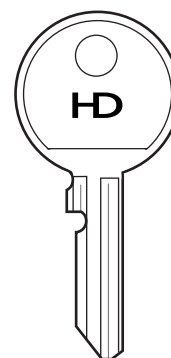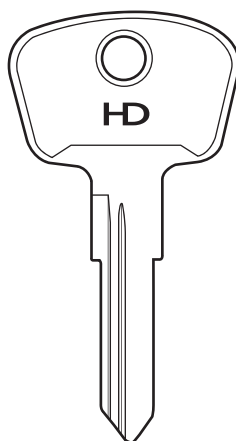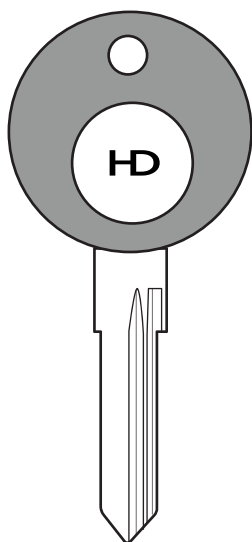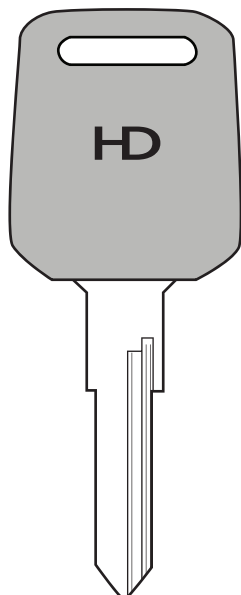







Use for
XCV027
HU49PL

501-625

626-750



AUSTIN

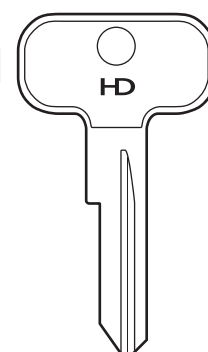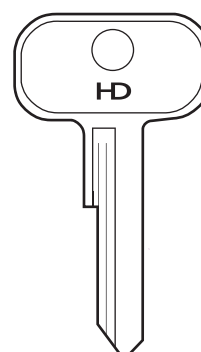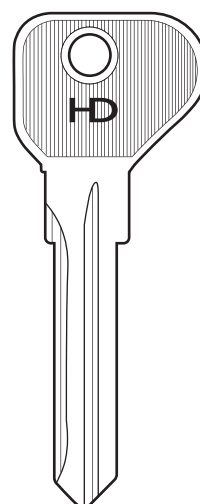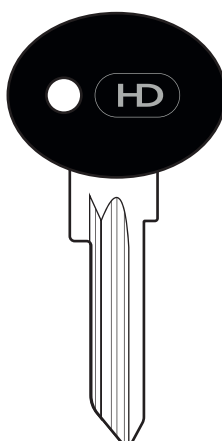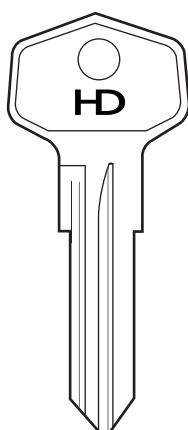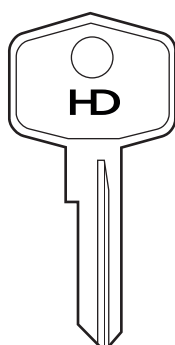

Reverse
profile is
XC115
UNI16R

Use for
C071
TC/AK

Use for
C020
FH

001-099
876-955

AK... 1-1000

FR
0001-2000

3001-4000

751-875


876-955




- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL

- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VVDI


AUSTIN

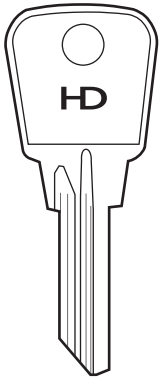


E122A
C032

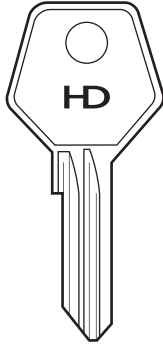


TS STR-2
C034

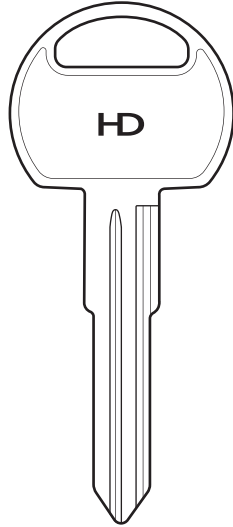

NE49
C027

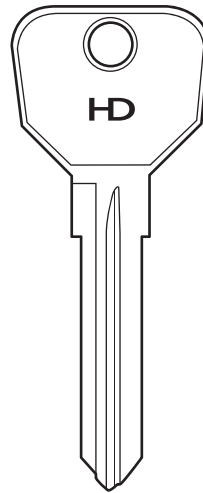

NH
C029

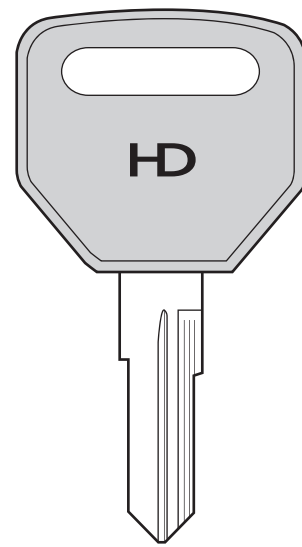

LF21RCP
PT068


Use for
C017
WB1

Use for
C287
LF19


300-369

NP... 1-1000

AUSTIN

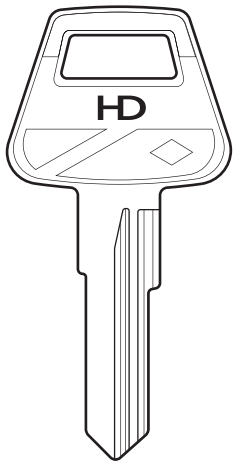


WB2
C075

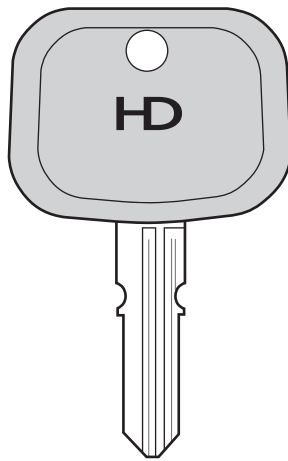


Use for
C077
HD54

HD54P
PT009

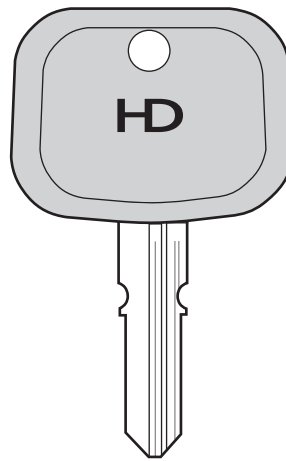

Use for
C078
HD55

HD55P
PT010

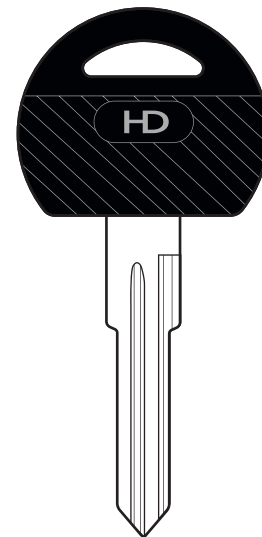

NE48P
PT016

NSP... 4000-4999
7001-9000
E... 2001-3000
4001-5000

1... 001-700

2... 001-700






NON TRANSPONDER



NON TRANSPONDER

AUSTIN

BEDFORD

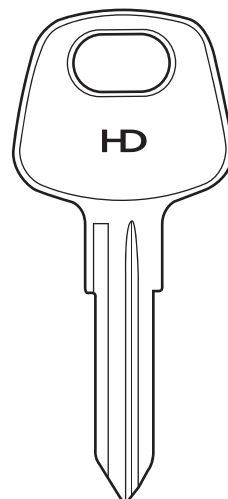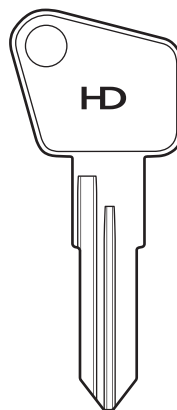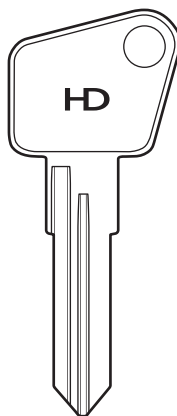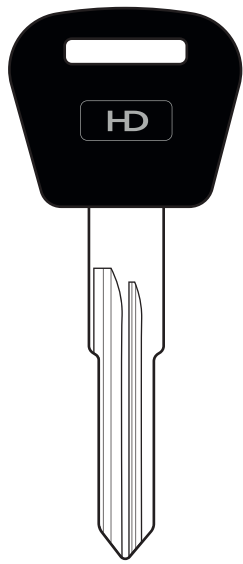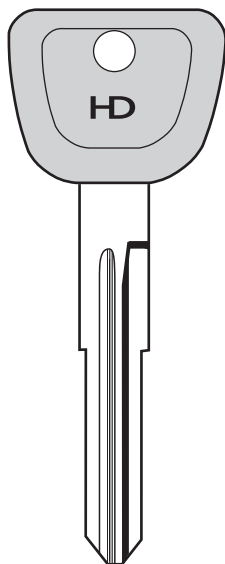

Use for
C261
NE51

X1-4088
D1-4088

M100-174
W600-842

2001-3000

R4001-5000


NE48P1
PT032







NE51P
PT036


WS13
C176


WS12
C175


NE21
C031

BEDFORD

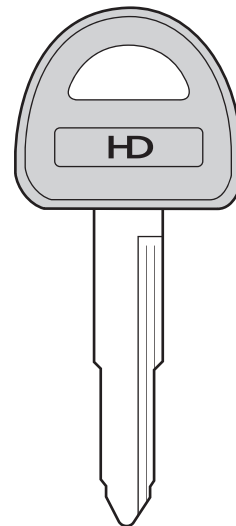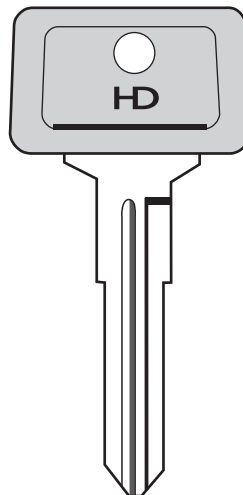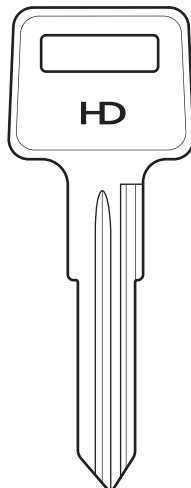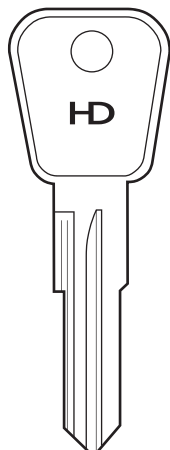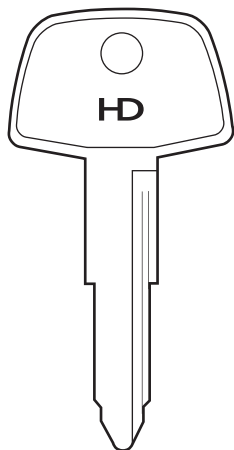

H... 0001-0400
2221-2620
4441-5143

101-225

E... 4001-5000
8090-8999
L... 8001-10000

Use for
XPT019
GM23P


MS12
C262


FT / FV
C070


NE24
C026


NE24P
PT013



TOY4RCP
XPT014

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL

- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VVDI

BENTLEY

BLAU

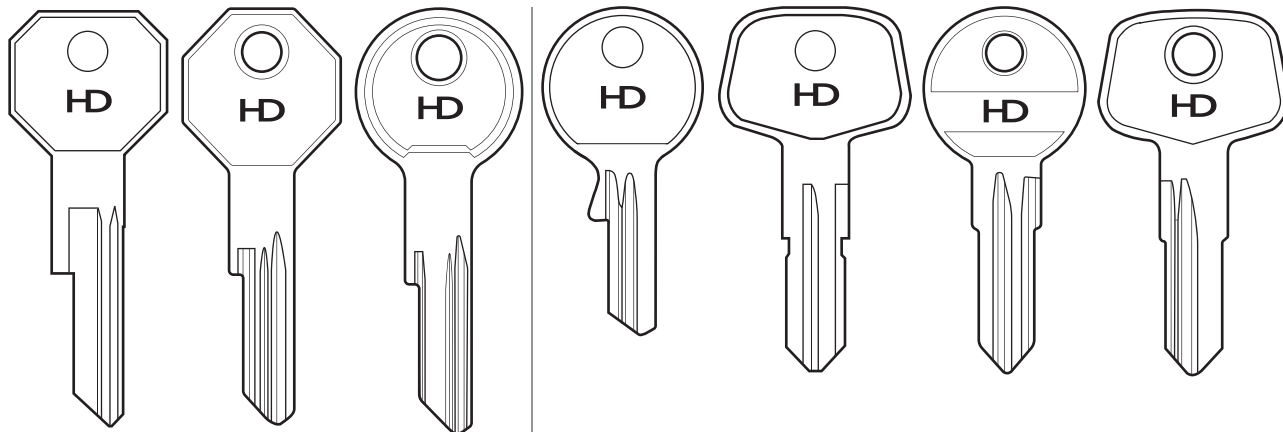

RRM1001-2000

Reverse
profile is
C169 BLA2


BT5R
XC110

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS

CHIPS


KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

BLAU

BMW

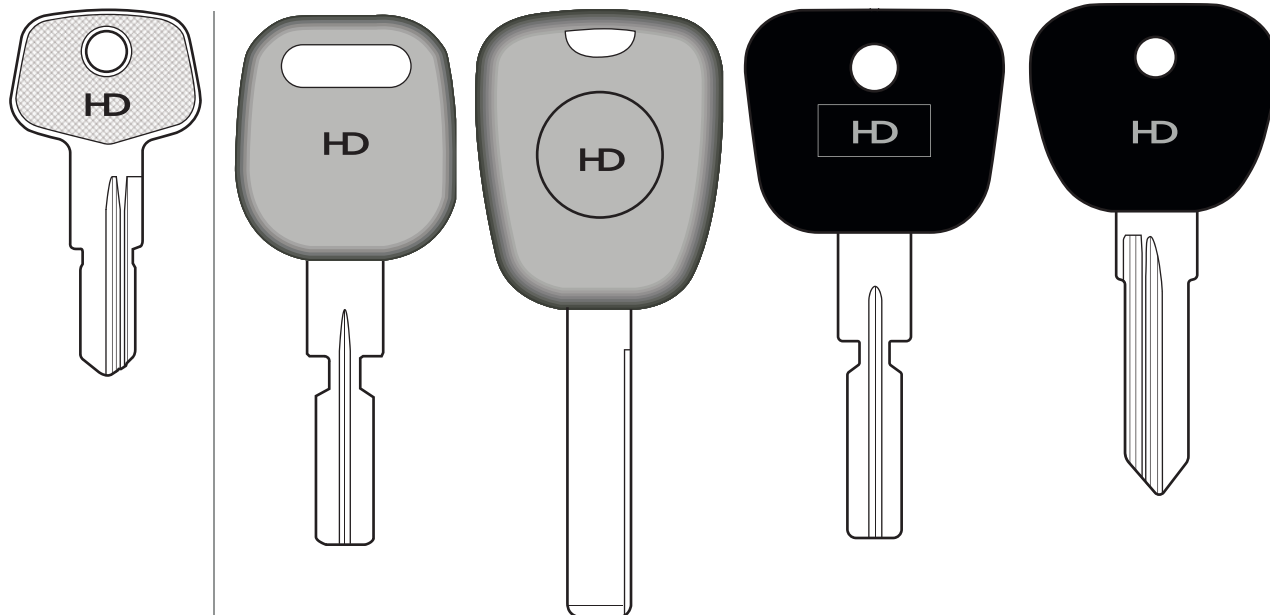

....1-6000

Valet Key

BH
010001-241009

HB... 1-2988
3001-5000



BT3R
XC242



HU109FP
XCV029



HU92RP
XCV028




BM2P
CV019



HF39P
PT001

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL
- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI

BMW

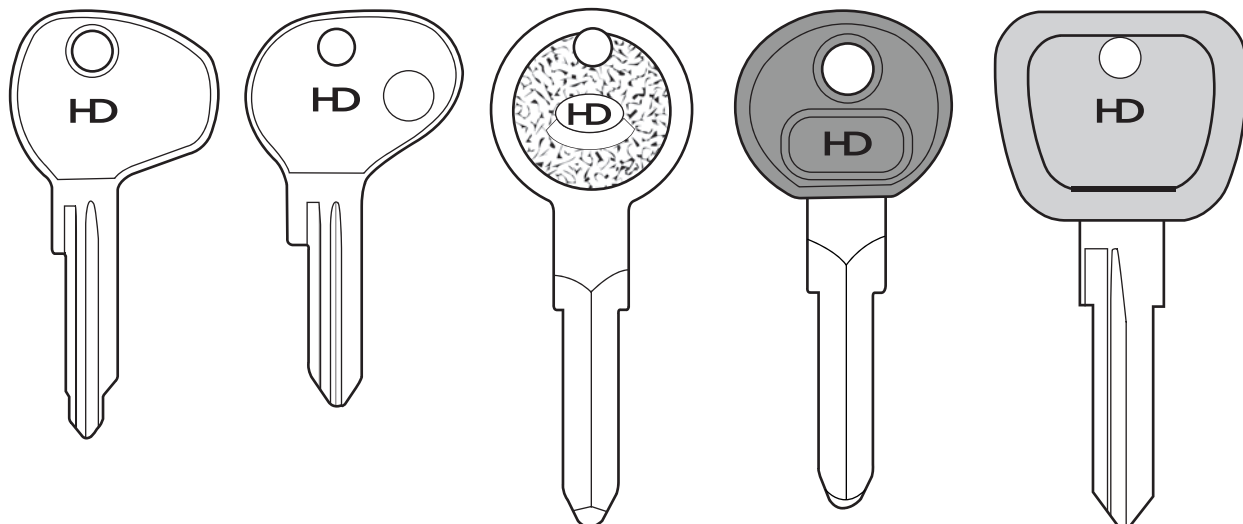

Use for
C267 HF82

10001-20000
40001-49999



HF41
C159



BW1
XC066



PE1
XCV006




PA1P
CV012



HF82P
PT027

BMW

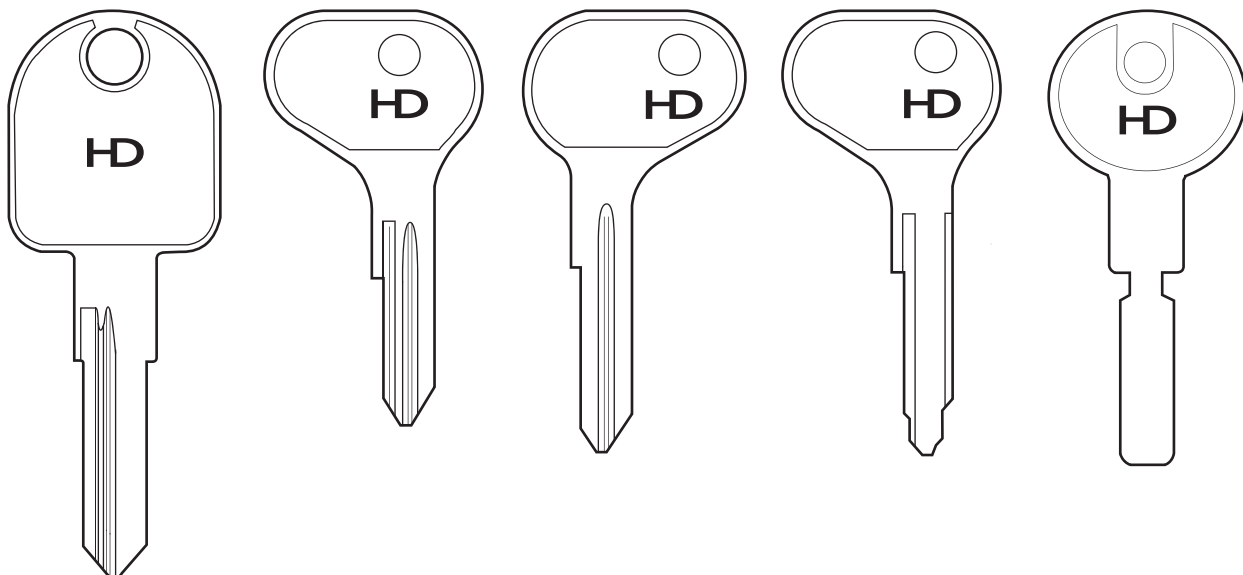

X... 1001-2020
X... 7001-8000
1-74, 1-101

W... 1001-2020
7001-8000



HU50
XC268



HF20
C302



HF18
C206



HF28
C012




HU59
XCV014

BMW

BRITAX

BRITISH LEYLAND

CADILLAC

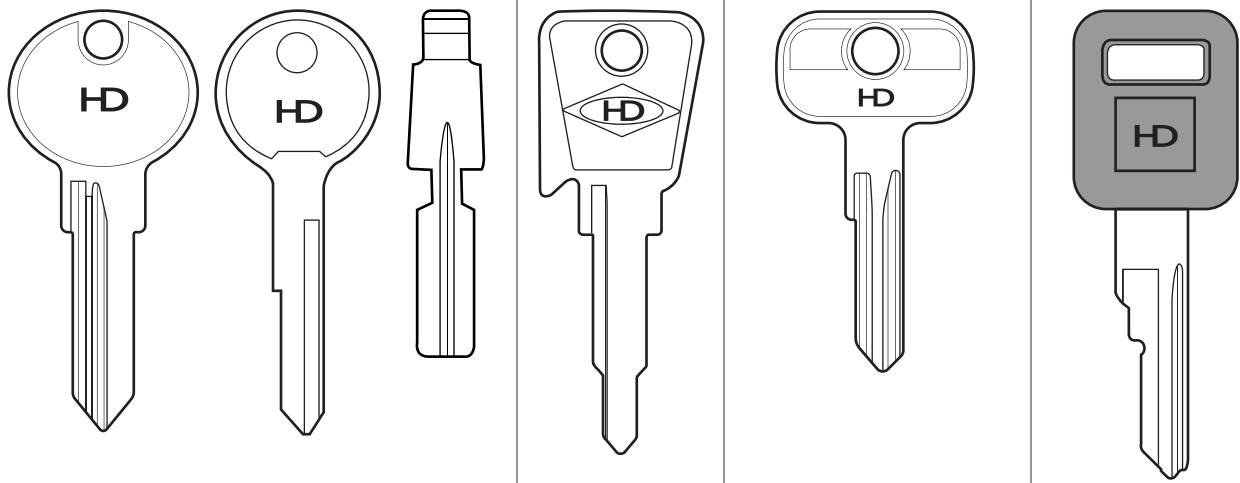

HF39
C013



NE31
XC039



HU74T
XC235



LF4
C019



UNI16R
XC115



GM14RP
XPT079


Reverse
profile is
C024 FS

.A..0.00-9.99
.B..0.00-9.99
.V..0.00-9.99
.V.00.0-9.99
.W..0.00-9.99
.W.00.0-9.99

CASI

CHEVROLET

CHRYSLER

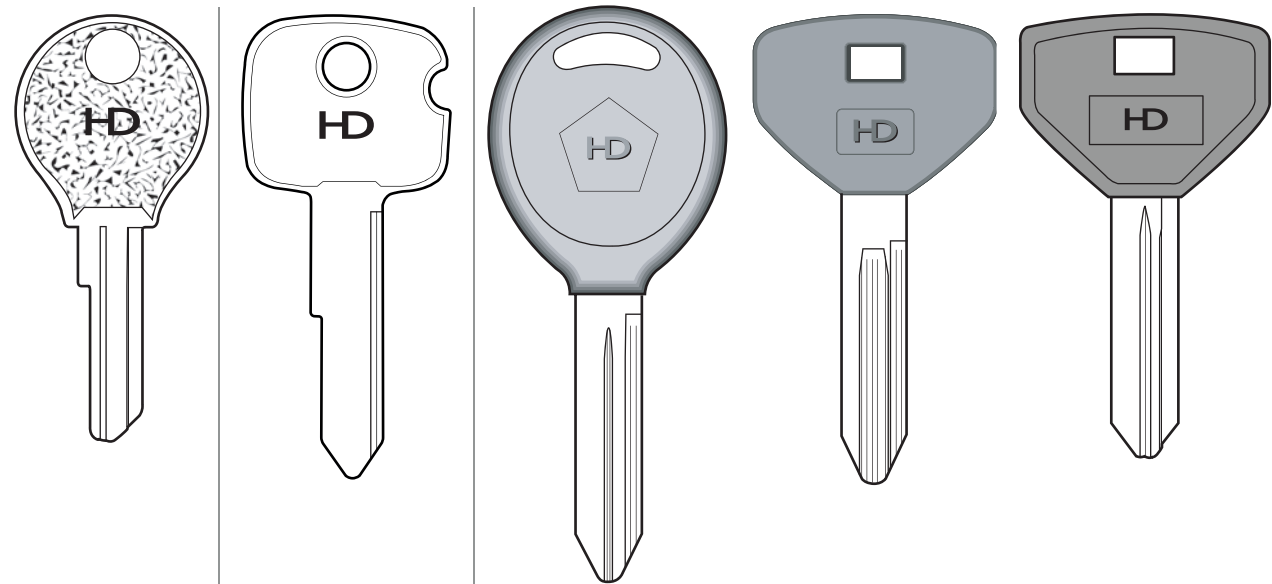

CI5
XC263



YM28
C147



CY24BP
XPT095



CY19P
XPT107



CY16P
XPT001

R... 1-1500

L... 1-3580
M... 1-2618


Use for C365 P1789

NON TRANSPONDER

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL

- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI

CHRYSLER

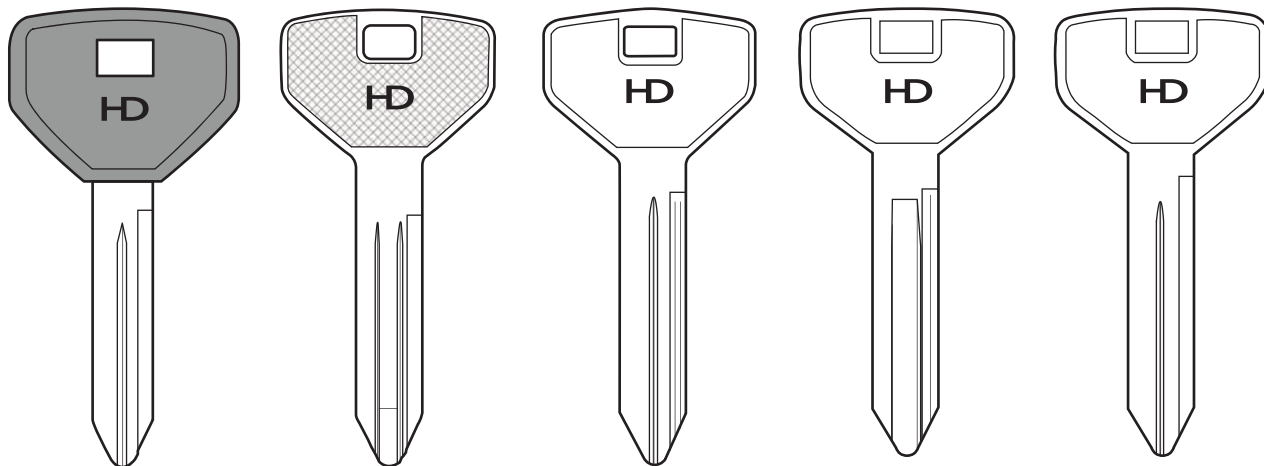

J... 1-3580

L... 1-3580

CY22P
XPT068


CY20
XC127

CY23
XC237

P1793
C366

P1794
C367

CHRYSLER

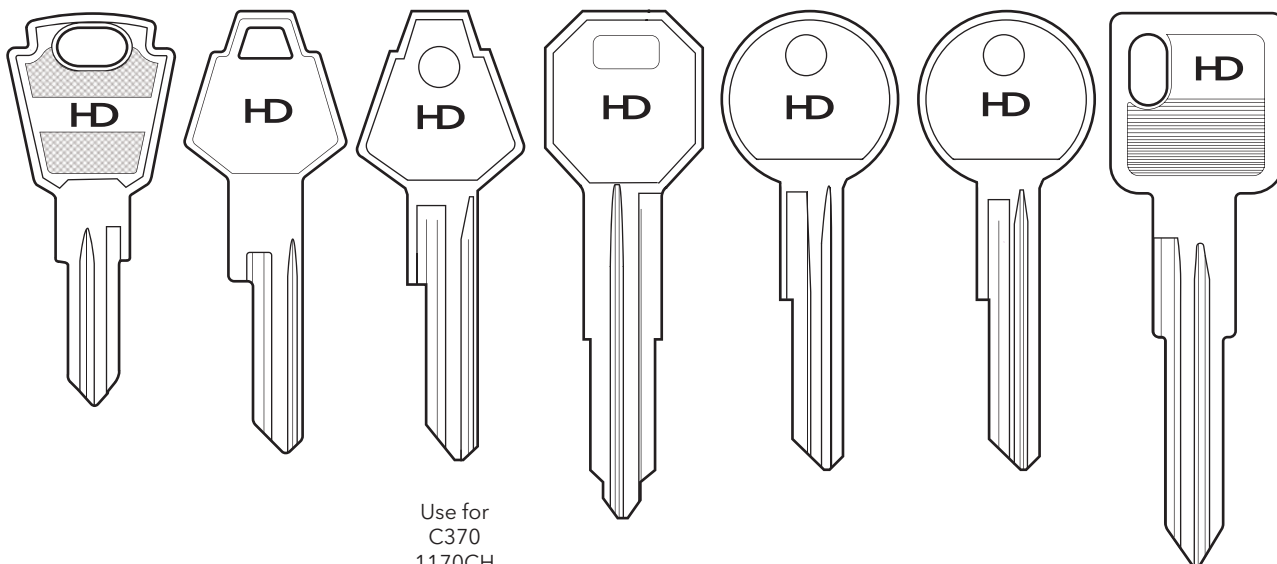

Use for
C370
1170CH
& C371
U1170CH

DP...

EP... 0001-3000
DP... 1-1400

CU... 1-1500
DS... 1-1400

D... 1-1400
ES... 1P1300
DS... 1-1400

AM...
0001-1000

KI1
XC065

P1770U
C360

1769CH
C368

CY18
XC156







S1770U
C361

S1769CH
C369

YM32R
XC056

CHRYSLER

CITROEN

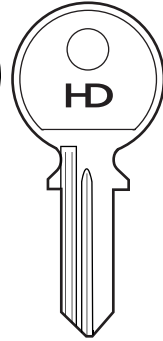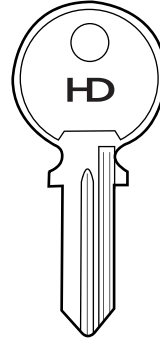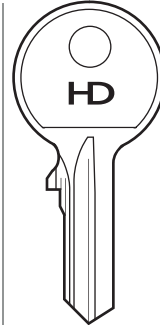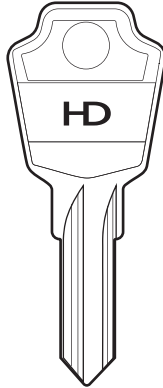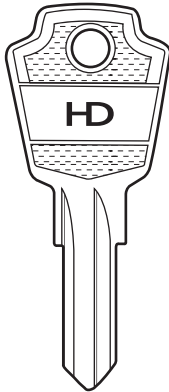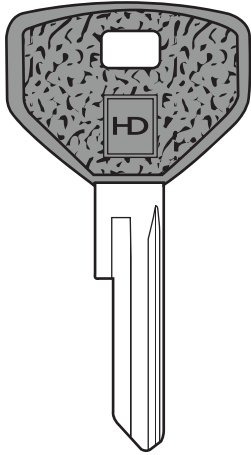

A400-520
T280-312



400-520
2... 400-520
2... 1-2-3-4-5
T... 247-279
1F... 30-33

A4-AA-JZ
C.3.AA-ZY
D.3. AA/HR



CY15RP
XPT076



62R
C108



62U
C297



RO1 62Z
XC063



7DC
H0342







R62UC
C042



L62UC
C043

CITROEN

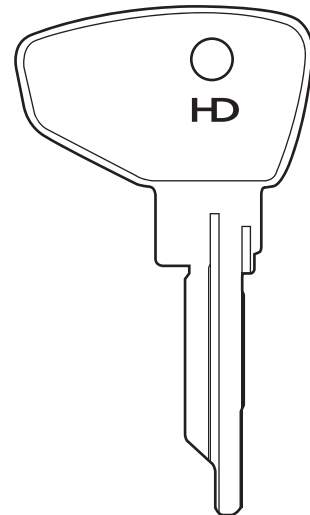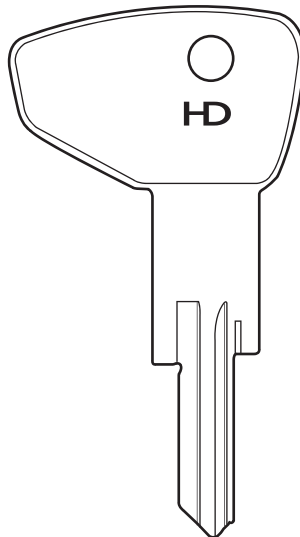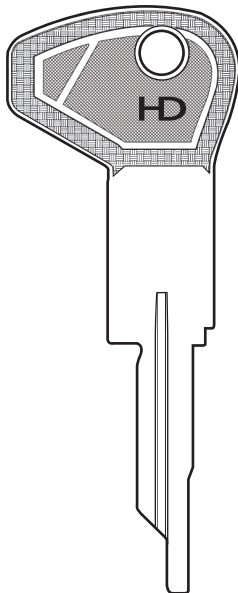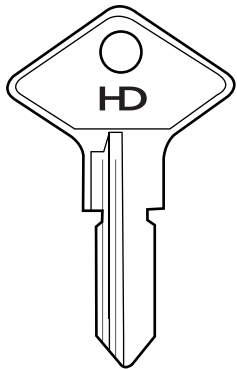

1R... 000-999
2R... 1000-1837
1R... 000-665



VC29
C122



VC30
C047



VC27
C046



VC35
C049

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS


CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

CITROEN

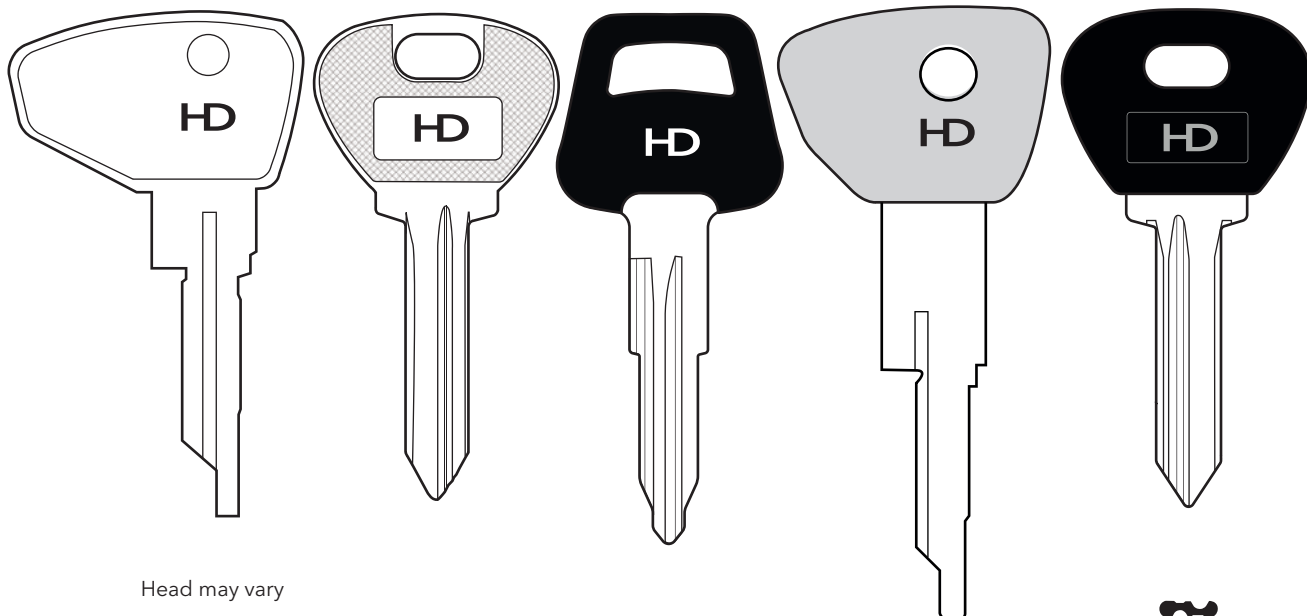

Head may vary

B-T...
1-2-3-5-7

A-U-E-V-Z
.X/Y 1-2-3-5-7

Use for
C016
LF17

Use for
C178 SR
and C045
VC26

SEX8P
PT044

Use for
C110
SEX6



VC25
C044



SEX6R
C253



LF17P
PT026




VAC27P
XPT136



SEX6P
PT030

CITROEN

DAEWOO

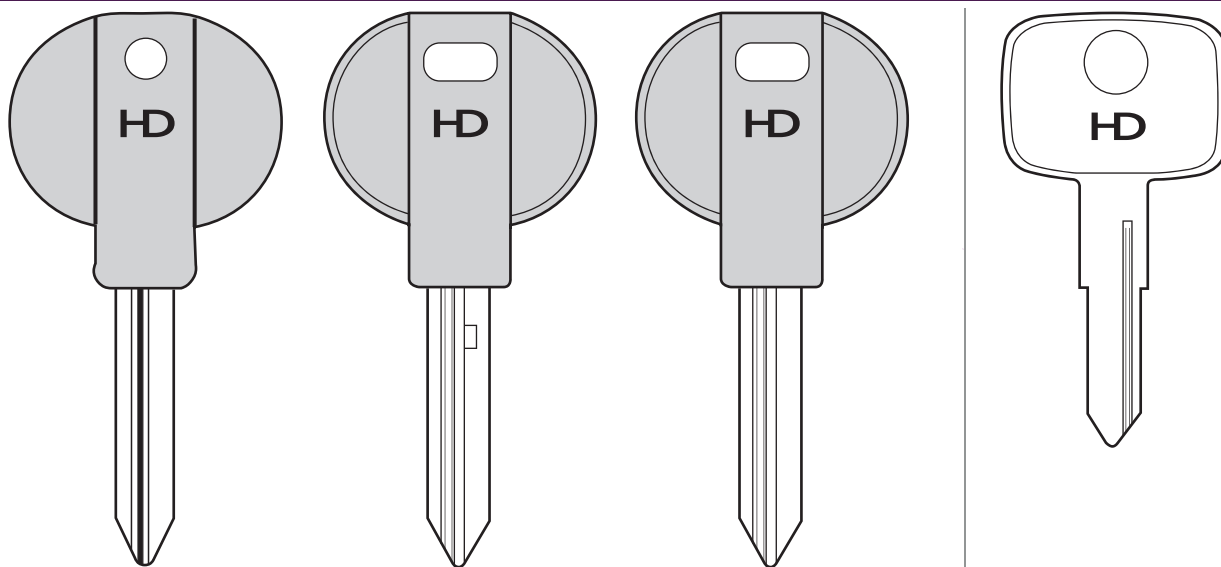

Blade length
may vary



SEX9P
CV026



SX10BP
XCV004



SX11BP
XCV013







DWO2
XC162

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL

- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI

DAEWOO

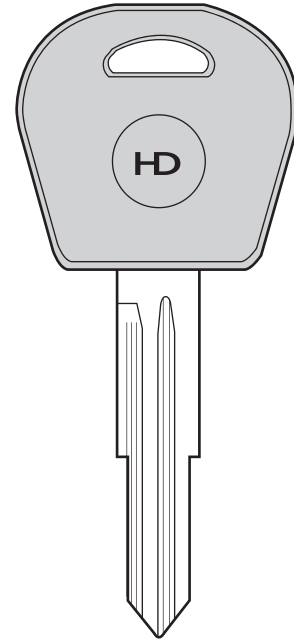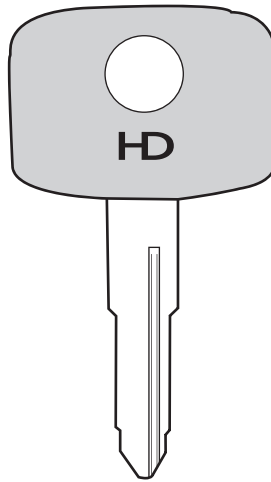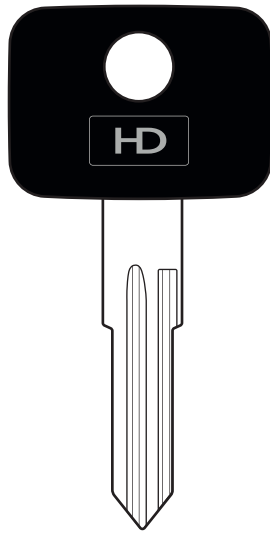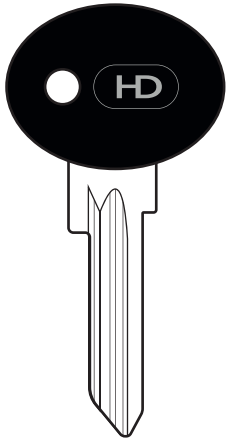

Use for C141 HF58
& XCV025 HU46PL

FR
0001-2000

S... 1-5200



D01P
PT020



HF58P
PT004







DWO1P
XPT065




DWO4RAP
XPT049

DAEWOO

DAF

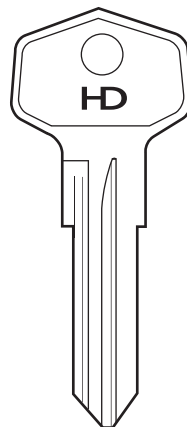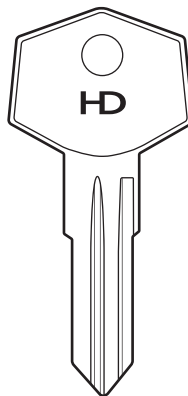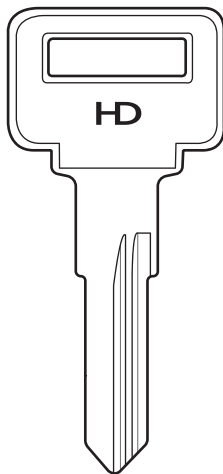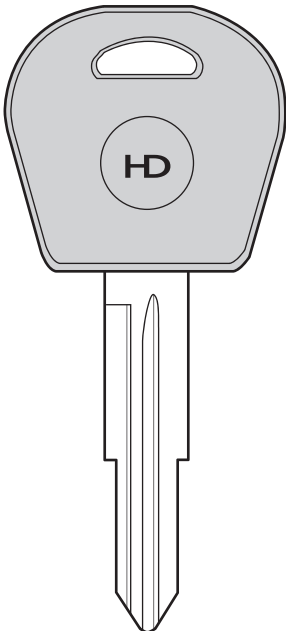

Use for
C071
TC/AK

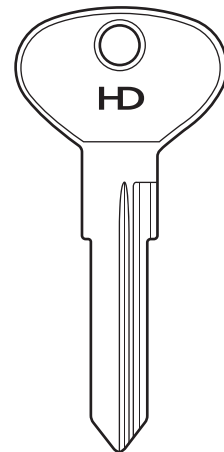

AK... 1-1000



DWO5RAP
XPT063



HF46
C160



AK3 (KA)
C161



AK
C014



CA1
C149

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS


CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

DAF

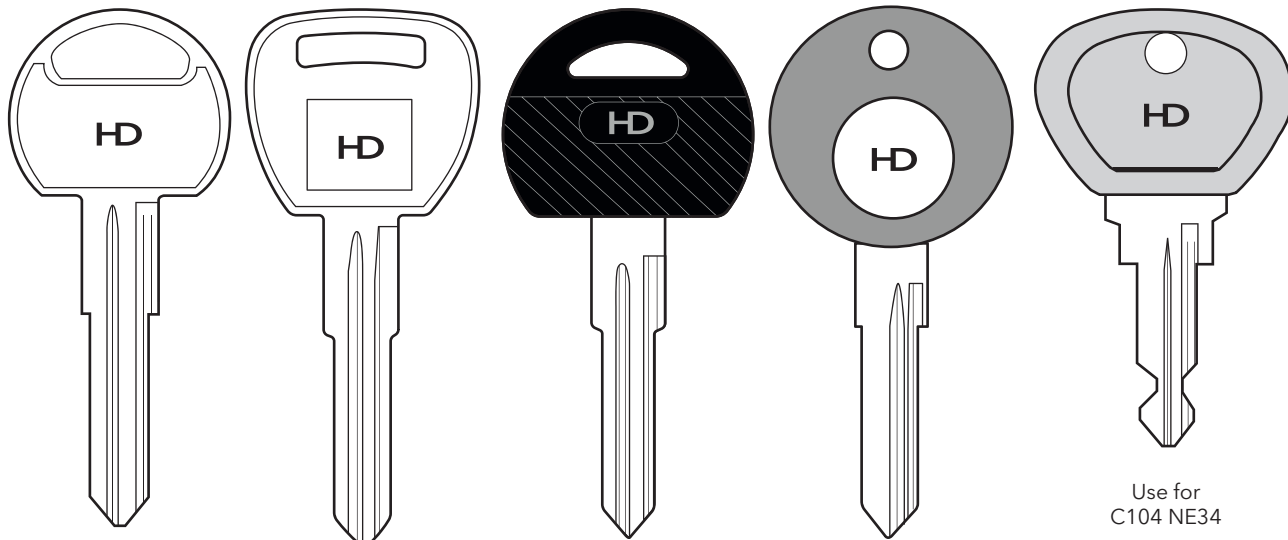

NSP... 4000-4999
7001-9000
E... 2001-3000
4001-5000

VB... 2001-2830
3001-3890
NV... 2001-2830
MD... 2001-2830
3001-3890

...A/Z B-C-D-E
1/9... A/Z
. 1/9... A/Z
B-D-E-G-H-J
1/9... A/Z
. 1/9... A/Z
E-M-N-P-R



NE38
XC040



NE48
C249



NE48P
PT016




CA1P
PT017




NE34P
PT014

DAF

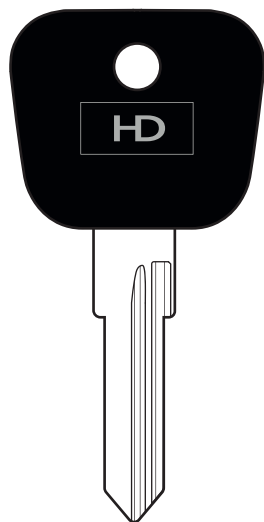


HF46P
PT002


DAIHATSU

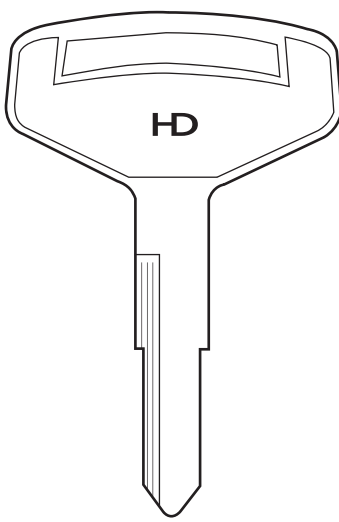

DH3R
XC119

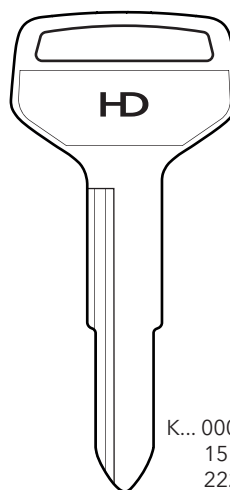

TA17
C126

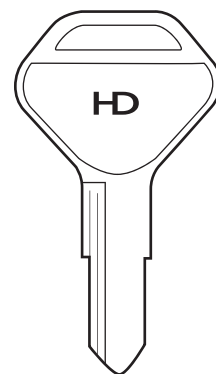

DH1
XC179

K... 0001-1400
1511-1910
2221-2620
3731-4400
5001-6368
R... 0401-0800
1112-1510
2621-3020
5001-6924
8001-9368
S... 5951-6350
7061-7460
8171-8570
9281-9680
C... 6001-7042 (ISUZU)

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL






- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VVDI

DAIHATSU

DOM

FARMA

FERRARI

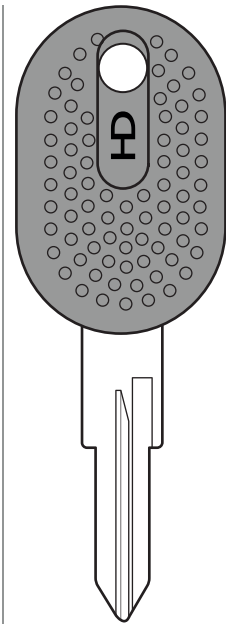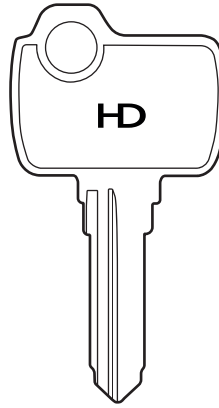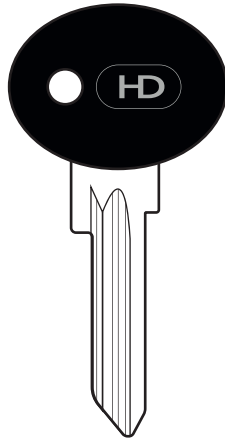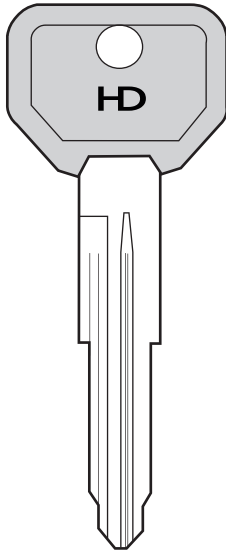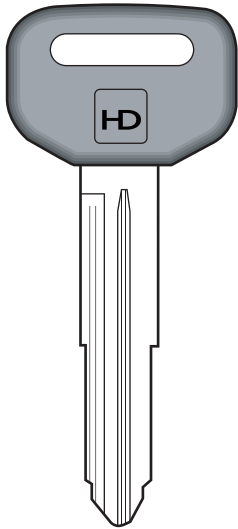

NON TRANSPONDER

Use for
C401
DH4R

Use for
C281
TT23

K... 7001-9000

FAR3
XC182

FAR3R
XC181

Use for
C060
K

K... 3301-4886
K... 7001-8092
T... 5000-6027
T... 7001-8092
S... 501-3278

DH4RP
XPT077






TT23P
PT039

DO1P
PT020

FAR4R
C239

K4P
PT007

FERRARI

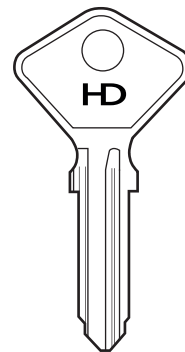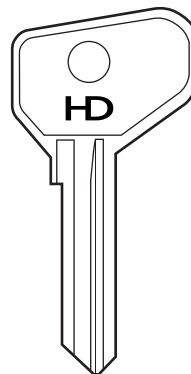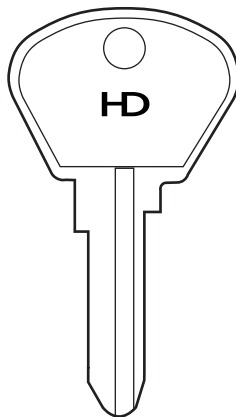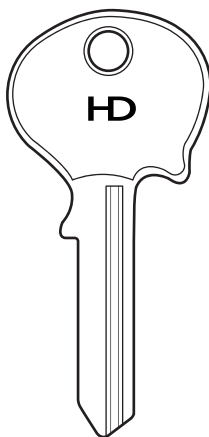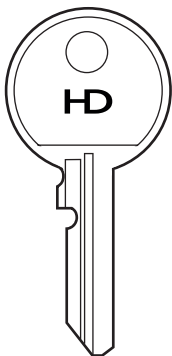

Use for
C067
SF6

6... 100-309

SF3
C004

4... 100-309

SF2
C003

8... 100-309

SF4
C005

626-750

...A
1-2-3-4-5

AZ... 1-2-3-5-7
A/Z 0-4-6-8-9

1... 501-1000

2... 100-309

FP
C022

NE7
C028

NE9
C064

SF5
C066

SF1
C002

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS


CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

FIAT/IVECO

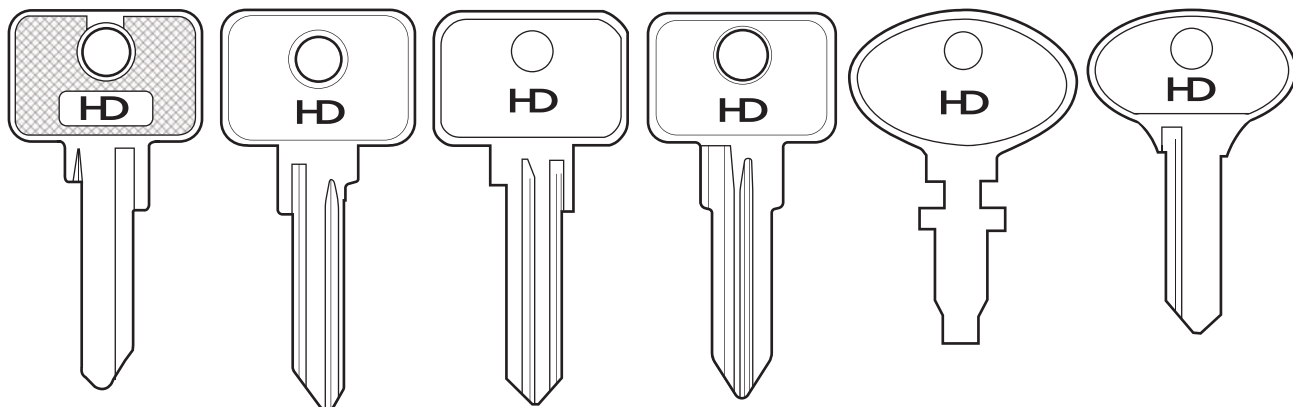

7001-9956

G...01-78



X
C068



Y
C069



FB4
C174



GT8
XC012




SFA1
XC007



635G
C410

FIAT/IVECO

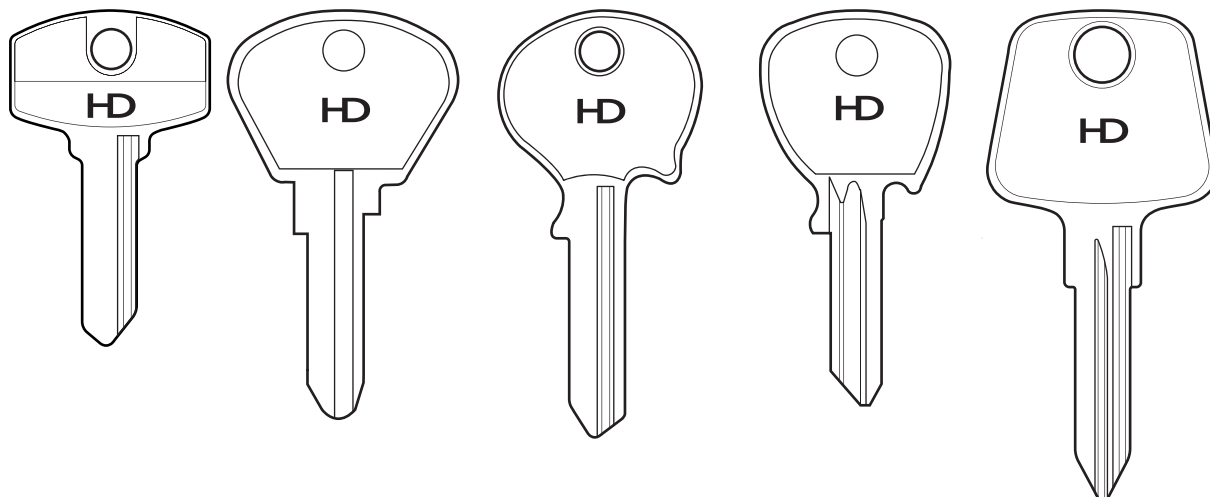

Use for C001 NE23

H... 01-78

AZ... 1-2-3-5-7-
A/Z 0-4-6-8-9

...A
1-2-3-4-5

0001-2000



63SH
C411



NE9
C064



NE7
C028




L
C061



SIP14
C317

FIAT/IVECO

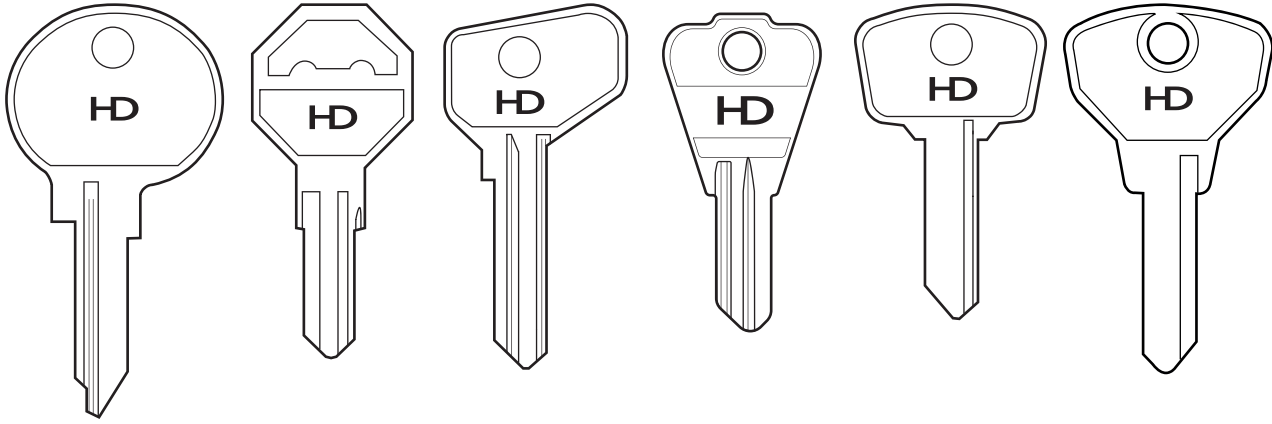

Use for
C116
NE20

Use for
XC289
SIP9R

4-6-8-9

Z... 100-309

E... 01-78

F..



R63Q
C121



FA3R
XC008



FA1
C170



R63SP
C413




63SP
C412



SIP10R
XC293

FIAT/IVECO

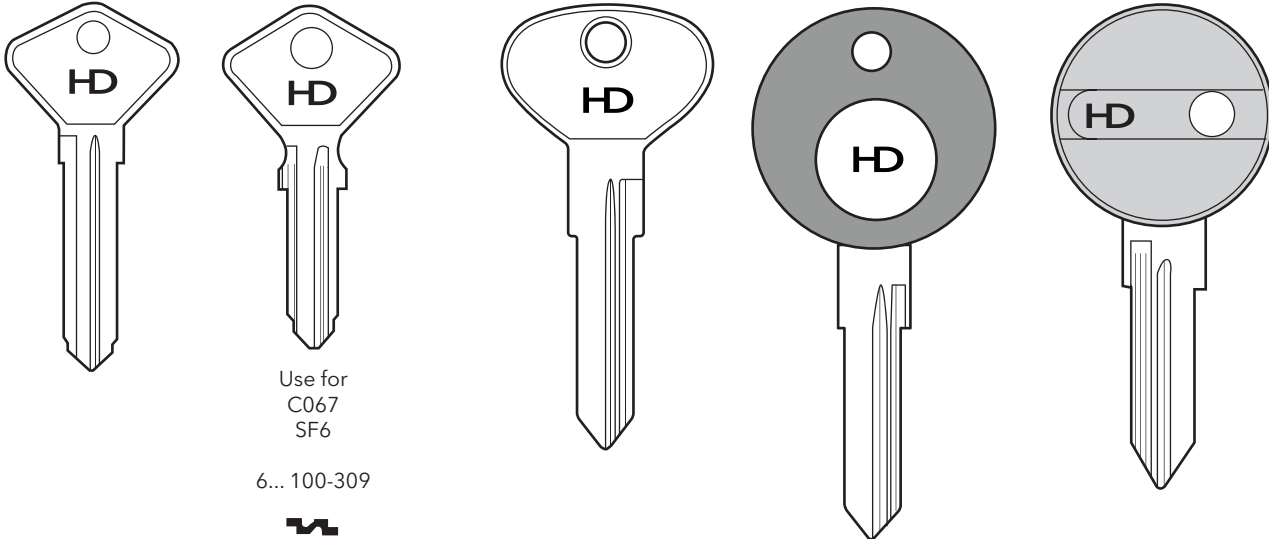

Use for
C067
SF6

6... 100-309



SF3
C004

4... 100-309 8... 100-309



SF2
C003



SF4
C005

VB... 2001-2830
3001-3890
NV... 2001-2830
3001-3890
MD... 2001-2830
3001-3890

VB... 2001-2830
3001-3890
NV... 2001-2830
3001-3890
MD... 2001-2830
3001-3890

2... 100-309



AF3A
XC058



SF1
C002



CA1
C149



CA1P
PT017



GT11CP
XPT040

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS






CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

FIAT/IVECO

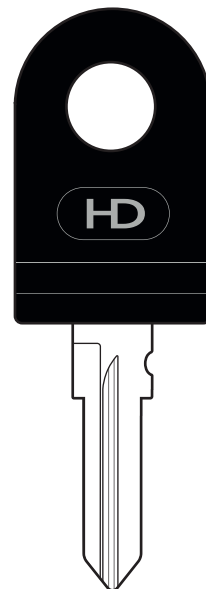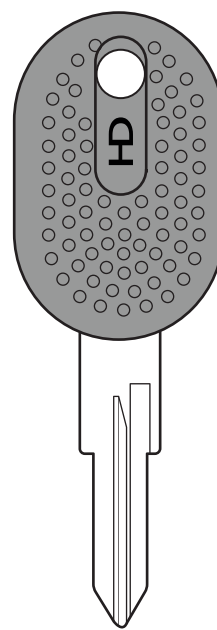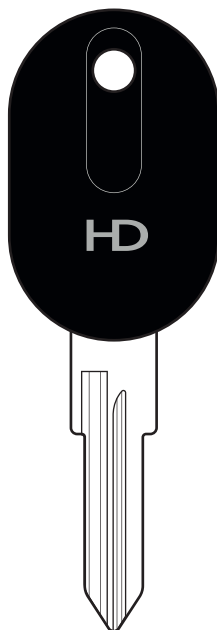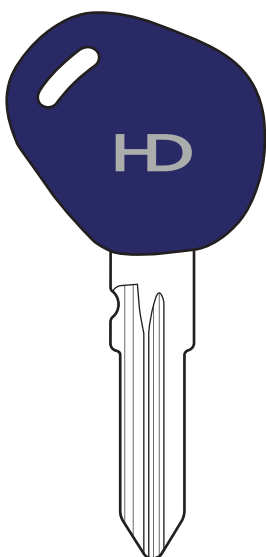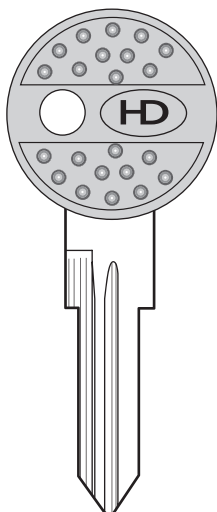

Use for
CO63 N
6001-7000

K... 3301-4886
K... 7001-8092
T... 5000-6027
T... 7001-8092
S... 501-3278

Use for
CO59 G
G-Z... 7001-9956


GT17RCP
XPT037







ARM10P1
PT056


N6P
PT008


K4P
PT007


G4P
PT006

FIAT/IVECO

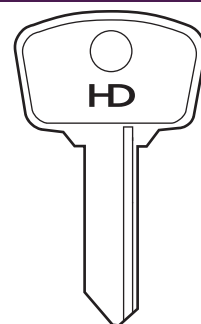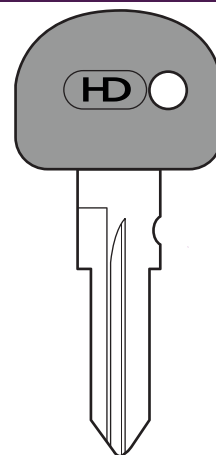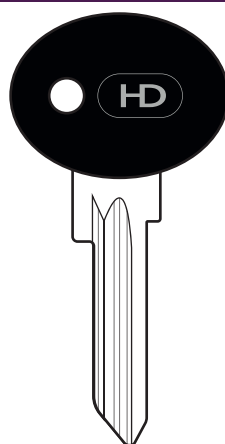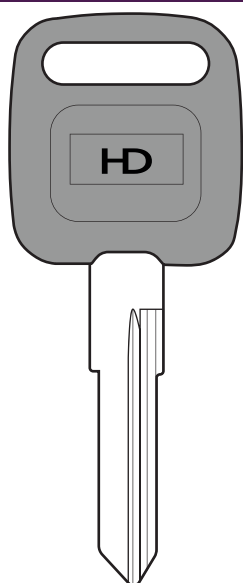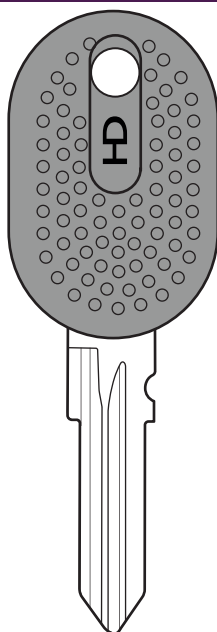

Use for
C246
ARM10

W... 0001-9640

HV...1-9282 VB. VH

FR... 1-2000
2001-3040
4001-6000

F..

Use for
XC289
SIP9R

F..


ARM10P
PT023


WT9P
PT018


DO1P
PT020







GT5BP
XPT078


63SP
C412

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL
- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI

FIAT/IVECO

FORD

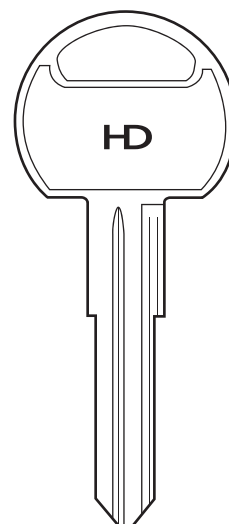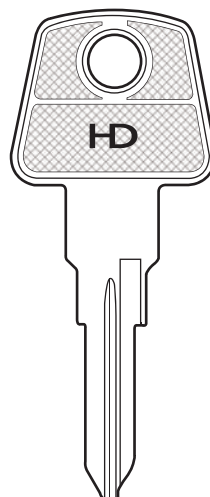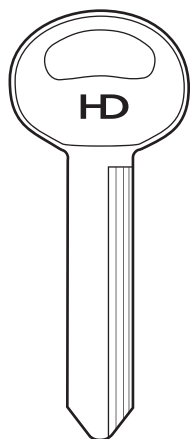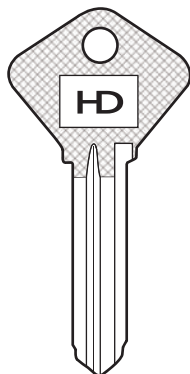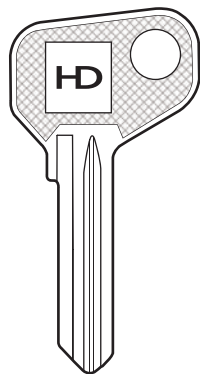

FB... 1-1863
PB... 1-1863



SML1
XC248



AF3B
XC009



S1167FD
C377









SIP13
XC173



NE38
XC040

FORD

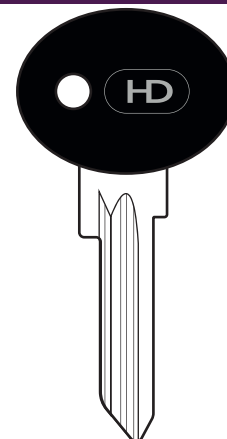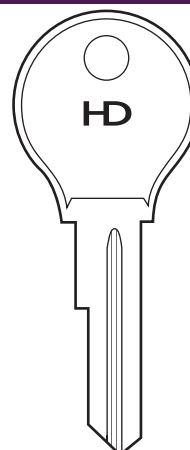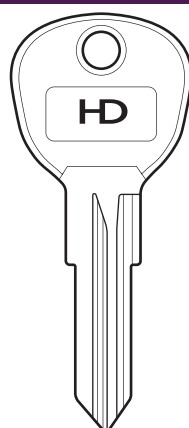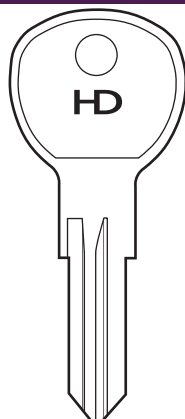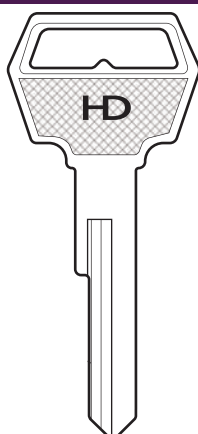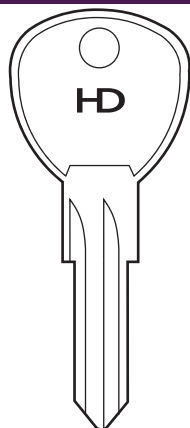

PRR ...
001-400



FOT5R
XC129



FO3
XC240



H62FD
C341



HR62FD
C342



HU1R
XC060



DO1P
PT020

Use for
C324
YM26
ER... 1-195
101-295
501-695

Use for
C154
HF36
FB... 1-210
PO... 501-695
PO... 1-295

Use for
C020
FH
1-3948

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS


CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

FORD

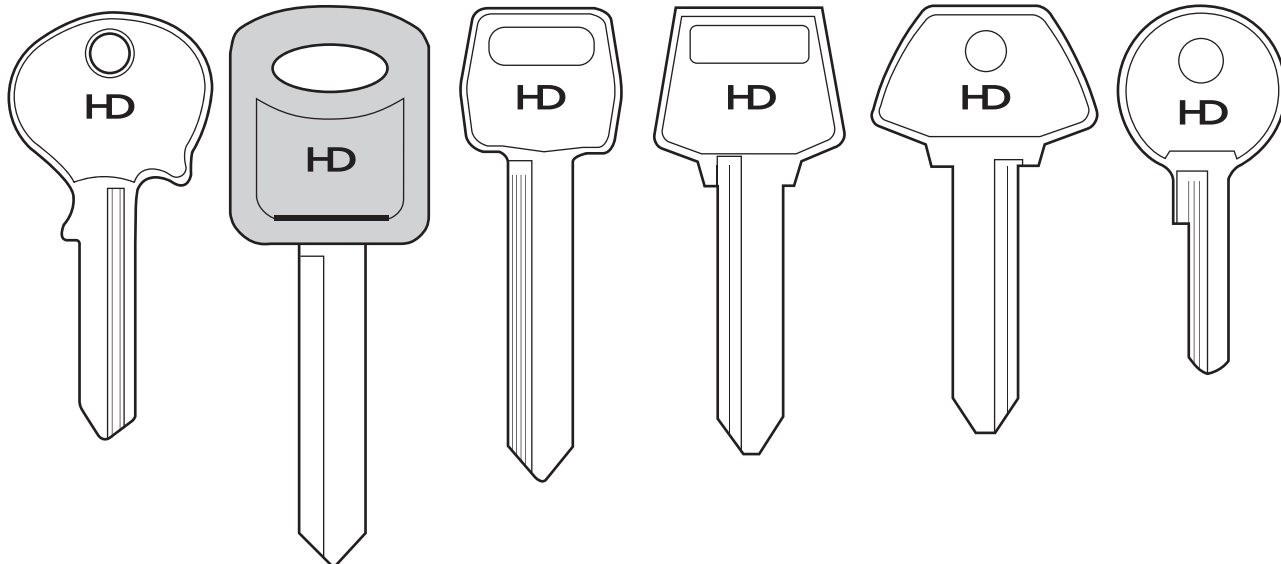

Use for
C376
1167FD

AF... 1-2700
FA... 1-1863
PA...

A-B-C-D-E-
101-291, 501-579
101-291, 501-579

Head shape
may vary

Head shape
may vary

FA... 000-1863

FB... 000-1863

A-B-C-D
101-579



NE7
C028



FO30BP
PT058



1184FD
C378



1127TB
C372




S1127FD
C373



BA7R
XC163

FORD

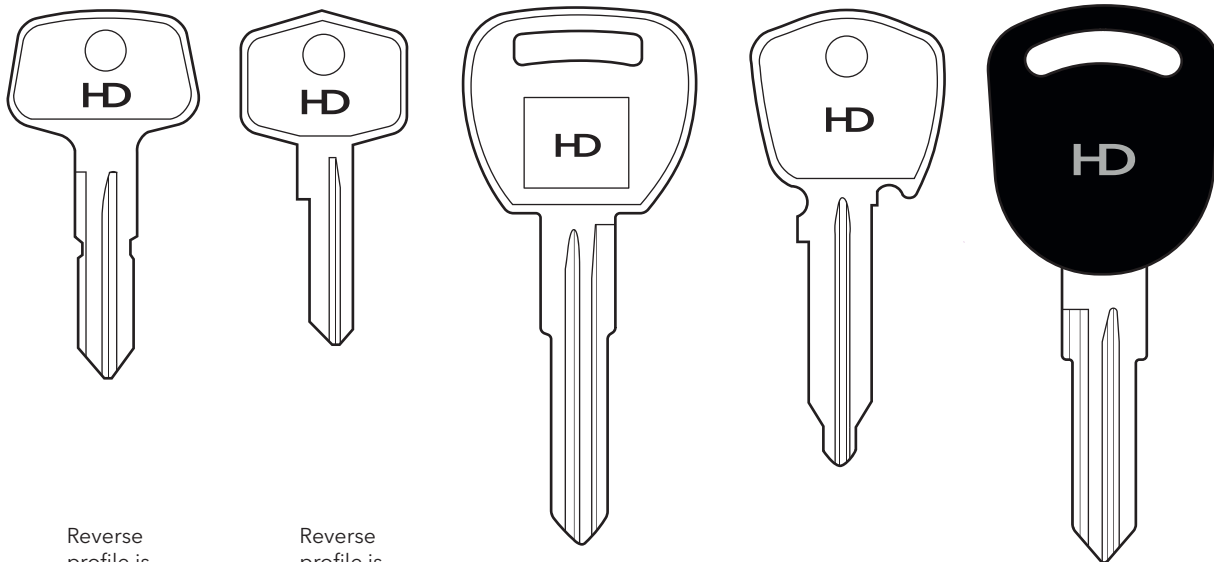

Reverse
profile is
XC003
BT2R

Reverse
profile is
XC115
UNI16R

124-197
G... 06-10
OGI-1GO
A... 101-125
501-598
701-790

001-099
876-955

Use for
C073
TC/TX

1-1859



BLA2
C169



FS
C024



NE48
C249



KL2
C018




TC/RH
C072

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL

- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI

FORD

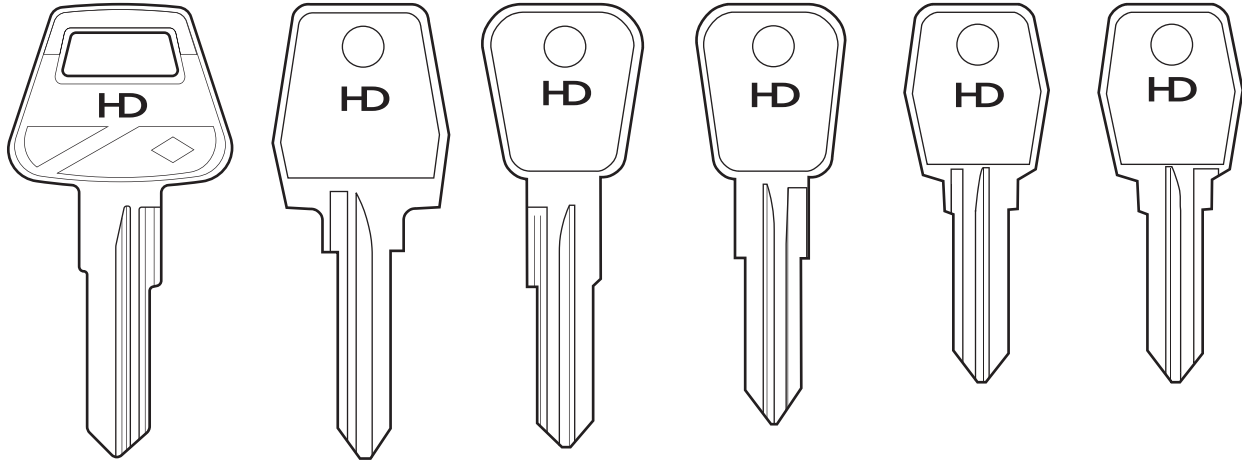

NON TRANSPONDER

1001-1999
2000-2999



WB2
C075



LF29
C271



FT / FV
C070



YM20
C343



FT / BC
C038



TF
C074


101-225

ER... 1-195
101-295
501-695

FB... 1-210
PO... 501-695
PO... 1-295

1001-

FORD

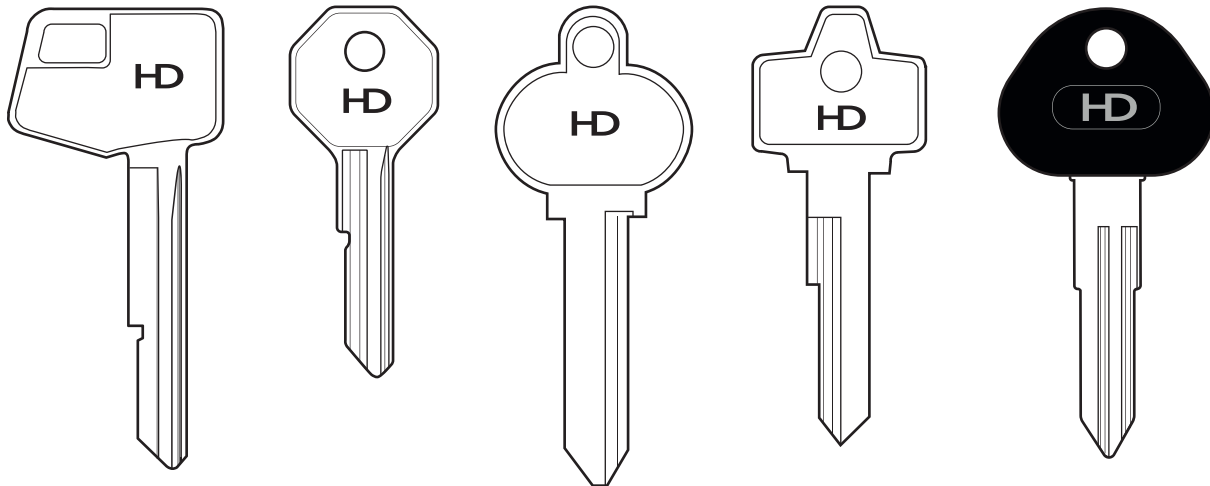

GM9
XC195



H1098A
C354



S1127ME
C374



1127MU
C359



DT23P
PT022

FB... 000-1863

Use for
C375
S1127MU

FE... 1-1000

Use for
C056
DT23

X... 001-8000
8001-9000

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS


CHIPS

KEYLINE
HORSESHOES


KEY DIY

XHORSE
& VDI


FORD

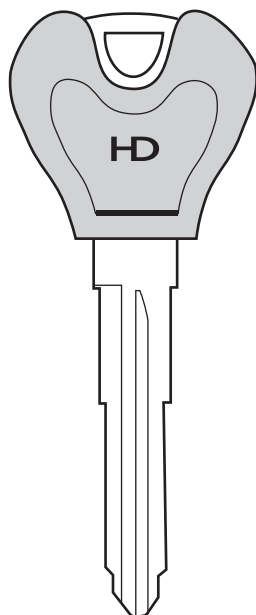


Use for
C362
FO32R

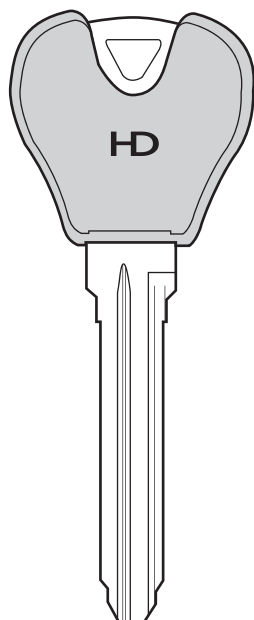


FO32RAP
PT057

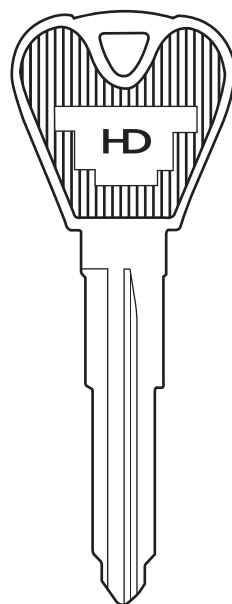

FO34AP
XPT006

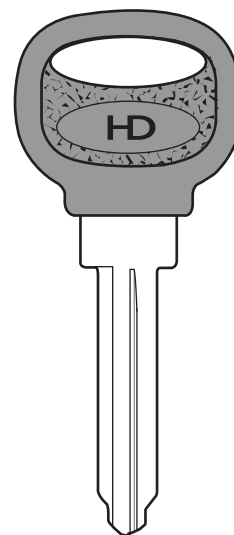

FO31R
C331

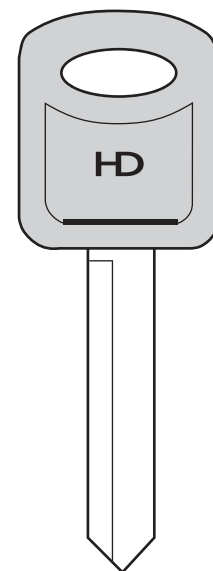


FO22RP
XPT044

Use for
C363
FO30

A-B-C-D-E-
101-291, 501-579


FO30BP
PT058

FORD

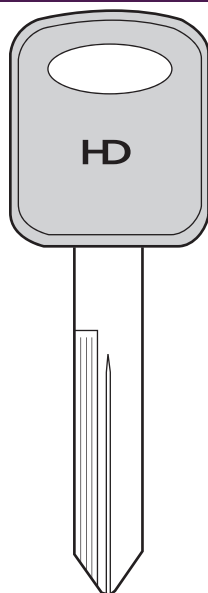

Head and
Blade length
may differ


FO40RBP
XPT031

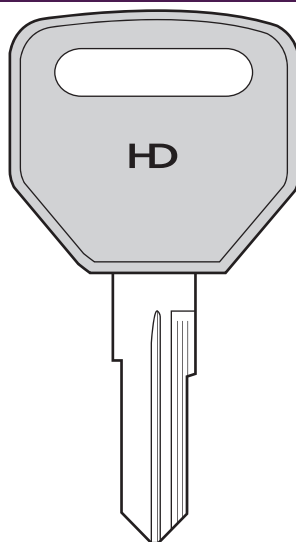


Use for
C017
WB1

Use for
C287
LF19

LF21RCP
PT068

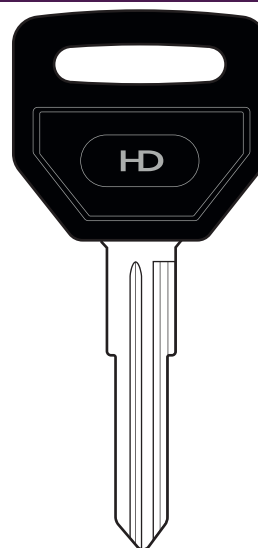

NE38CP
XPT041

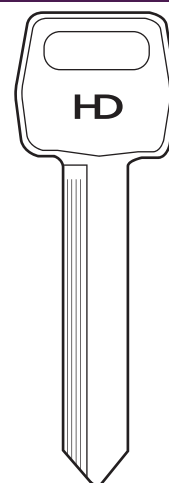


Use for
XPT104
FO18P

1184FD
C378

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL

- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI

FORD

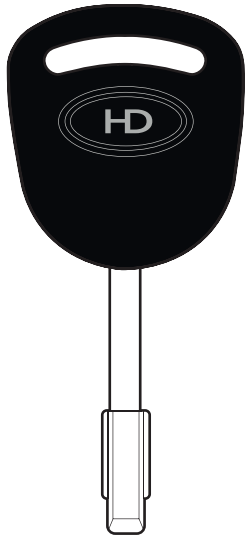

Use for
XCV010
FO21PL



NICKEL
SILVER


FAV2N
CV002

T...1-2-3-4



STEEL


FAV2S
CV025

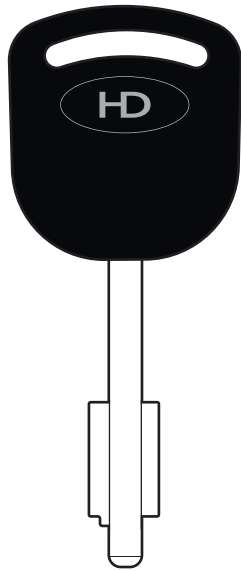

C...1-2-3-4-5




FAV1 FD1PS
CV001

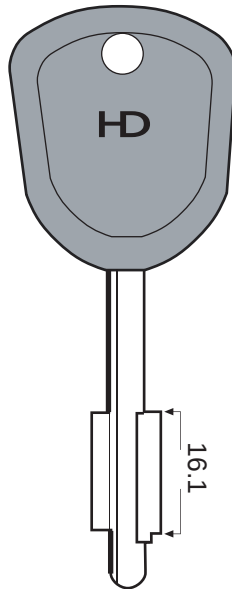

C...1-2-3-4-5



FO20P
CV047

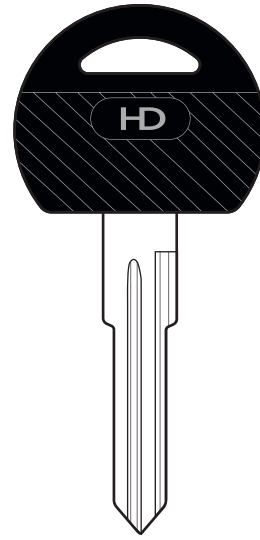


NSP... 4000-4999
7001-9000
E... 2001-3000
4001-5000



NE48P
PT016

FORD

GENERAL MOTORS

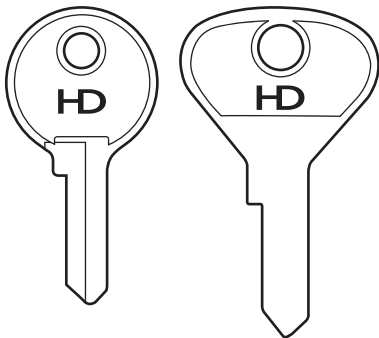


A....
8001-9400



62VC
XC061




ST9
C180

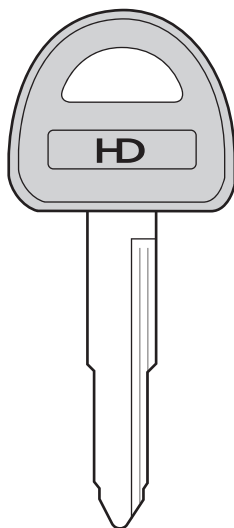

Use for
XPT019
GM23P




TOY4RCP
XPT014

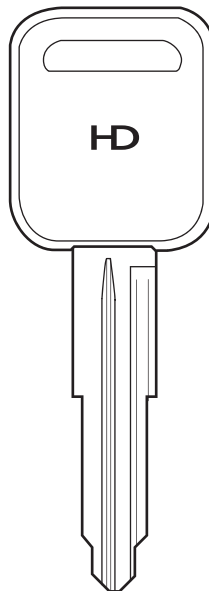

A....
8001-9400




GM11P
XPT002

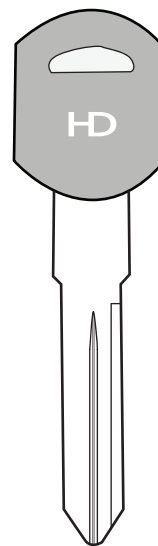

...AA...-7N45
.....SS000A-S711K



GM39EP
XPT124

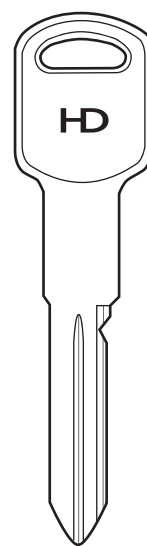

GM37
XC202

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS


CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

GENERAL MOTORS

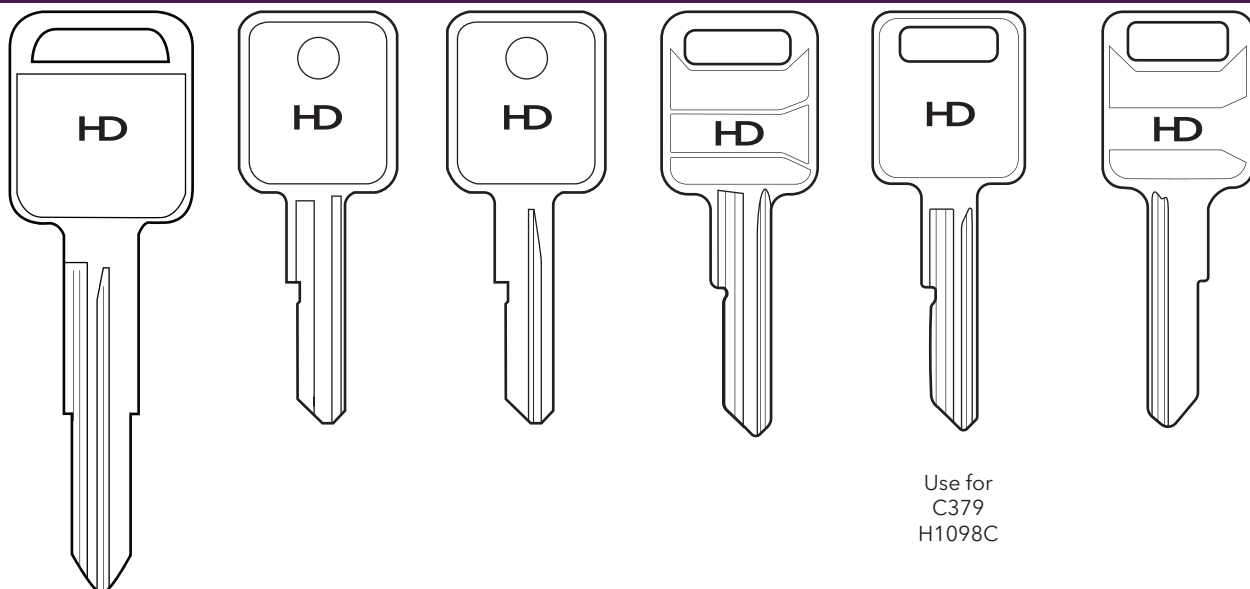

Use for
C379
H1098C

....
8000-9499

....
225-814

.A... (A) 0.00-9.99
.B... (A) 0.00-9.99
.V... (A) 0.00-9.99
.V... (A) 00.0-99.9
.W... (A) 0.00-9.99
.W... (A) 00.0-99.9

.A... (C) 0.00-9.99
.B... (C) 0.00-9.99
.N... (C) 0.00-9.99
.N... (C) 00.0-99.9
.P... (C) 0.00-9.99
.P... (C) 00.0-99.9

.J... (E) 0.00-9.99
.J... (E) 00.0-99.9
.K... (E) 0.00-9.99
.K... (E) 00.0-99.9
N... (E) 000-999



GM24R
XC206



BA2
XC001



BA2R
XC002



P1098A
C333




P1098C
C382



P1098E
C383

GENERAL MOTORS

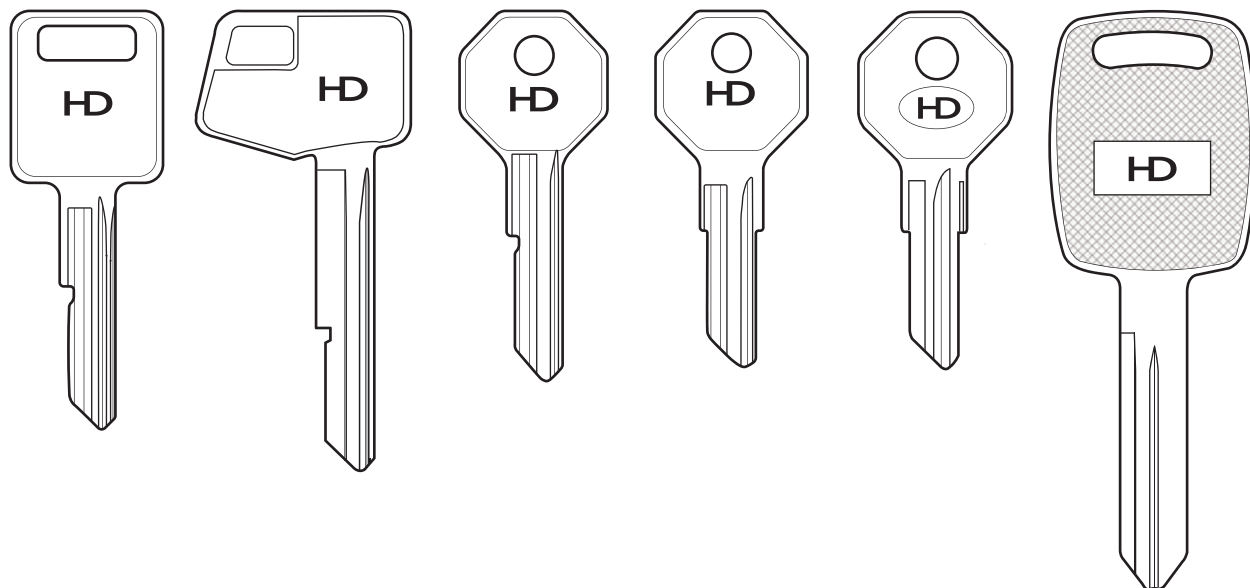

E... (J) 000-999
.E... (J) 0.00-9.99
.E... (J) 00.0-99.9
F... (J) 000-999
.F... (J) 0.00-9.99
.F... (J) 00.0-99.9

B... 250-499
C... 1251-1700
CB... 250-499
DC-BC... 250-499



P1098J
C334



GM9
XC195



H1098A
C354



H1098M
C355




GM33R
XC081



GM25R
XC011

GENERAL MOTORS

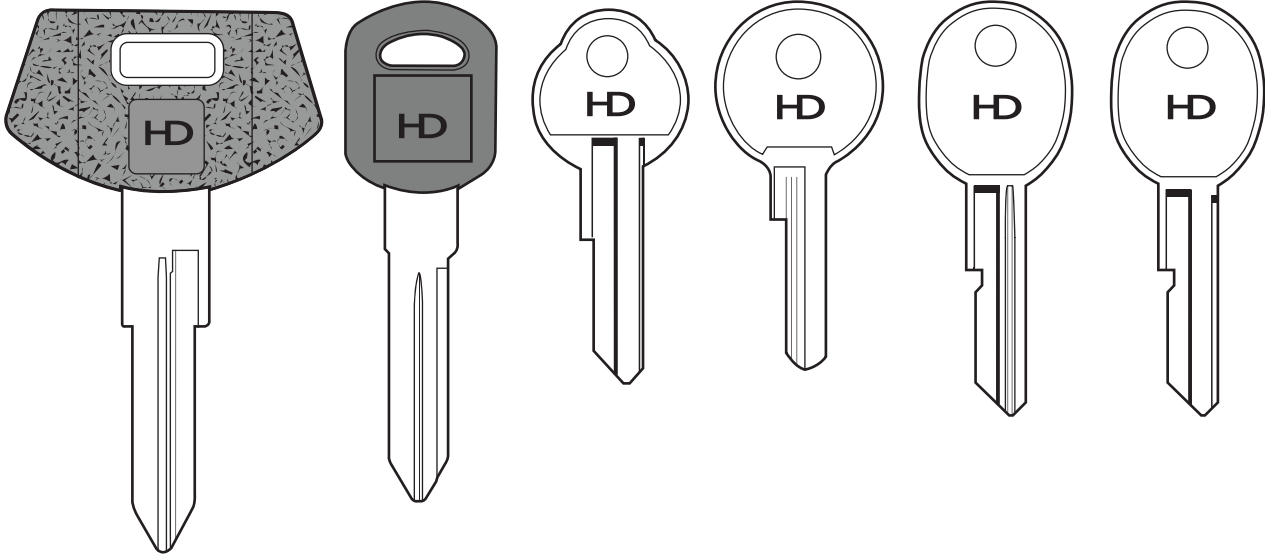

..C. (D) 00.0-99.9
 ..D. (D) 00.0-99.9
 ..R. (D) 0.00-9.99
 ..S. (D) 0.00-9.99
 ..T. (D) 0.00-9.99
 ..U. (D) 00.0-99.9

FD-FH-FJ
 FK-FV-FW
 FX-FY-NH
 NK-NW-NY
 HY-W
 000-999

.C.. (B) 0.00-9.99
 .D.. (B) 0.00-9.99
 .X.. (B) 0.00-9.99
 .Y.. (B) 0.00-9.99
 ..Y. (B) 00.0-99.9

..C. (D) 00.0-99.9
 ..D. (D) 00.0-99.9
 ..R. (D) 0.00-9.99
 ..S. (D) 0.00-9.99
 ..T. (D) 0.00-9.99
 ..U. (D) 00.0-99.9



GM29P
XPT072



GM40EP
XPT098



O1098D
C381



BA7R
XC163




S1098B
C335



S1098D
C356

GENERAL MOTORS

GHE

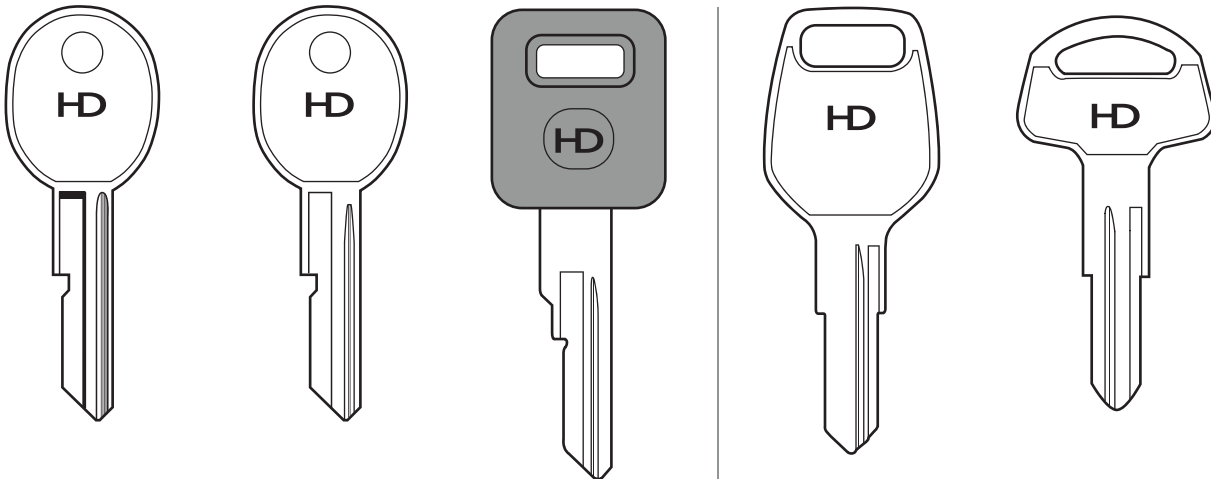

..L.. (H) 0.00-9.99
 ..L. (H) 00.0-99.9
 ..M.. (H) 0.00-9.99
 ..M. (H) 00.0-99.9
 S... (H) 000-999
 U... (H) 000-999

G... (K) 000-999
 ..G.. (K) 00.0-99.9
 ..G. (K) 00.0-99.9
 H... (K) 000-999
 ..H.. (K) 0.00-9.99
 ..H. (K) 00.0-99.9



S1098H
C357



S1098K
C358



GM26R
XC282



GH4P
XC277



GHE5
XC252

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS

CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VWDI

NON TRANSPONDER


- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL
- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI

GIOBERT



FI-16C1
XC295

HAMA

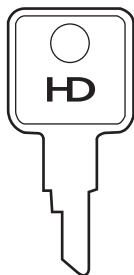

...751-762




HM1R
XC123

...778-789




HM1
XC124

HONDA

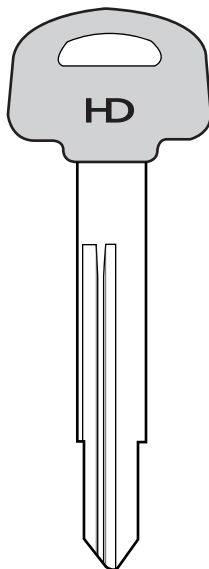


HON68RBP
XPT144

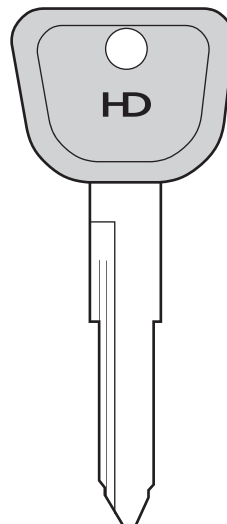

Use for
C079
HD70


HD70P
PT011

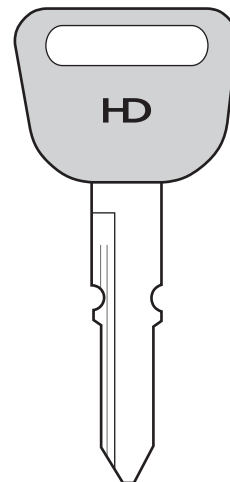


HD71P
PT012

... 3001-4881

HONDA

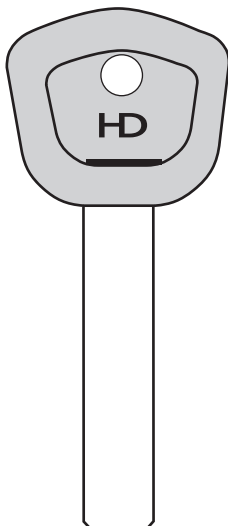


HON60AP
XCV001

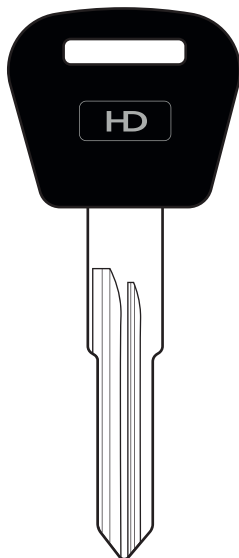


Use for
C261
NE51



NE51P
PT036

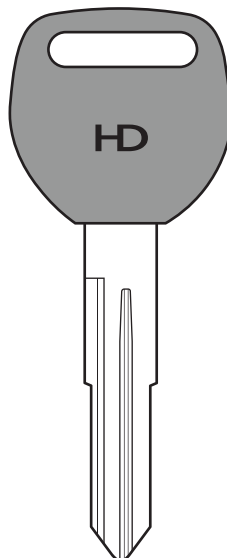


HON51RP
XPT067

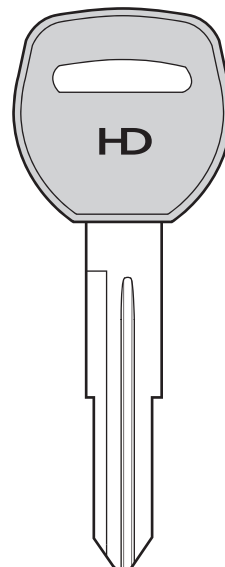

Use for
C260
HA45



HON58RDP
PT076

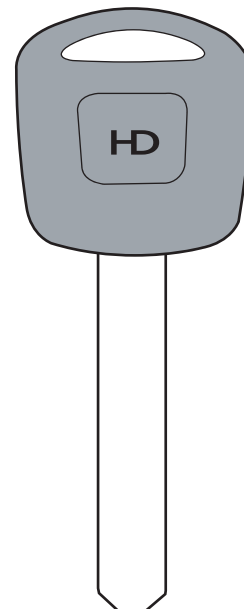


Valet Key





HON66GP
XCV030

HONDA

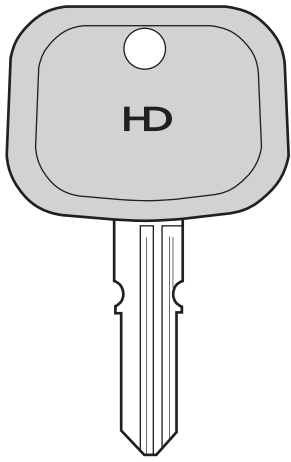



Use for
C078
HD55


HD55P
PT010

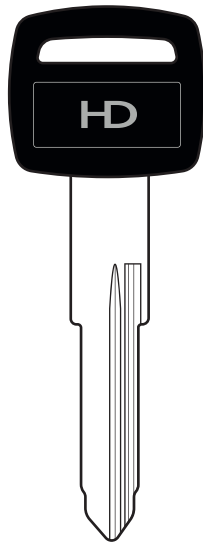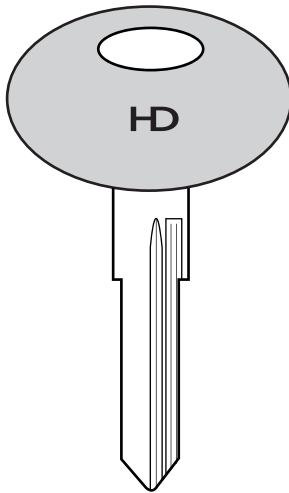

Use for
XC095
S67K

A/B.....
1-2-3-4

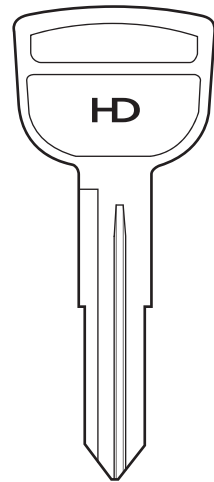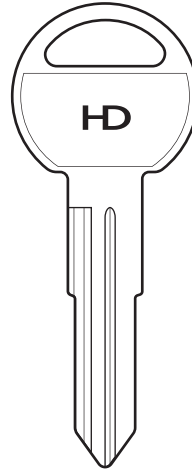


HD54P
PT009







VO9DP
XPT089


VO9BP
XPT024


HON44R
XC015


HON45R
XC016

HONDA

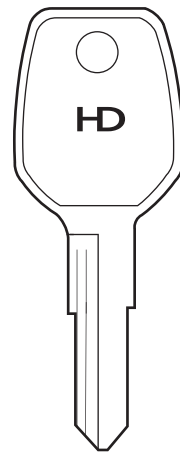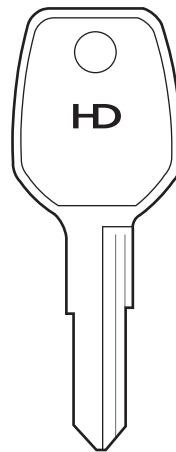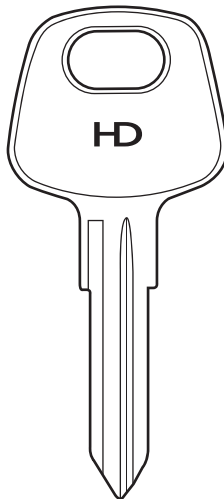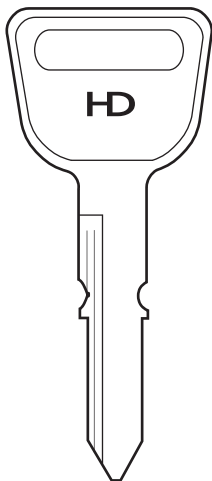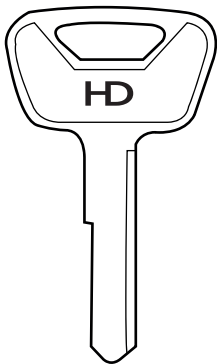

7
34658-66541

1... 001-700

... 200-4949

... 1-2-3-4

... 1-2-3-4


HON20
XC270


HD71
C080


NE21
C031


HD44
C076


HON23
XC183

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS


CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

HUF

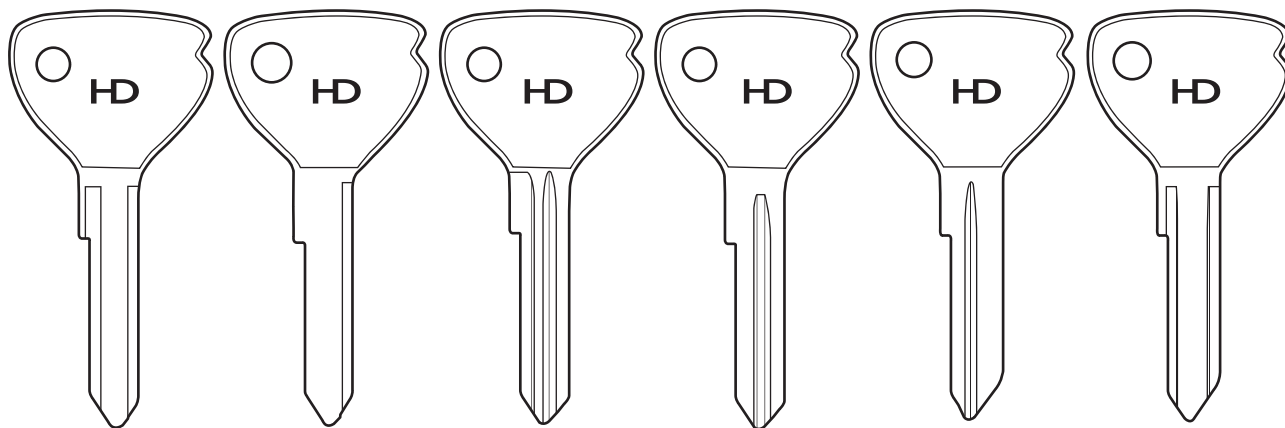

YM6

C195



YM7

C197



YM8

C198



YM9

C199



HF10


C200



HF11

C202

HUF

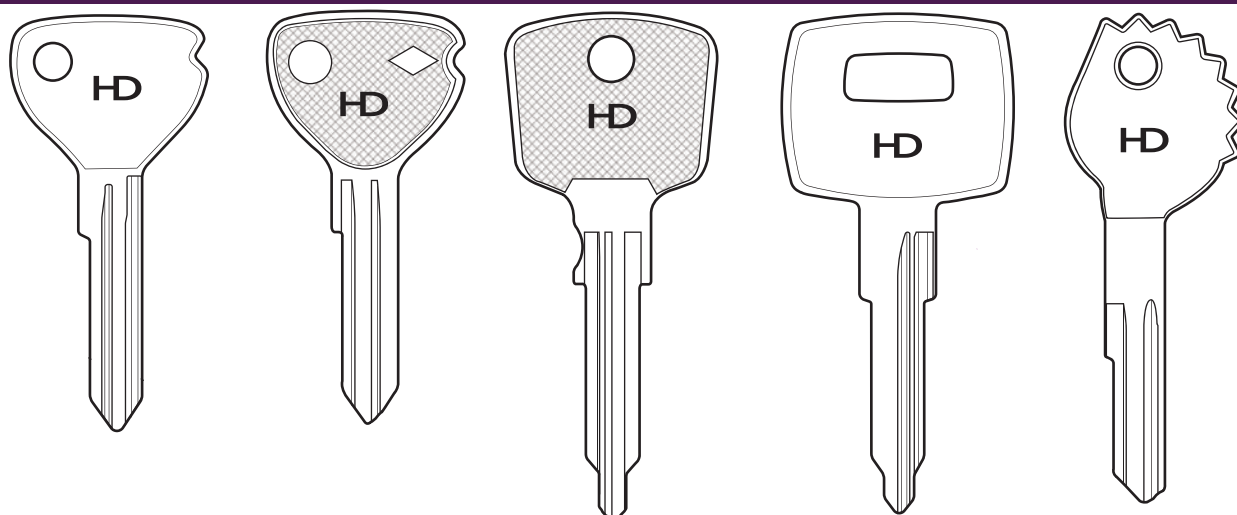

YM21

C209



YM22

C211



HF31

C219



HF37

C220




SPR1

XC088

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL
- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI

HUF

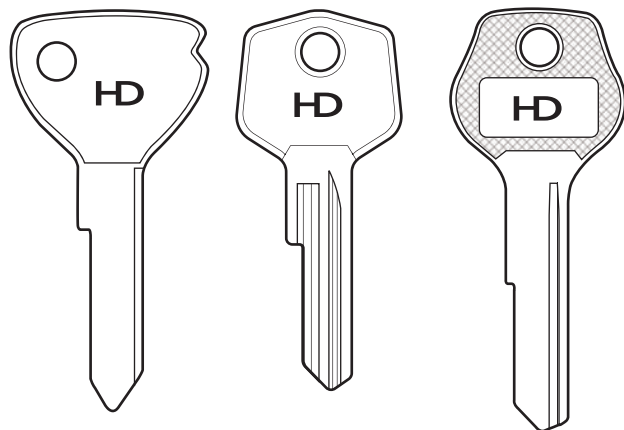


UR62VP
C231

HU14R
XC238

HU15R
XC266

HYUNDAI

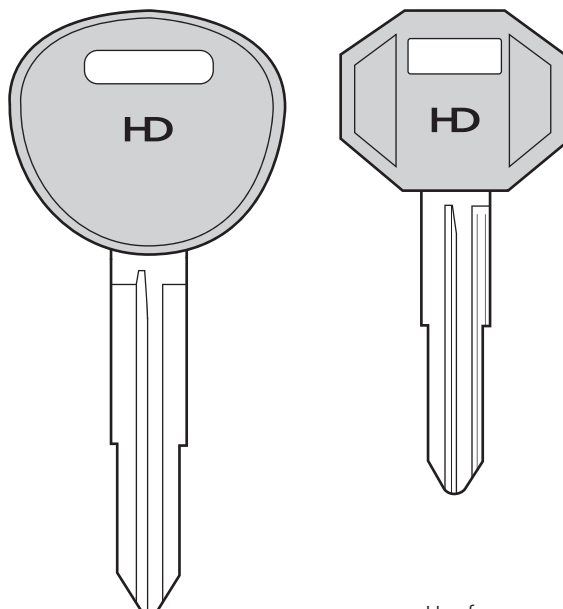


Use for
XPT073
HYN13BP

HYN10BP
PT051

HYN9P
XPT026

HYUNDAI

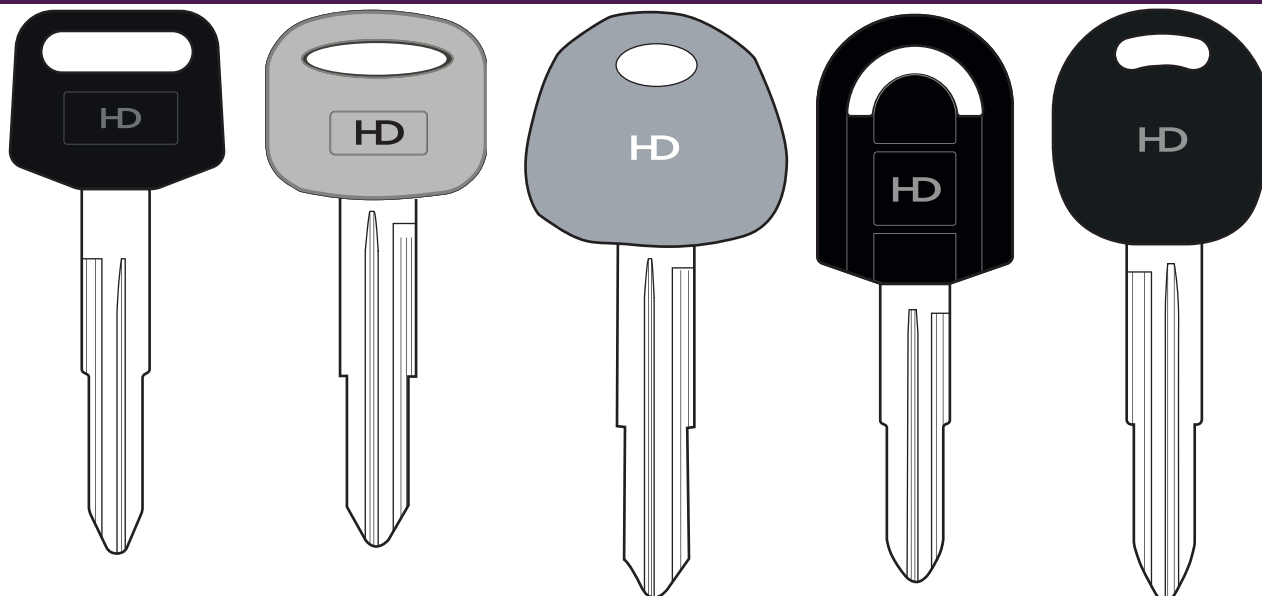

Use for
C327 HY6

x.... 1-2000
.....8001-900

T....
1-1000

T....
1-1000

X.Y...
001-1000

HY2P HYN2RP
XPT108

HY6P
XPT109

HYN11CP
XPT121

HYN3P
PT064

HYN7RAP
XPT061

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS






CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

HYUNDAI

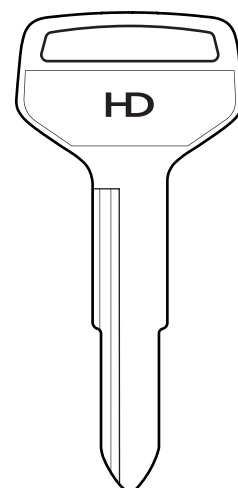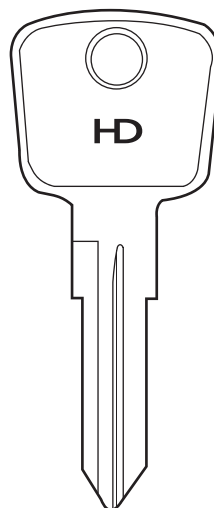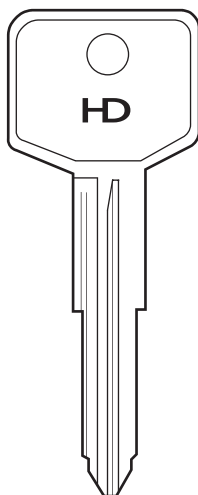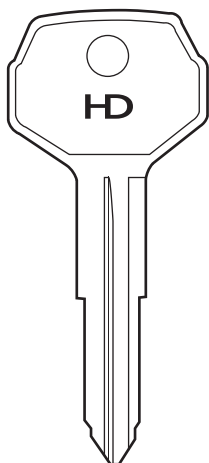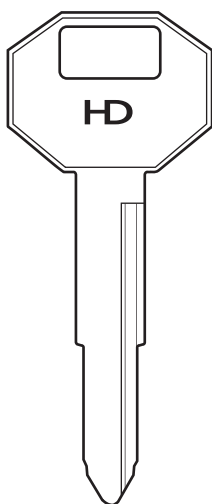

H...
0001-0400
2221-2620
4441-4640
4641-5143
E...
2001-3000

Y... 1001-2000

X1-1000

3001-4000



MS20
C093



HYN1
C305



HY2S
C278








HMC1
XC134



TA17
C126

HYUNDAI

ILMA FABBRI

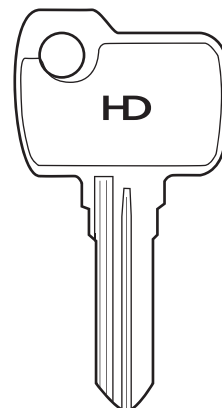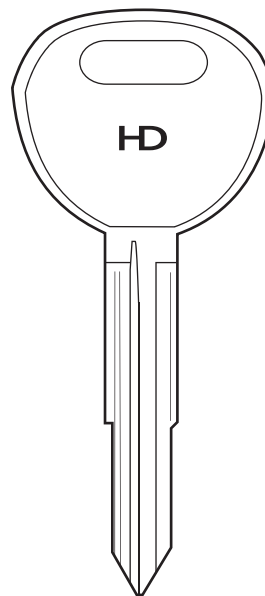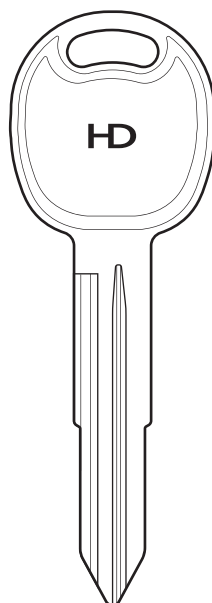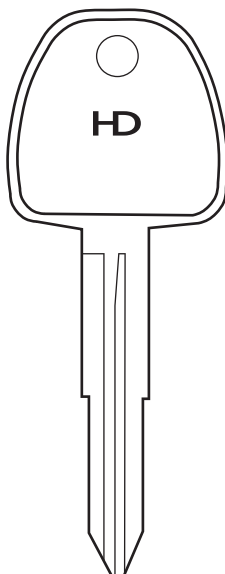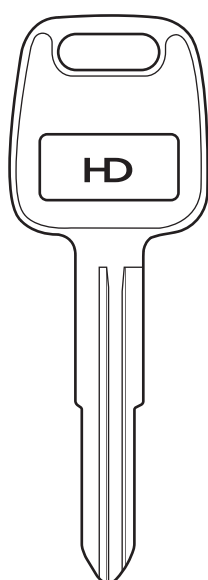

Y1001-2000

X1001-2000



HYN4
C307



HYN5R
C326



HYN7R
C402



HYN10
C403




ILF1R
XC284

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL


- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VVDI

ISUZU

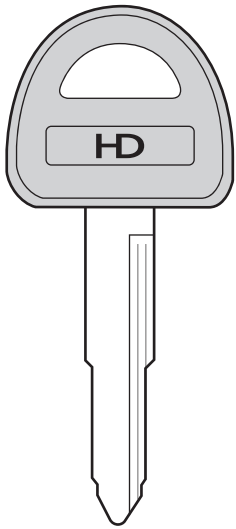


Use for
XPT019
GM23P

TOY4RCP
XPT014

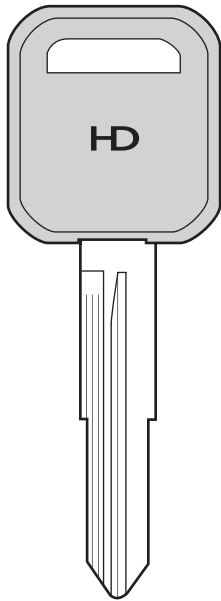


D....
4001-6000

GM24RP
XPT113

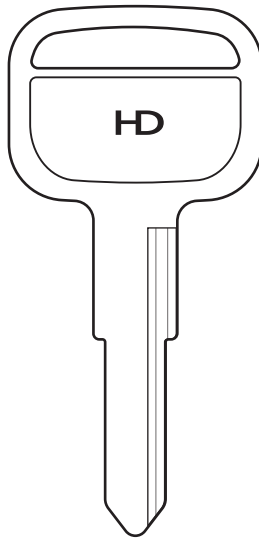


A8001-9400

ISU2
C308

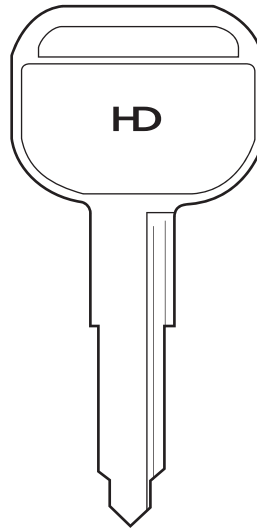


ISU3
XC025

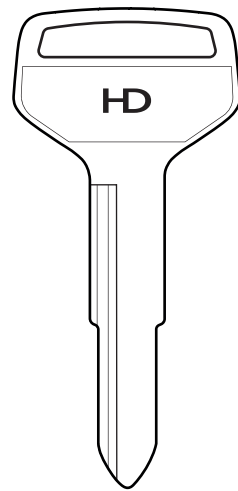

C
6001-7042
U
3001-4000
7001-8200
Z
1-1000
1001-2000
3001-4000


TA17
C126

ISUZU

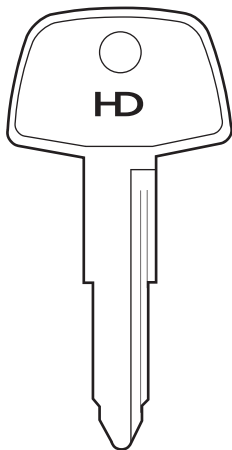


H... 0001-0400
2221-2620
4441-5143

MS12
C262

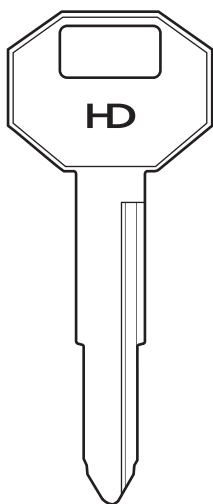


H...
0001-0400
2221-2620
4441-4640
4641-5143
E...
2001-3000


MS20
C093

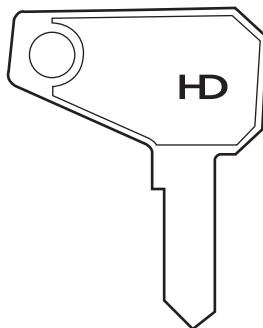

ISU1
XC023

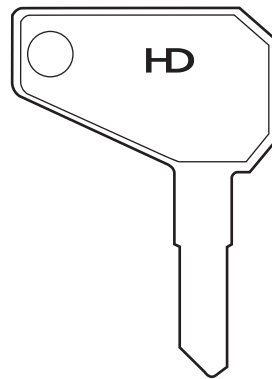

ISU4
XC146

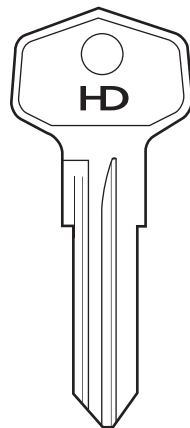

Use for
C071
TC/AK

AK... 1-100






AK
C014

NON TRANSPONDER



NON
TRANSPONDERS
PETROL CAP
PODS & INSERTS
BLADES &
HORSESHOES
REMOTE KEY SHELLS
CHIPS
KEYLINE
HORSESHOES
KEY DIY
XHORSE
& VDI

JAGUAR

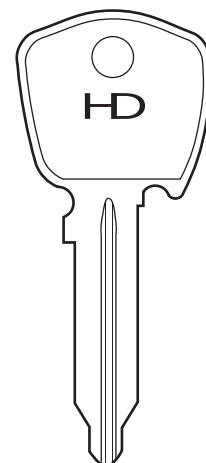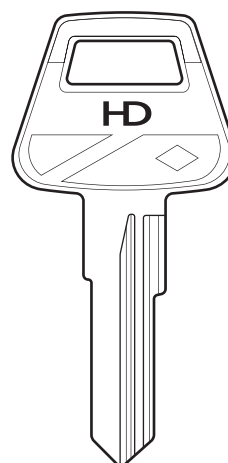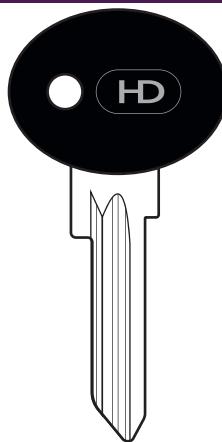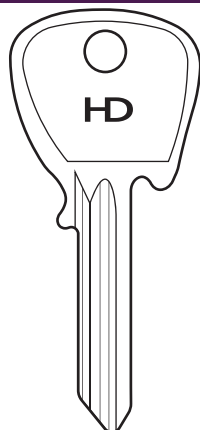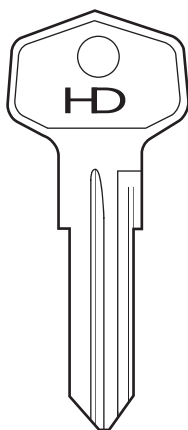

Use for
C037 DM5
& C020 FH

FR... 1-2000
2001-3040
4001-6000

JC... 1-854



JC
C025



DM5
C037



DO1P
PT020



WB2
C075








KL2
C018

JAGUAR

JEEP

KIA

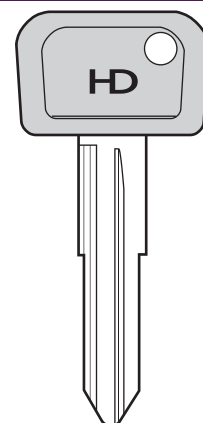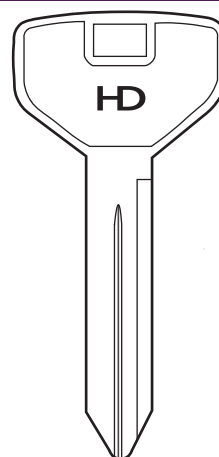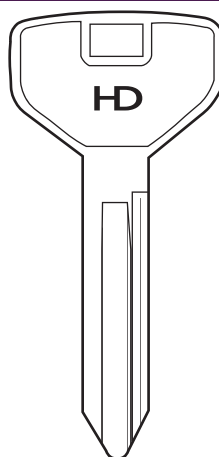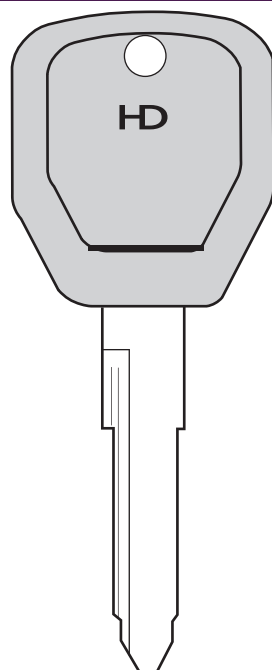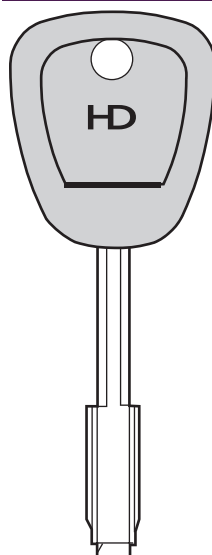

T... 1-2-3

K001-1005

J... 1-3580

L... 1-3580

Y7001-8200



TIB1P
CV020



WAS13RAP
PT055



P1793
C366



P1794
C367








KIA1RP
PT046

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL
- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI

KIA

KOLB

LADA

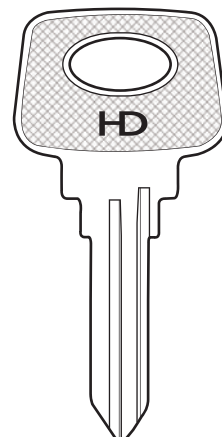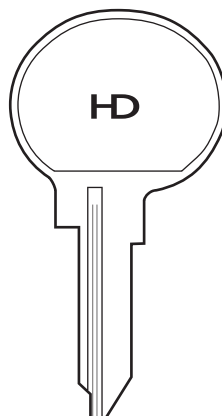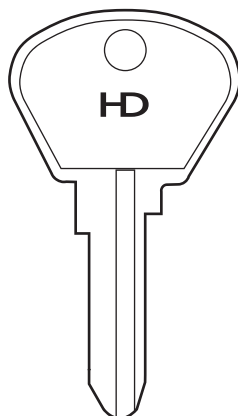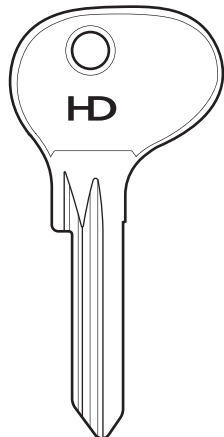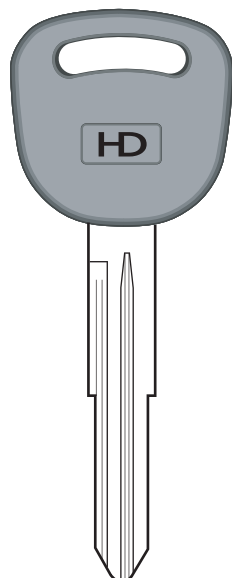

NON TRANSPONDER

KEY
MACHINESKEY
BOARDSKEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS

CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

KIA3RAP
XPT110

K03
XC254

AZ... 1-2-3-5-7-
A/Z 0-4-6-8-9

NE9
C064






Use for
C116 NE20

R63Q
C121

LD1
C309

LADA

LANCIA

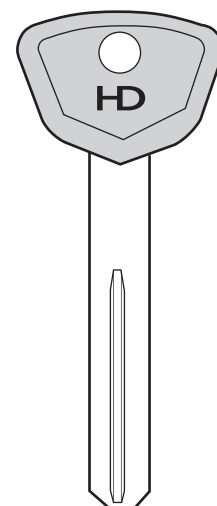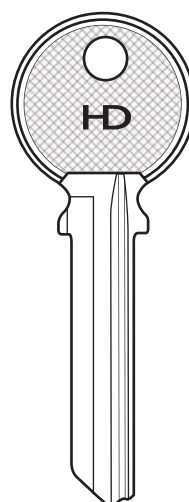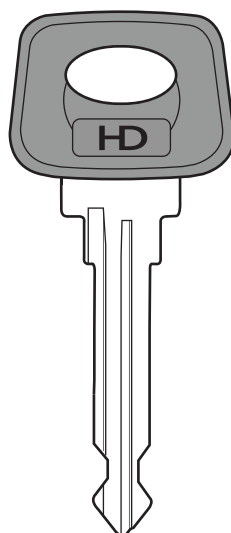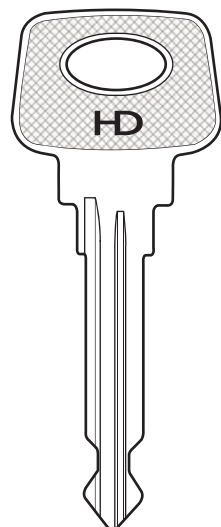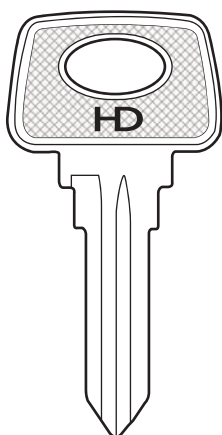

LA2
C310

LD3R
C311

LD3RP
XPT020


LD4R
XC215

GI3P
CV011


... 0001-1696

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL
- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VVDI

LANCIA

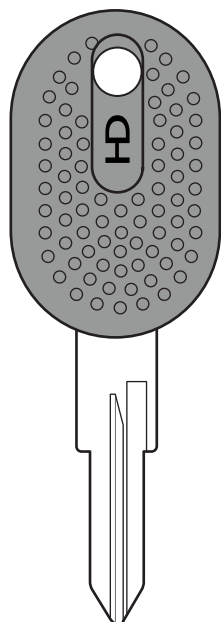


K... 3301-4886
K... 7001-8092
T... 5000-6027
T... 7001-8092
S... 501-3278

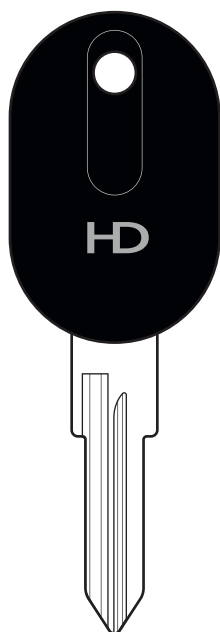


Use for
C063 N

6001-7000

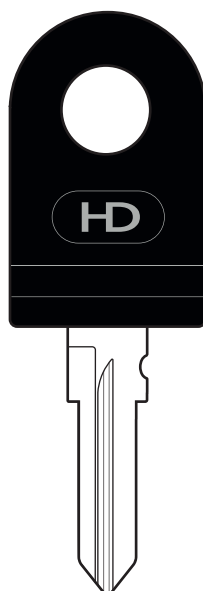


Use for C059 G

G-Z... 7001-9956

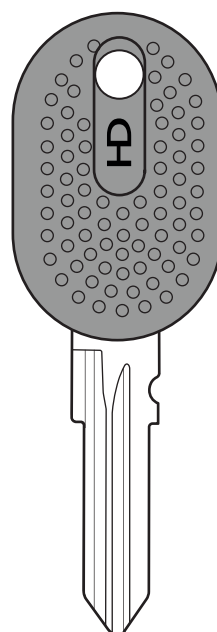

Use for
C246
ARM10

W... 0001-9640

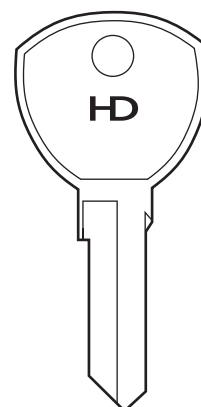


GT3 GT12A
XC013


GT4
C290


K4P
PT007



N6P
PT008


G4P
PT006






ARM10P
PT023


GT2 GT13B
XC080

LANCIA

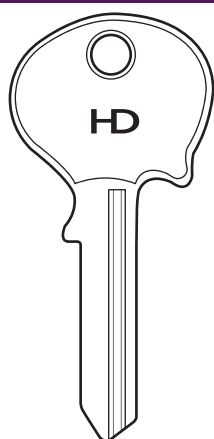

Use for
C001
NE23

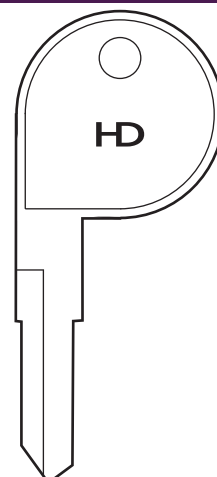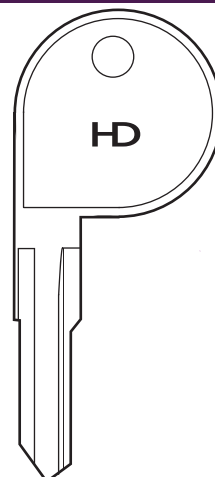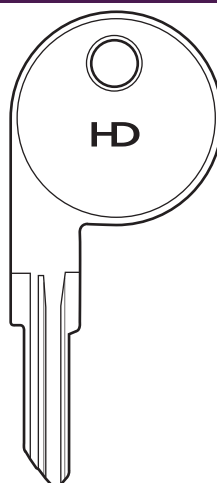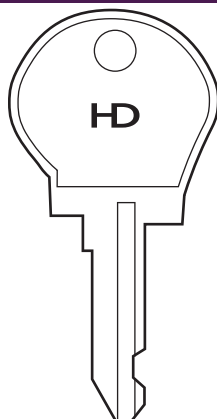

...A 1-2-3-4-5

3... 100-789

5... 100-789


NE7
C028








NE18
C115


SP6
C009


SP7
C010


SP8
C011

LAND/RANGE ROVER

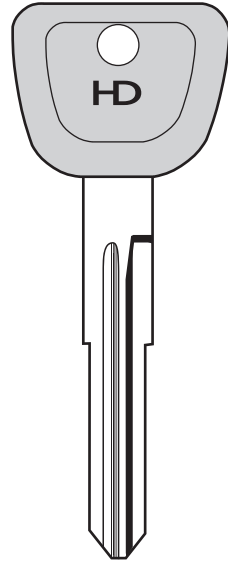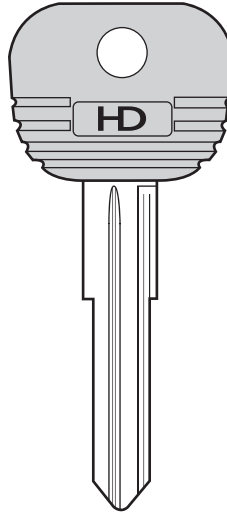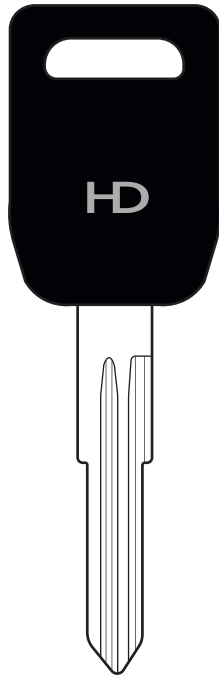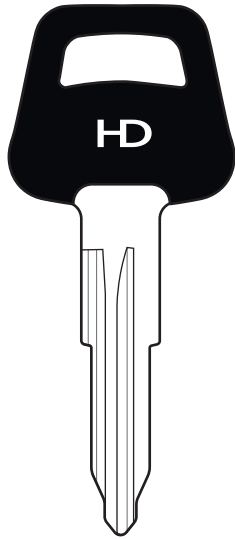

Use for
C016
LF17

BL/RO 1001-2000

NSP... 4000-4999
7001-9000
E... 2001-3000
4001-5000



HU74T
XC235



RV10-IP
XPT130



LF17P
PT026



RV8P
PT070








NE38DP
XPT009



NE48P1
PT032

LAND/RANGE ROVER

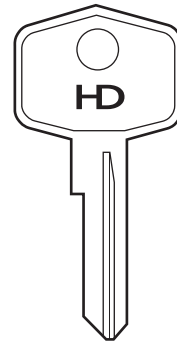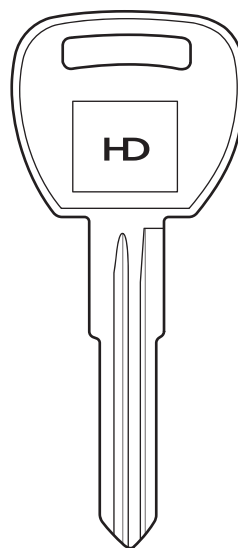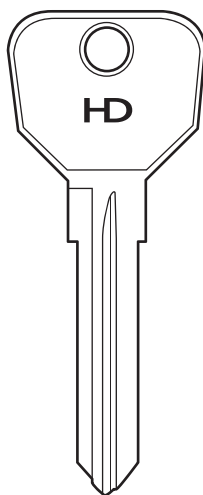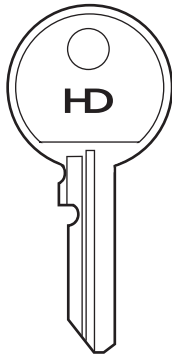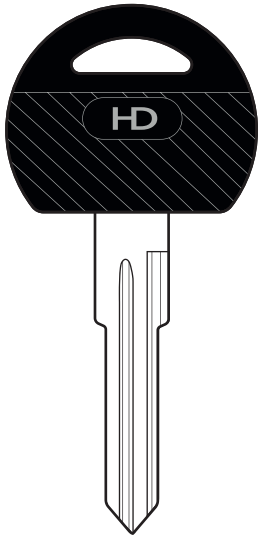

NSP... 4000-4999
7001-9000
E... 2001-3000
4001-5000

626-750

1001-2000

NSP... 4000-4999
7001-9000
E... 2001-3000
4001-5000

Reverse
profile is
XC115
UNI16R

001-099
876-955



NE48P
PT016



FP
C022



NH
C029



NE48
C249



FS
C024

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS

CHIPS







KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

LAND/RANGE ROVER

LAS

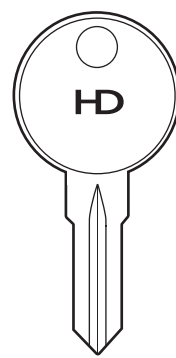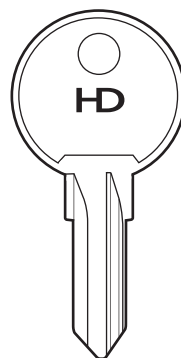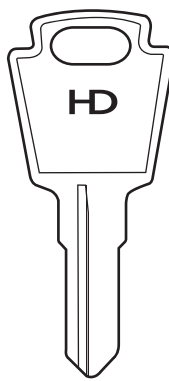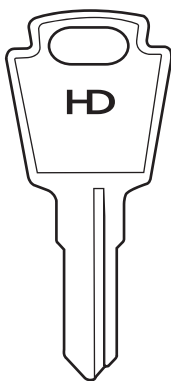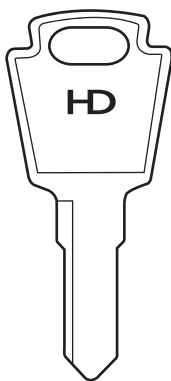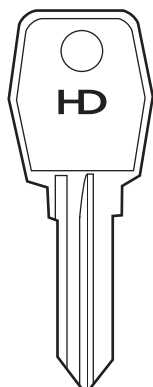

101-225



FT / BC
C038



TB
C111



CR
C096



RC
C109








KM9
C099



KM4
C192

LEXUS

LOTUS

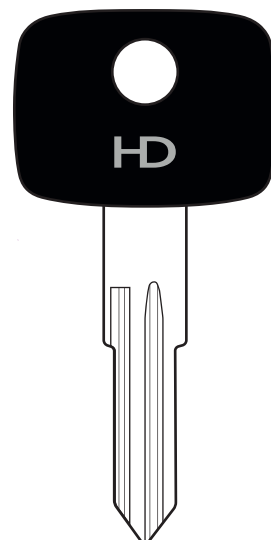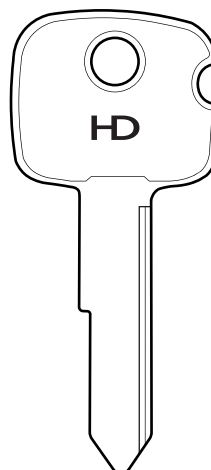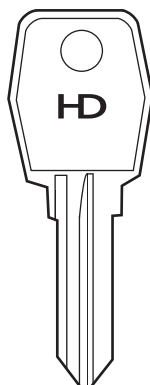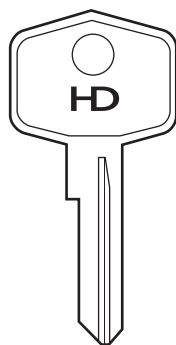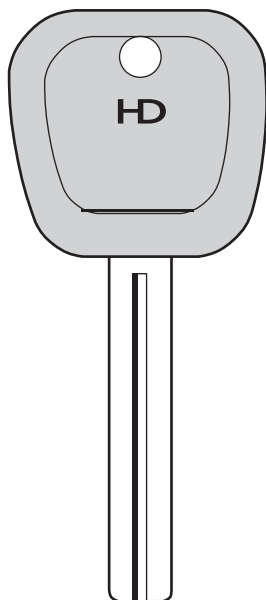

Reverse
profile is
XC115
UNI16R

001-099
876-955

101-225

R... 1-1500

D... 1-2000



TOY40P
CV027



FS
C024



FT / BC
C038



YM28
C147



HF58RP
PT003


- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL

- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI


LOTUS

LOWE & FLETCHER (L&F)


NON TRANSPONDER

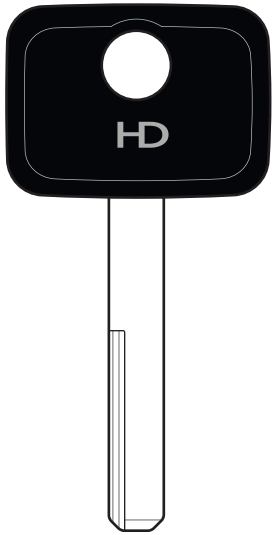

Use for
XCV017
YM27PL

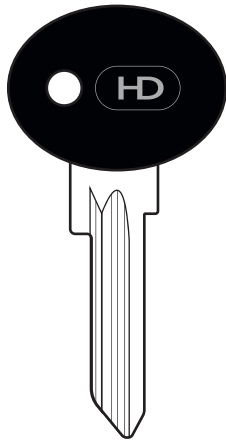


001-1050

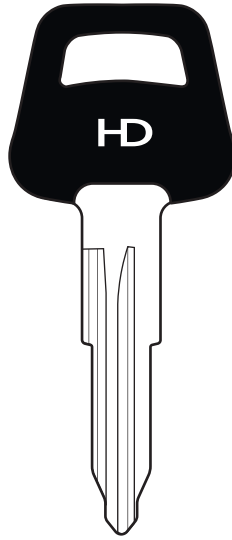


Use for
C016
LF17

BL/RO 1001-2000

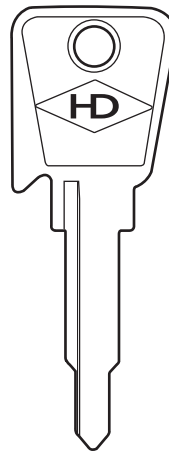

LF4
C019

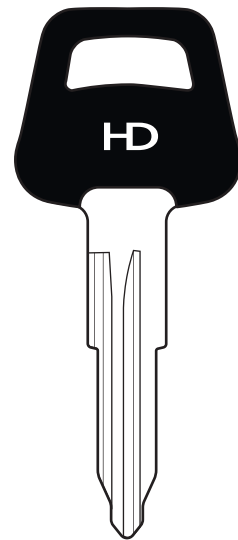

Use for
C016
LF17

BL/RO 1001-2000

LF17P
PT026

WY...
Y...
0001-3000


YS27P
CV005

DO1P
PT020


LF17P
PT026

LUMA


MAN

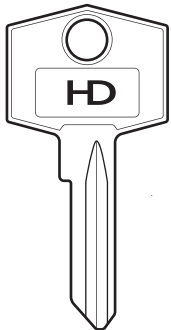

LM1
XC236

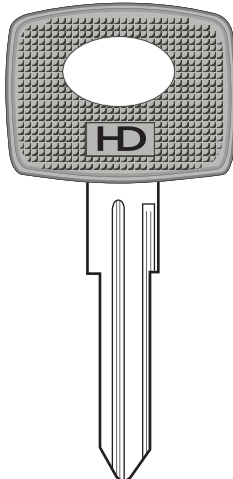


HU32P
XPT103

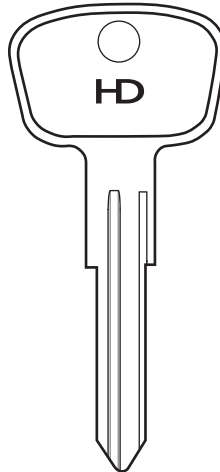


AU51-82/51-82
MN1-1000

HF48
C285

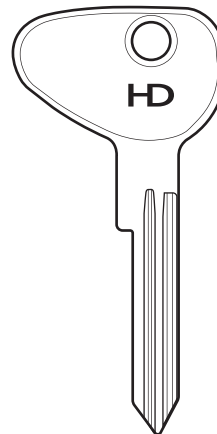

..R.. 11-72
1-110

HF32
C152

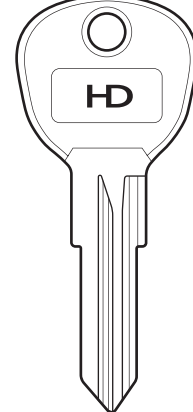

Use for
C154
HF36

FB... 1-210
PO... 501-695
PO... 1-295

HF62FD
C342

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS


CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI


MAN

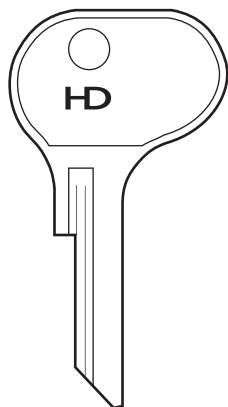

E... 01-100




NE10
C248

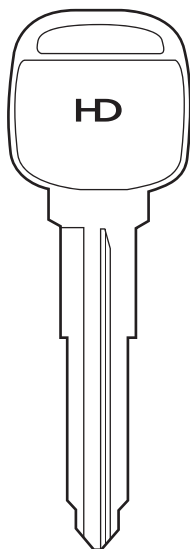

10100-12099




MAZ13
XC032

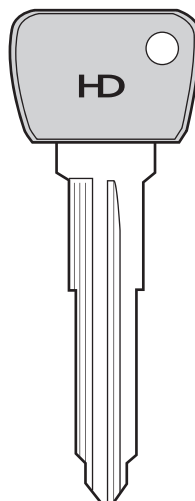

10100-12099




MAZ13BP
XPT047

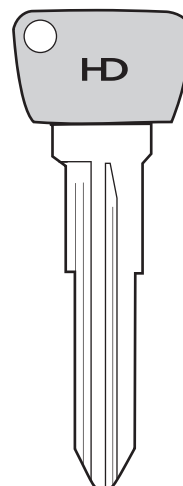

10100-12099



MAZ16BP
PT048

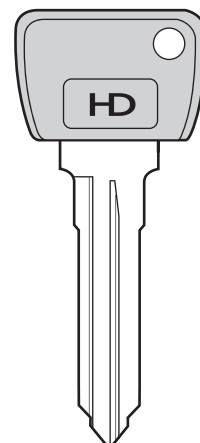


Use for
C321
MAZ16




MAZ17BP
XPT035


MAZDA

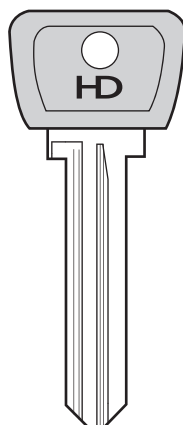


MAZ18BP
PT066

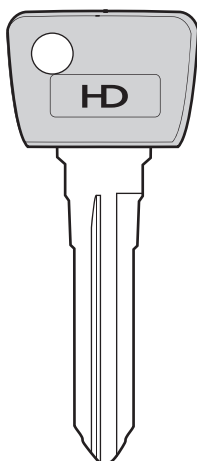


MAZ12RBP
XPT034

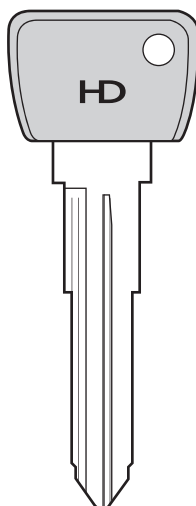

MAZ15BP
XPT021

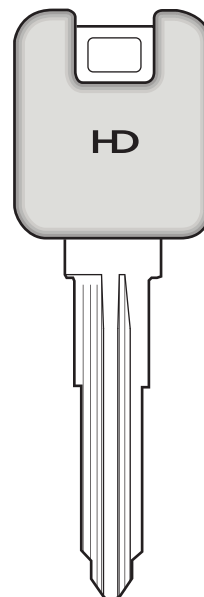

MAZ13DP
XPT084

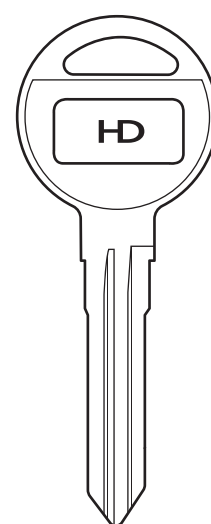

Use for
XPT058
MAZ7RAP


MZ16
C270

10100 - 12099


... 6500-7733

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL
- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI


MAZDA

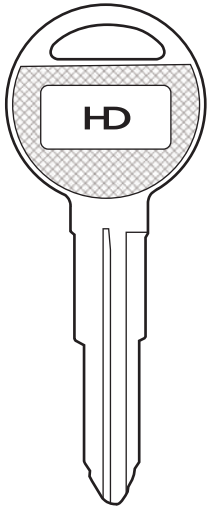


MAZ8
XC224

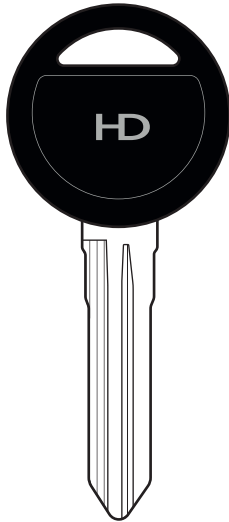


MAZ7AP
XPT129

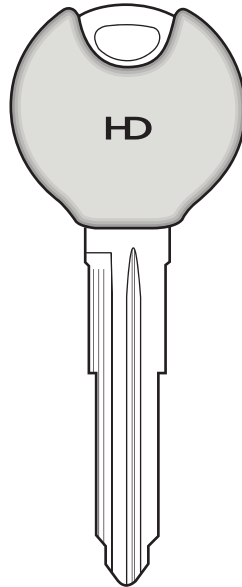

MAZ20RGP
XPT085

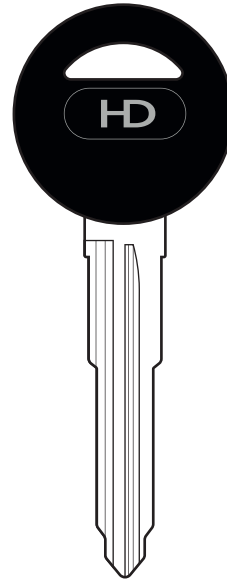

MZ17P
PT040

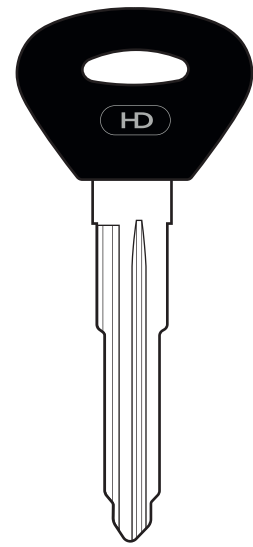

MAZ20REP
PT049


... 6500-7733

.....
10100-12099


... 10100-12099

Use for
C103
MAZ20R
10100-12099


MAZDA

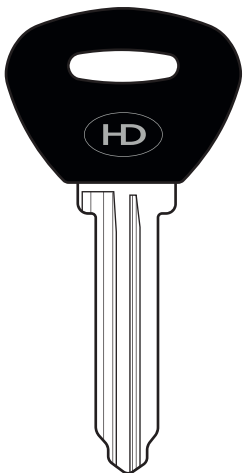


MAZ22REP
XPT033

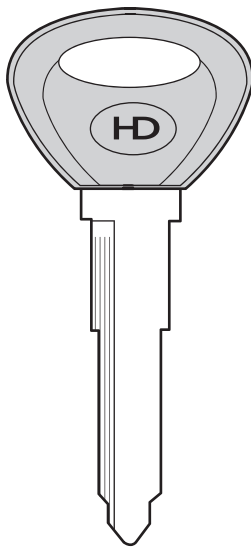


MAZ24REP
XPT051

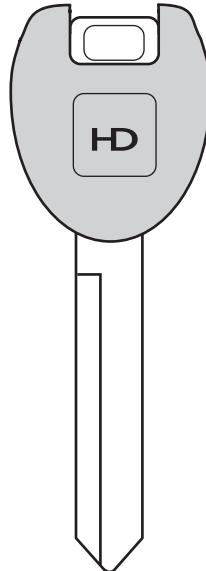

MAZ19FP
XPT042

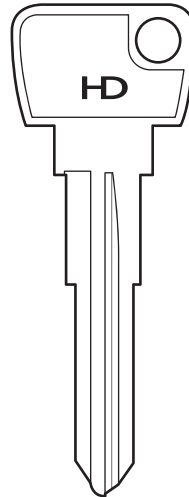

MAZ21R
XC033

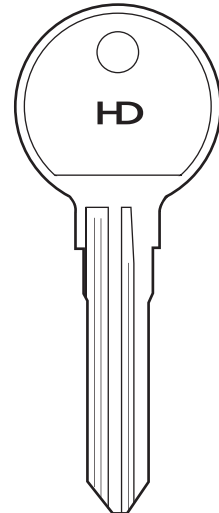

MZ15
C250

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS


CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

MAZDA

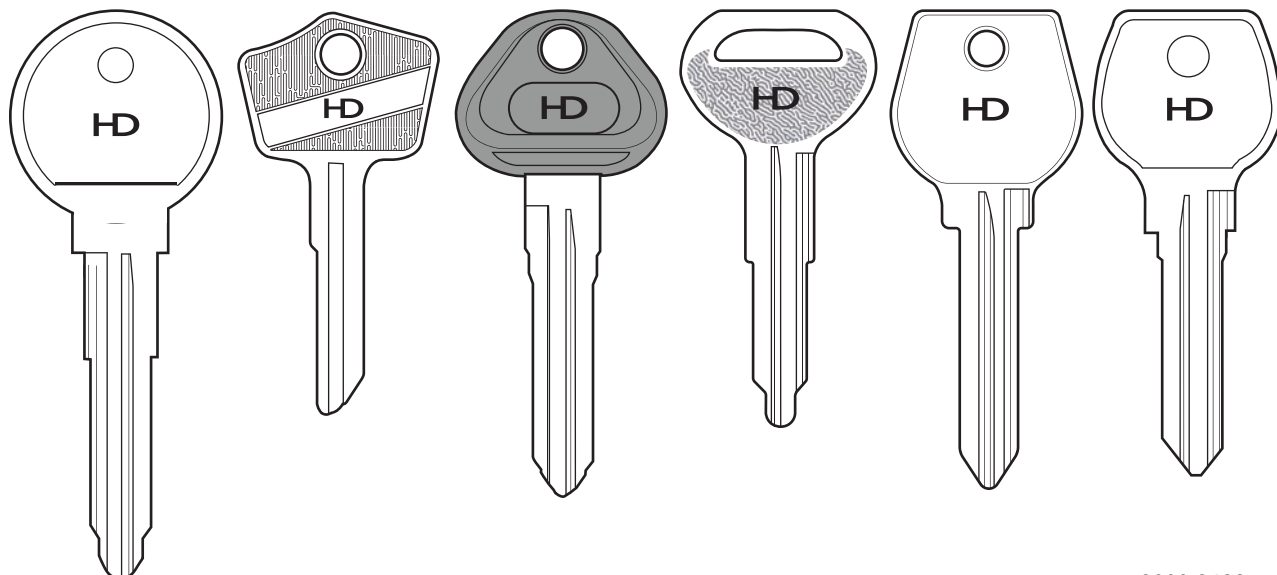

Use for C083 MZ9

... 2500-2599
3500-4600

10100-12099

... 2000-2499

... 3000-3499
5000-6100



MZ17
C272



MZ11
C201



MAZ2P
XPT128



MAZ5
XC141




MZ4
C081



MZ10
C084

MAZDA

MERCEDES

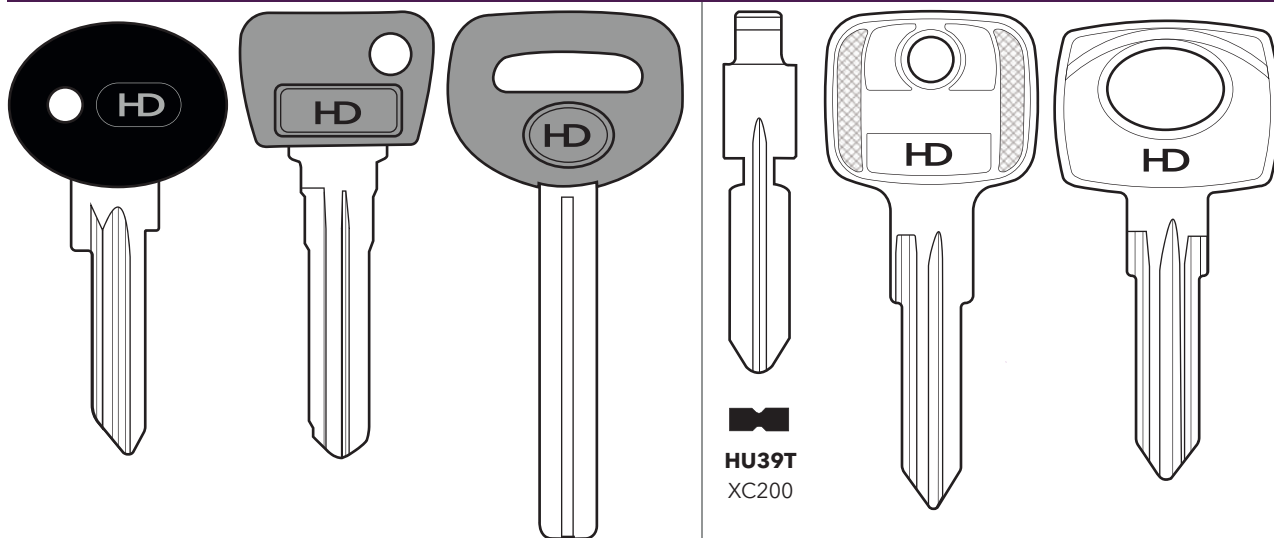

Use for
C058
MZ12

FR
0001-2000



DO1P
PT020



MAZ11BP
XPT083



MAZ23LP
XCV005



HU39T
XC200



HU64T
XC199



HF44
C088



YM31
C092






HU... 6001-8130

HY... 6001-8130

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL

- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VVDI

MERCEDES

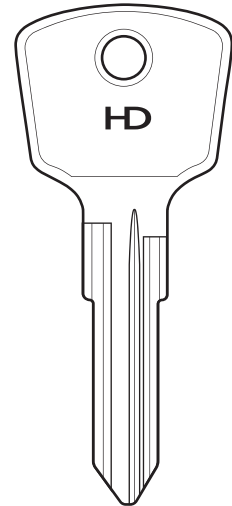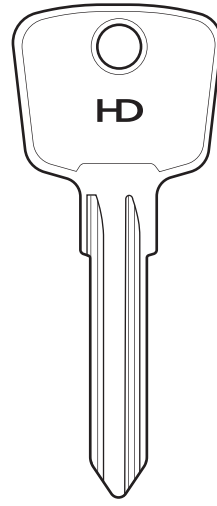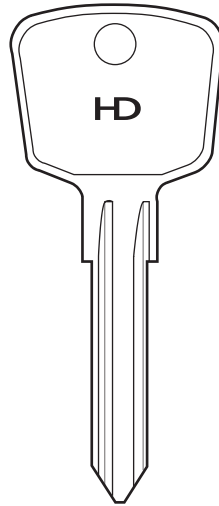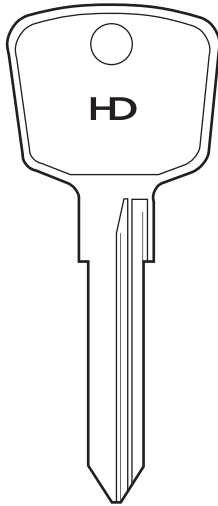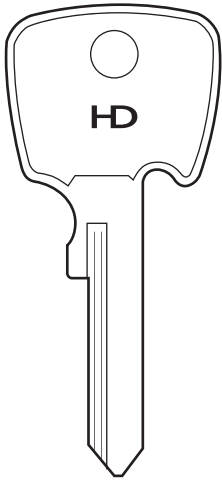

HZ... 1-5000



HF25
C087

...HF... 01-99
HF... 1-1200
NM... 001-5795
NM... 5801-7350

Use for
C090
YM18

NZ... 1-2500



NE8
XC005



HF24
C086



YM12
C089









YM12R
XC281



YM32
C292

N.Y. 6001-8130

MERCEDES

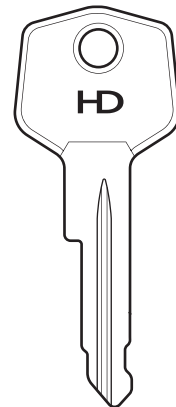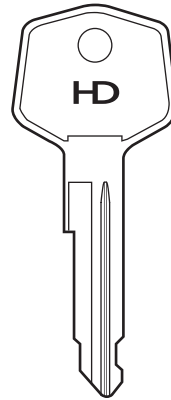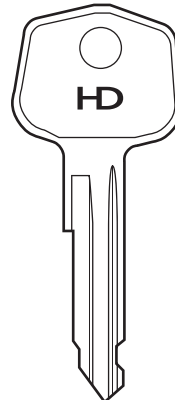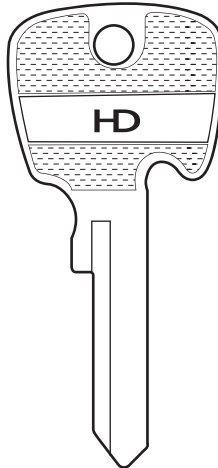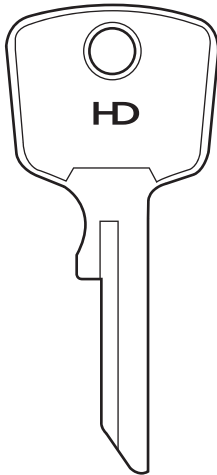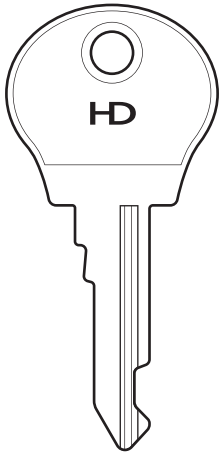

N-KN-TN...
001-100



NE22
XC243



SNE7
XC038



NE2
XC148



63E
XC136



YM5R
XC057



YM5
XC064



YM3
XC178

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS


CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

MERCEDES

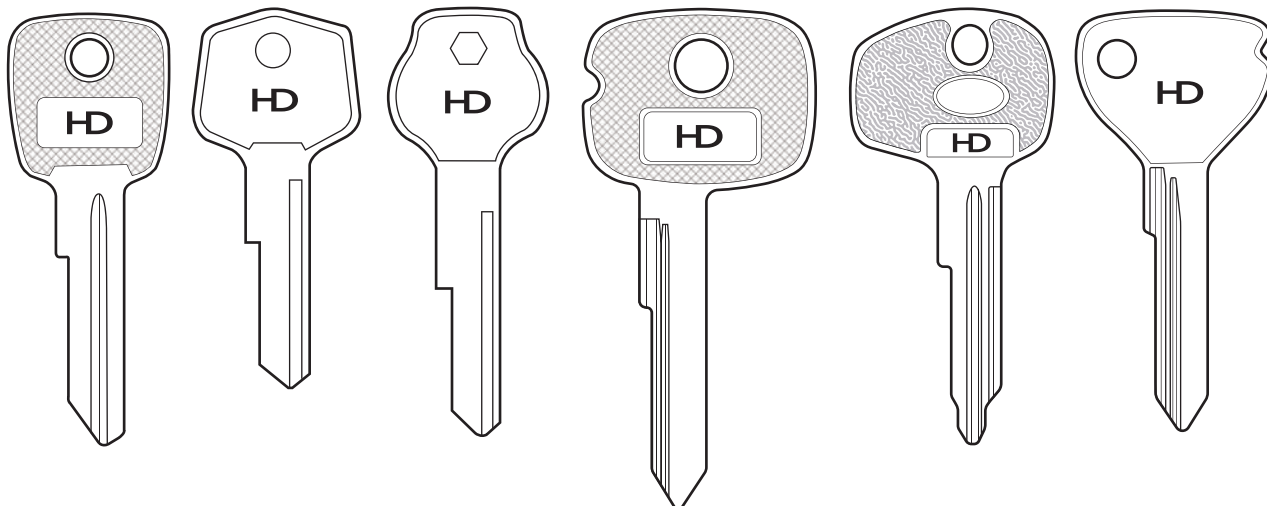

H62VB HU2R
XC104

Use for
C143
YM17

A... 1-500

N... 1001-2020
7001-8000



YM13
XC055



HU12R
XC082



R63W
XC094



YM23
C146




HF26
C214



YM25
C145

MERCEDES

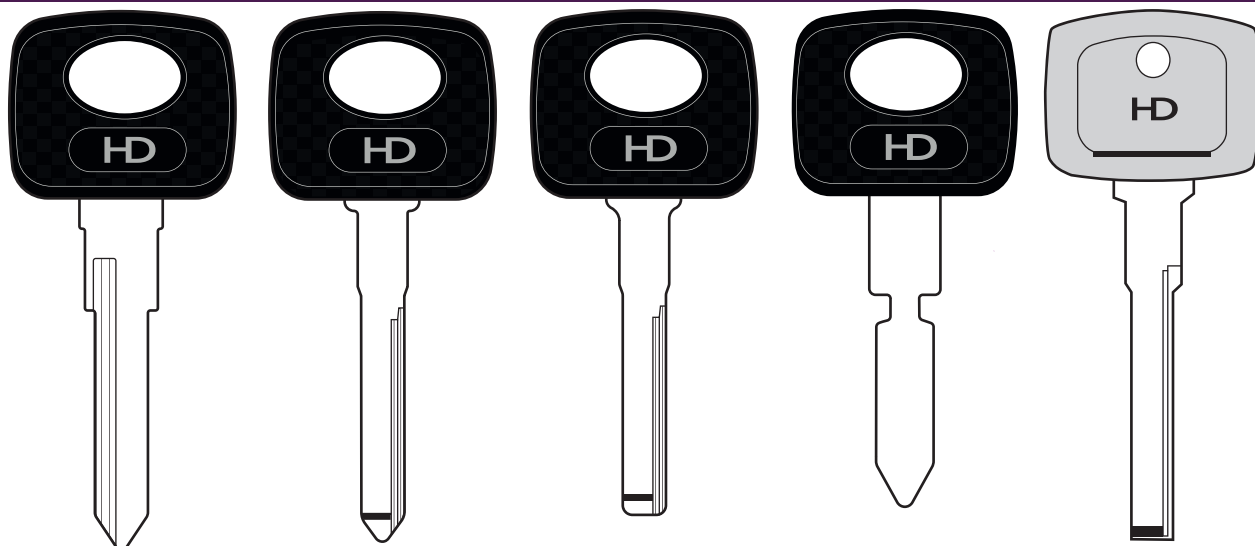

Use for
C091
YM19

IM... 1-2000
2501-3500
4001-7350

HA...

HA...

NS...

HA...



YM19P
PT047



HF64P
CV015



HF67P
CV042



HF66P
CV017




HF55P
CV040


- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL

- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI


MERCEDES

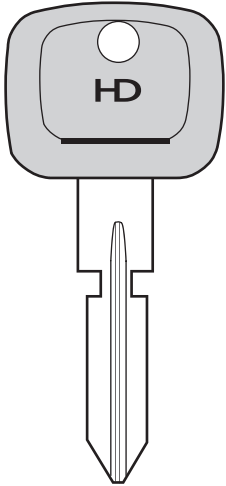


HS...

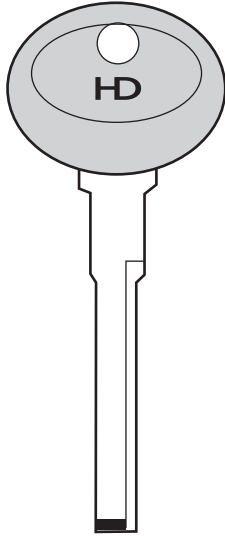


NA...

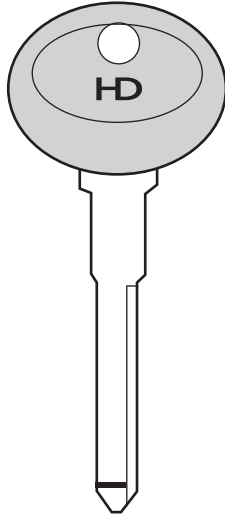

NA...

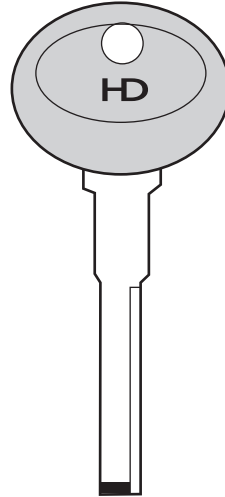

NA...

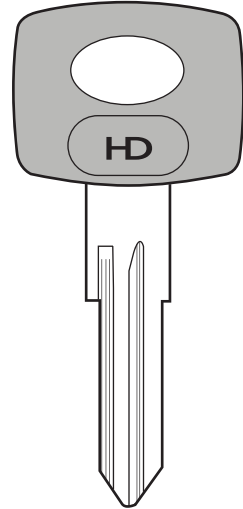

HU...
6001-8130



HF65P
CV016



HF61P
CV039



HF62P
CV013




HF69P
CV041



HU36P
XPT082

MERCEDES


MG

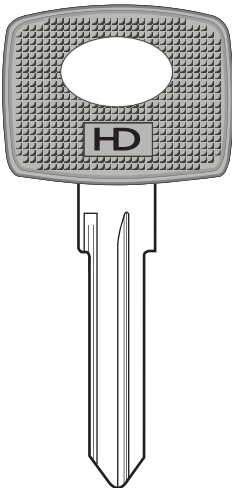

HZ.... 1-1400
HZ00002001-3500
HZ00004001-5000
ND....
4001-5795
5807-7350
...HZ..01-99/01-99




HU22P
XPT081

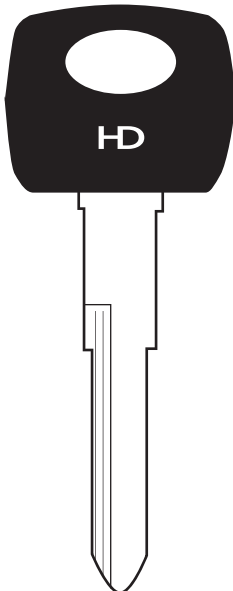


Use for
XPT030
HU72RP




HU72RP
PT080

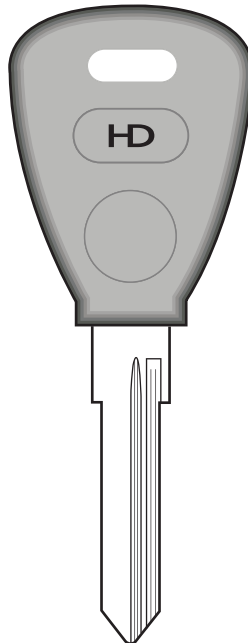

ME-9P
XPT100

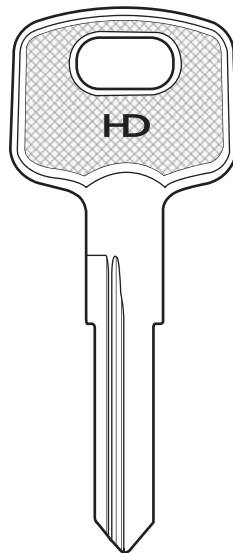

C16
XC069

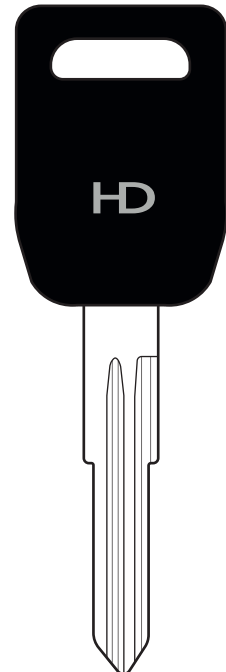

RV8P
PT070

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS





CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

MITSUBISHI

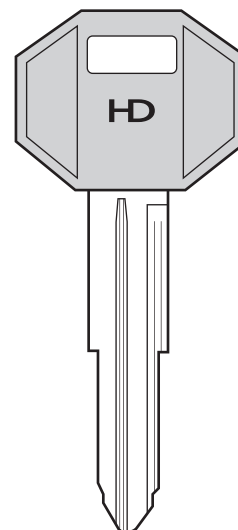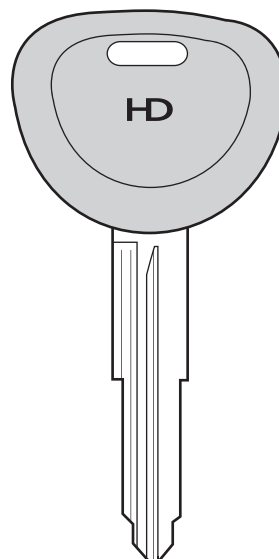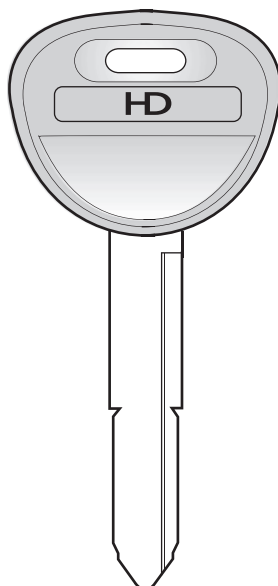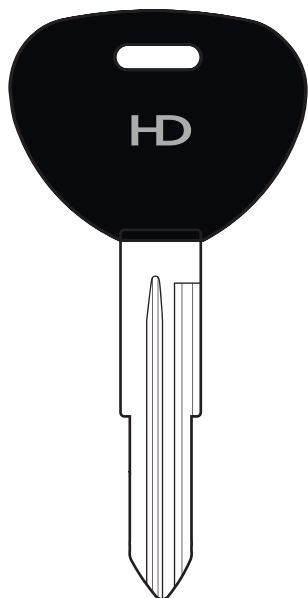

Use for
C274
MT7S
& XPT086
MIT8AP
E....5001-7000
E....7001-7679







MIT8AP
PT082


MIT15AP
XPT039


MIT11RAP
PT065


MIT8P
XPT022

MITSUBISHI

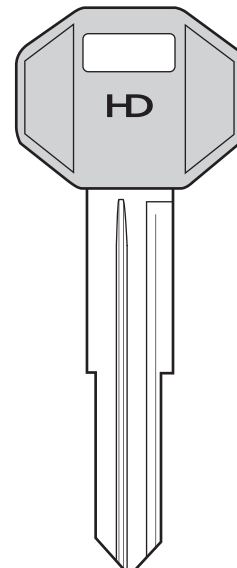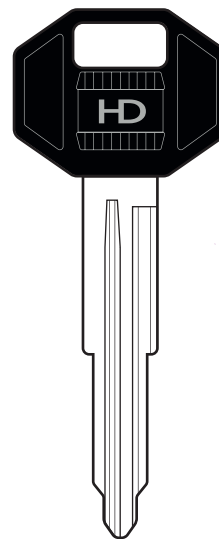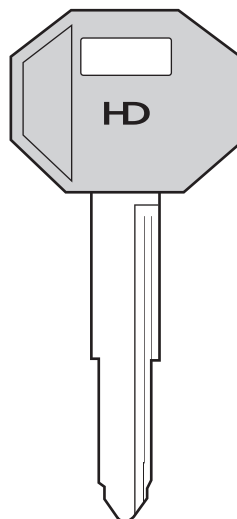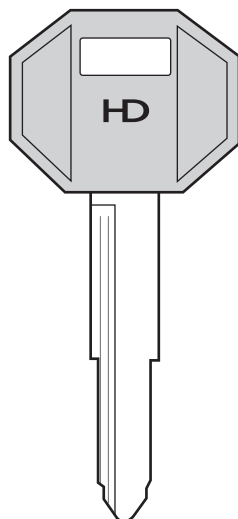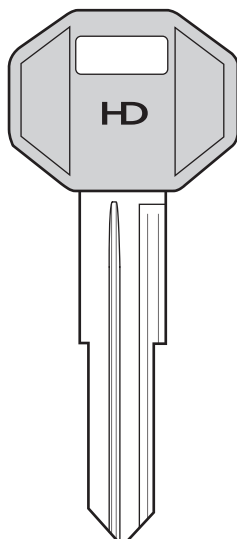

Use for
C280
MT4S

Use for
C251
MT5S

Use for
C273
MT6S

H7001-8400


MIT4RP
XPT007


MIT2P
XPT027



MIT2RP
XPT032


MT55P
PT041


MIT6RP
XPT008

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL
- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI

MITSUBISHI

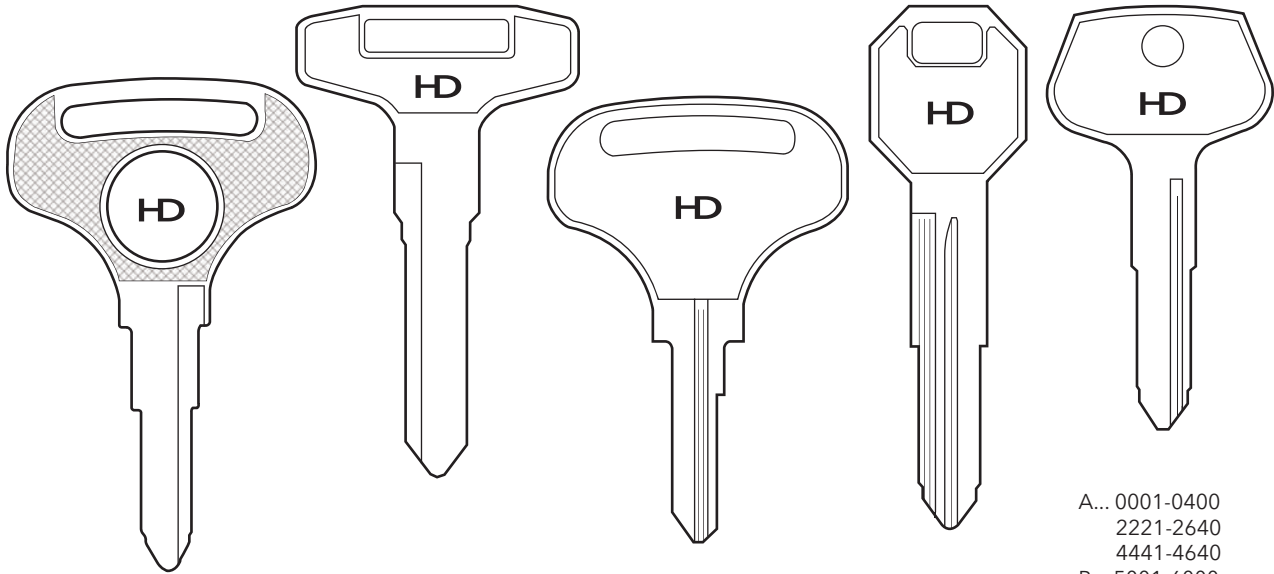

A... 0001-0400
2221-2640
4441-4640
B... 5001-6000
C... 6001-7000
M... 5551-5950
6661-7060
7771-8170
8814-9280
..... 30010-32009
N... 1921-2220

MIT7
XC035

MIT9R
XC037

MIT13
XC034


MIT12R
XC164

MS13
C265

MITSUBISHI

MOSKVITCH

MOTOGARD

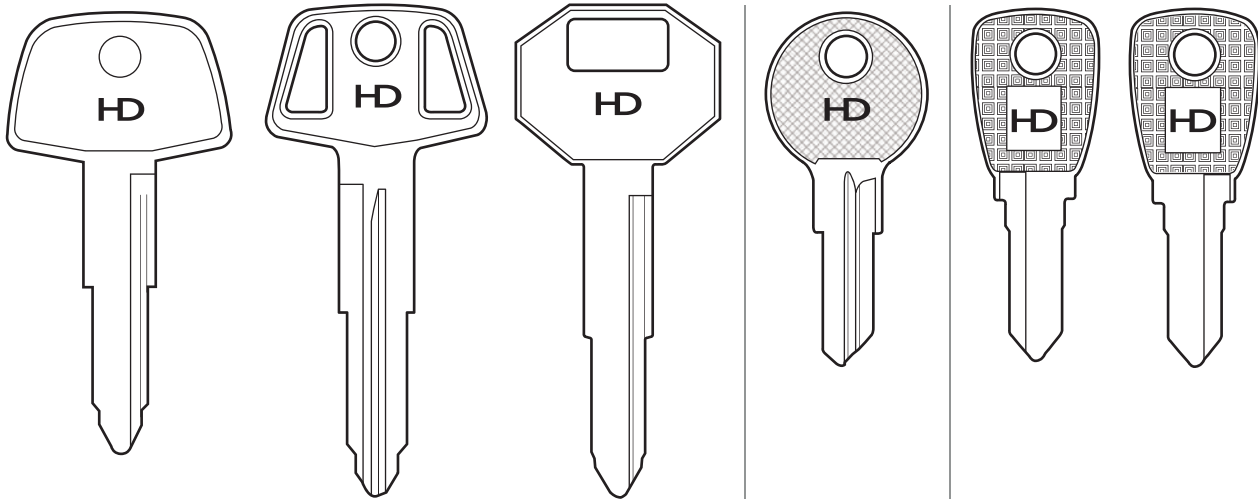

H... 0001-0400
2221-2620
4441-5143
E... 2001-3000

H... 0001-0400
2221-2620
4441-5143
E... 2001-3000

H... 0001-0400
2221-2620
4441-5143
E... 2001-3000

MS12
C262

MIT11R
XC197

MS20
C093

MOS1
XC189

MTG1R
XC285

MTG1
XC286

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS

CHIPS

KEYLINE
HORSESHOES






KEY DIY

XHORSE
& VDI

NON TRANSPONDER

NEIMAN

NISSAN

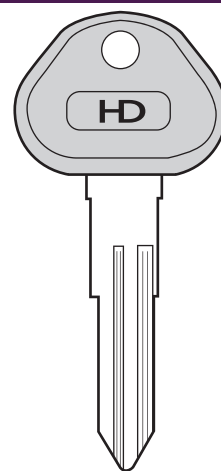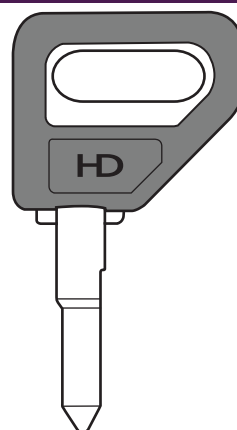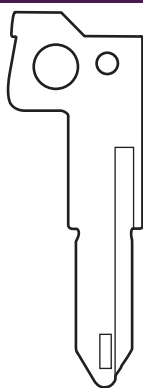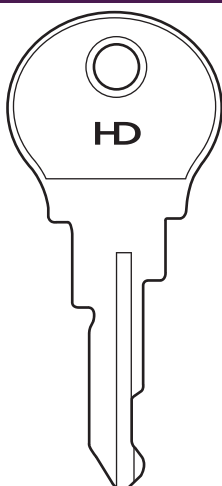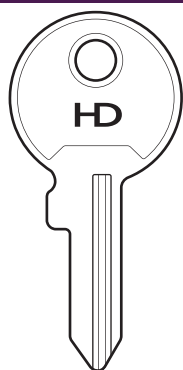

.A/Z.....A/Z...
...A/Z.....A/Z..
3-5-7-L



SNE34
XC133



NE-23
XC278



NE73-BI
XC216








NE33SP
CV043



DAT12P
XPT004

NISSAN

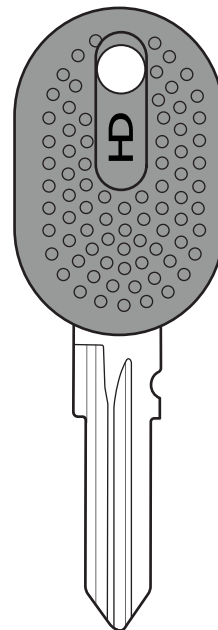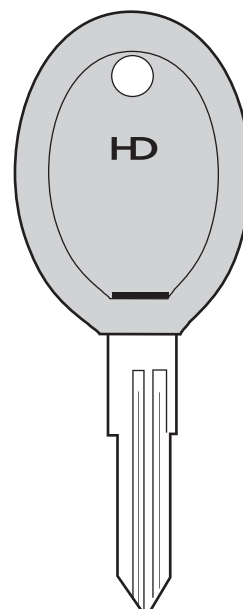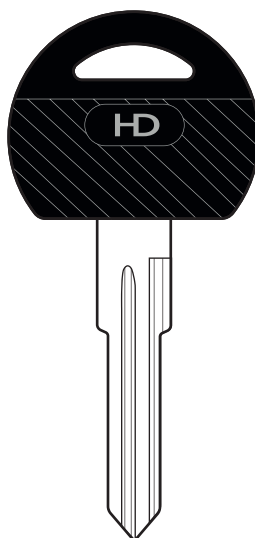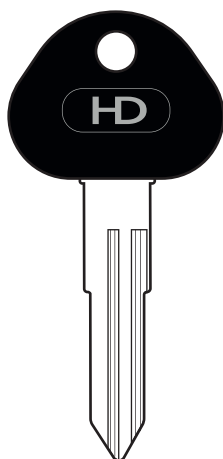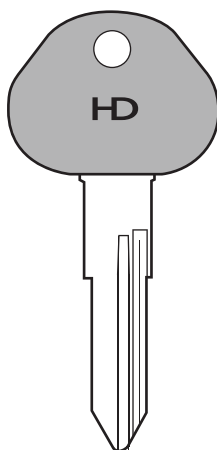

Use for
C056
DT23

X... 001-8000
8001-9000

NSP... 4000-4999
7001-9000
E... 2001-3000
4001-5000

Use for
C246
ARM10

Y.... 1-8000

W... 0001-9640



DAT14P
XPT074



DT23P
PT022



NE48P
PT016



DT23P1
PT053





ARM10P
PT023

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL

- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI

NISSAN

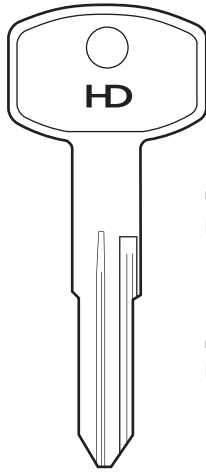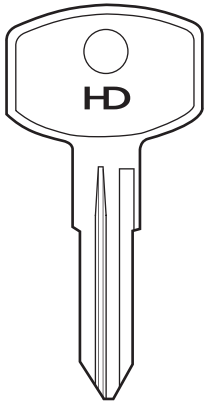

DT19

C052



DT21

C054



DT22

C055



DT24

C057

Use for C050
DT17

M... 1-1000
5000-6000
N... 1001-2001


M... 6001-7000
W... 1-1000

M... 7001-8000


Use for C053
DT20

Y... 0001-8000
8001-9000

F... 1-100
1001-2000
M... 4001-5000

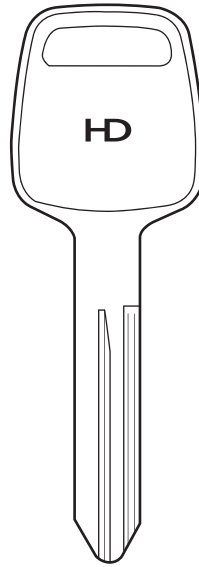

Use for XC191
NSN15

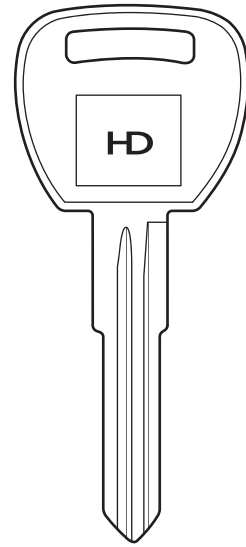

NSP... 4000-4999
7001-9000
E... 2001-3000
4001-5000

NON TRANSPONDER



DAT7R

XC006



DT18

C051



NSN14





XC122



NE48

C249

NISSAN

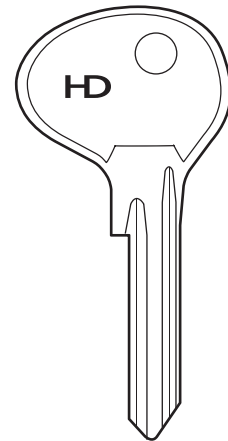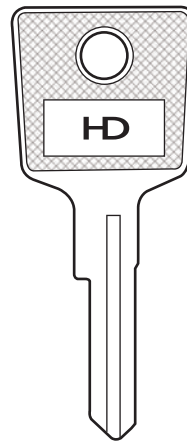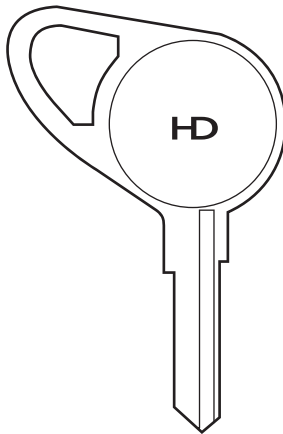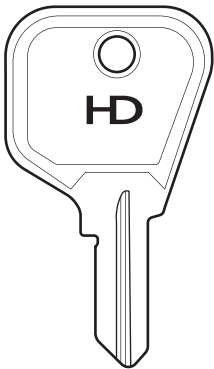

Use for
C106
63P

111-200
11501-700
A1-200A
A501-700A
1-2-3-4-5

E... 01-649

4... 001-150
8... 601-900



63PX

C107



V61S

H0332



NSN6R

C349



DAT1R

XC172



DAT5R

XC052

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS


CHIPS

KEYLINE
HORSESHOES


KEY DIY

XHORSE
& VDI




NISSAN

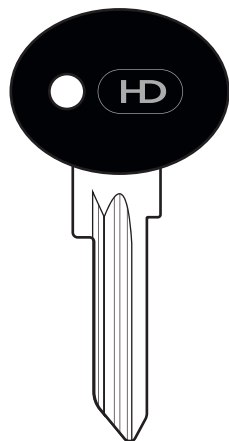

Use for
C058
MZ12

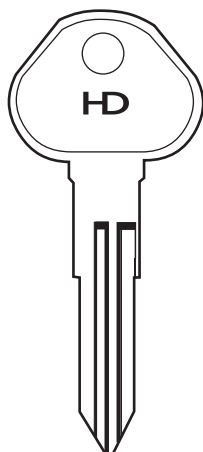

DAT12R
C304

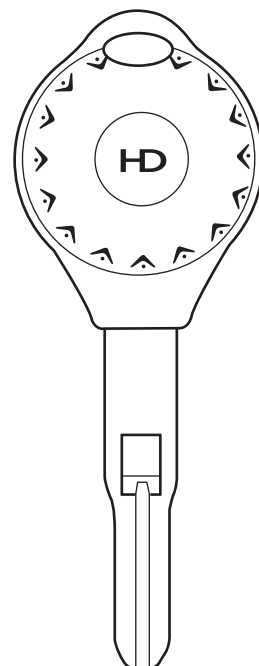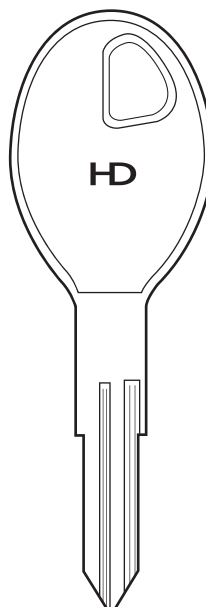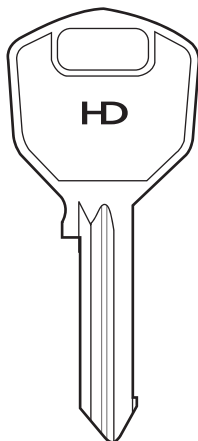

FR
0001-2000

X... 1-8000

DO1P
PT020

DT25
C252







STS2D
XC113

NSN11
XC137

NSN9P
XCV002

NISSAN

PEUGEOT

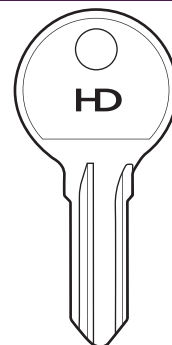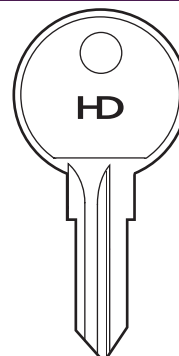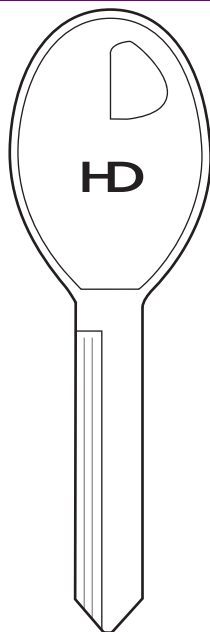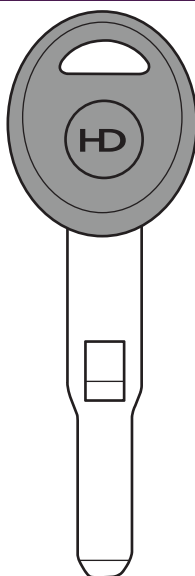

Y... 001-224

R... 001-224

NSN10AP
XCV003

NSN12
XC042

NS34-I
C419

HU83T
XC279


NE73CI
XC233

KM2
C097

KM8
C098

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL
- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI

PEUGEOT

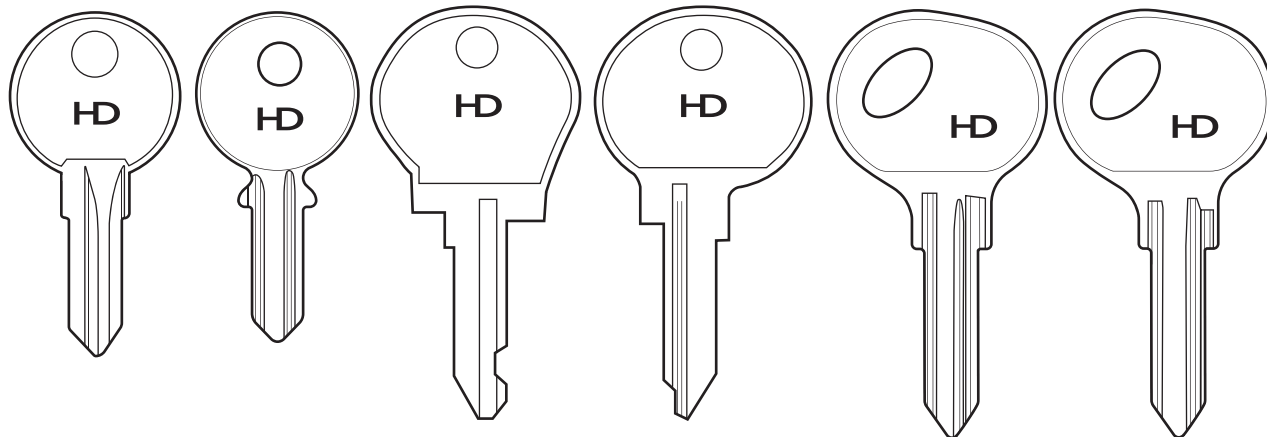

C... 001-224
CA... 001-224

D... A/Z 0-9-8-4-6
.L... A/Z

Use for
C116 NE20
4-6-8-9

20000-25527
50001-52500



KM10
C286



DU3R
XC059



NE18
C115



R63Q
C121




LM1
C100



LM2
C101

PEUGEOT

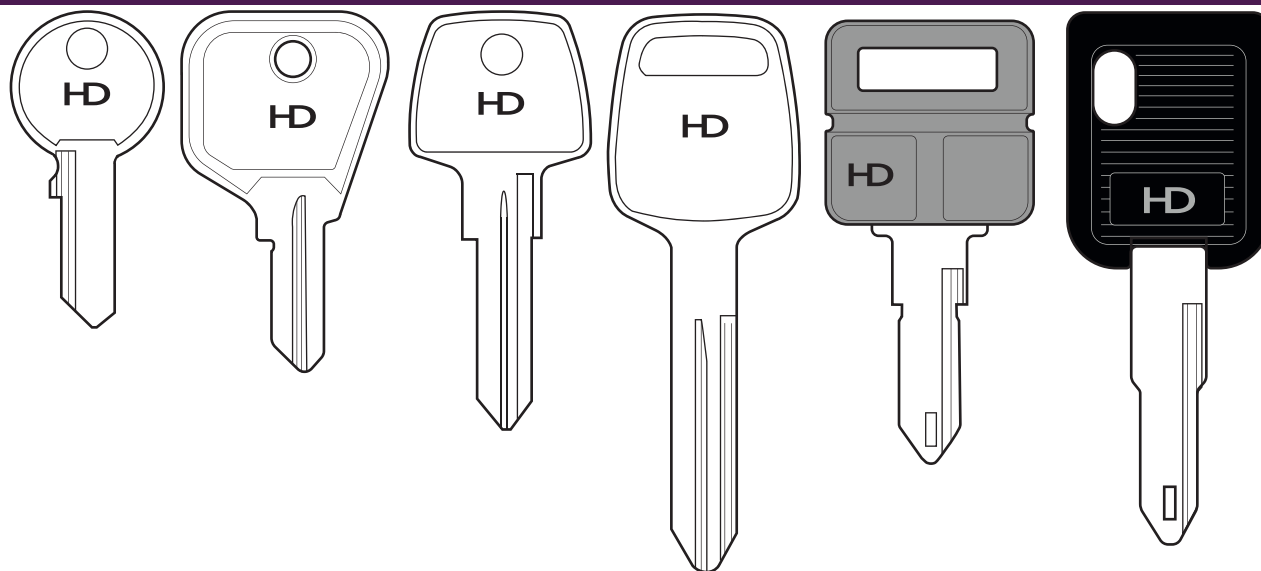

Use for
C106
63P

E... 01-649

Use for
C105
NE45

R... 0501-3278

Use for XC191
NSN15

.. 1/9
1/9 A/Z
. 1/9 A/Z
... 1/9 ... A/Z
.... 1/9 .. A/Z
.... 1/9 .. A/Z AZ
M-N-P-R-S

Use for
C119
NE68

1/9 ...A/Z
.1/9 ...A/Z
..1/9 ...A/Z
M-N-P-R-S



V61S
H0332



63PX
C107



LP4
C102



NSN14
XC122



NE55FP
XPT119



NE68P
PT029

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS


CHIPS

KEYLINE
HORSESHOES


KEY DIY

XHORSE
& VWDI


PEUGEOT

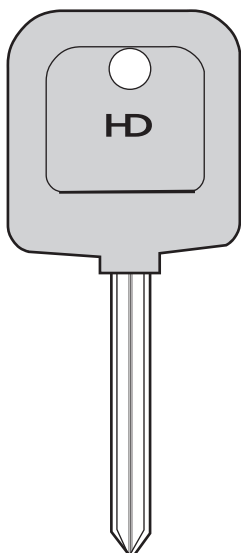


NA/Z...
0-1 2 3 4 5 6 7
A B C D E F

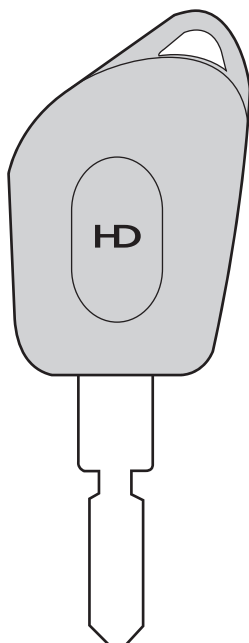

Head size
may vary

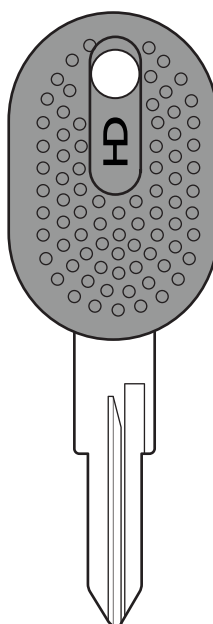

K... 3301-4886
K... 7001-8092
T... 5000-6027
T... 7001-8092
S... 501-3278

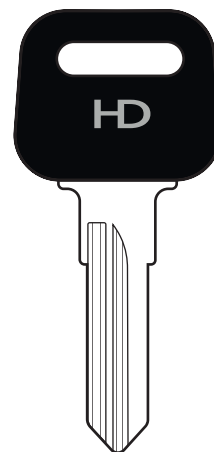

NM85P
PT043



NE78P
CV049



K4P
PT007




NE74P
PT083



NE78T
XC054


PEUGEOT

PORSCHE

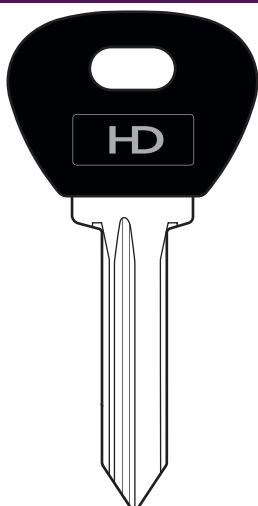


Use for
C110
SEX6

A/Z...
1-2-3-4-5-6-7-8

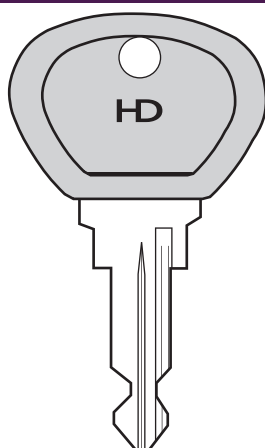


Use for
C104 NE34


...A/Z B-C-D-E
1/9...A/Z
.1/9...A/Z
B-D-E-G-H-J
1/9...A/Z
.1/9...A/Z
E-M-N-P-R

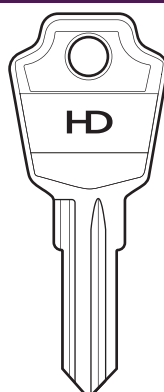

KI1R
XC092

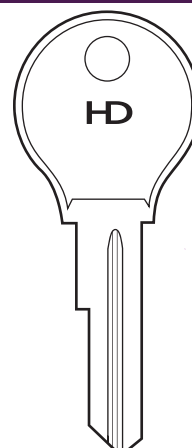

HU1R
XC060

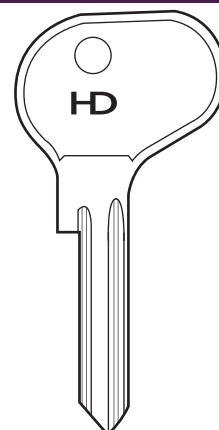

FL.... 0001-1080

POR5
XC168








SEX6P
PT030



NE34P
PT014



PORSCHE

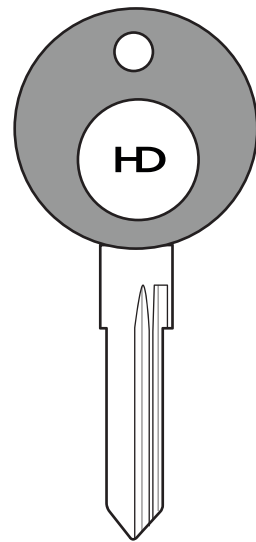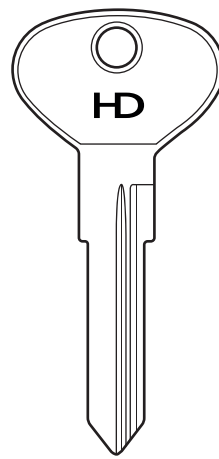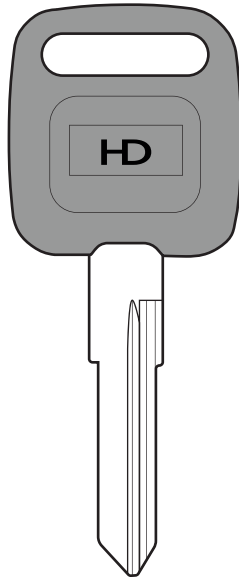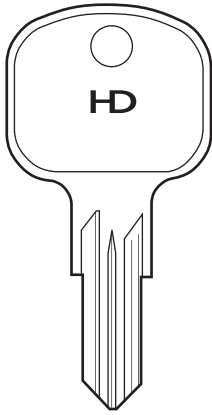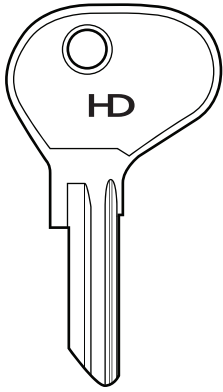

Use for
C157
WT9

VB... 2001-2830
3001-3890
NV... 2001-2830
3001-3890
MD... 2001-2830
3001-3890

VB... 2001-2830
3001-3890
NV... 2001-2830
3001-3890
MD... 2001-2830
3001-3890

...E 01-649

HV...1-9282 VB. VH



POR1
XC209



VE12
C035



WT9P
PT018



CA1
C149








CA1P
PT017

PORSCHE

PROTON

RELIANT

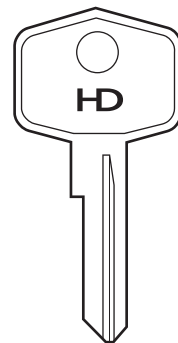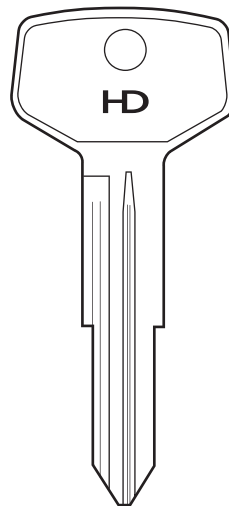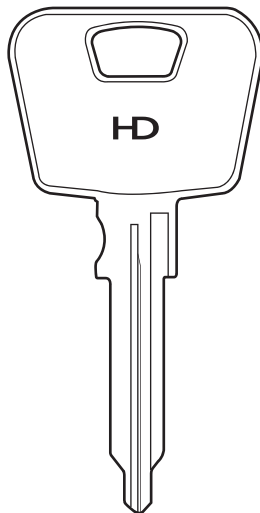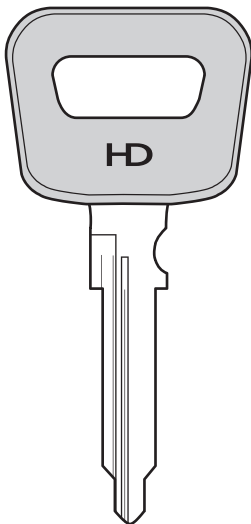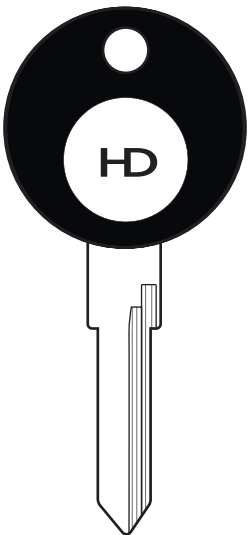

Use for
C264 NE62
and XPT090
WT10P

AH... 1-9282



PW2P
XPT069



NE62P
PT037



PW1P
XPT060



PW3
XC120



TT31
C256



FS
C024

G/P/W/X..
1-2000

Reverse
profile is
XC115
UNI16R

001-099
876-955

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS

CHIPS



KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

RELIANT

RENAULT

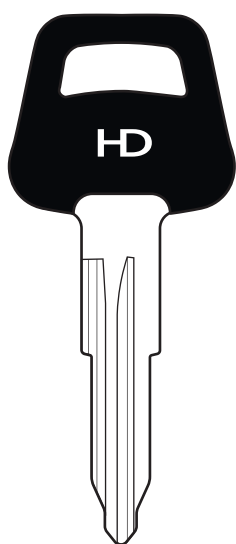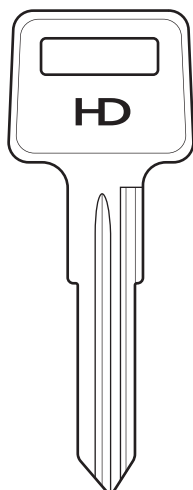

E...4001-5000
8090-8999
L... 8001-10000

Use for
C016
LF17
BL/RO 1001-2000

....A/Z 0/9 1-4092
....A/Z 0/9 5001-9092



NE24
C026



LF17P
PT026



VAC102CI
XC087



NE73CI
XC233








NE73AI
XC132



VAC102AI
XC158

RENAULT

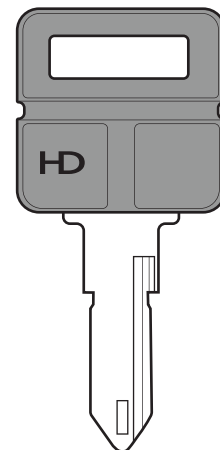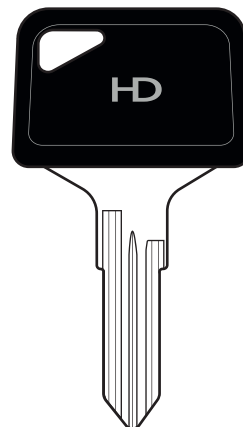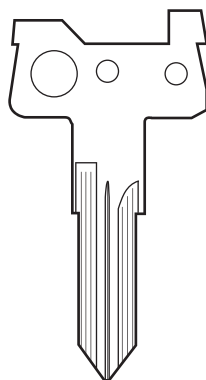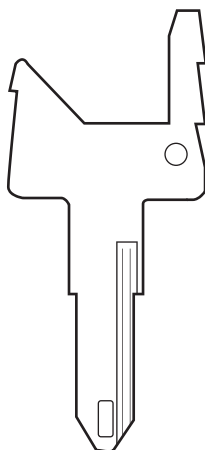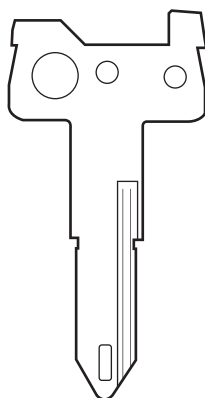

....A/Z 0/9 1-4092
....A/Z 0/9 5001-9092

.. 1/9
1/9 A/Z
.. 1/9 A/Z
... 1/9 ... A/Z
.... 1/9 .. A/Z
.... 1/9 .. A/Z AZ
M-N-P-R-S



NE73I
XC131



NE72I
XC130



VAC102I
XC161




VAC59P
XPT106



NE55FP
XPT119


- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL
- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VVDI

RENAULT

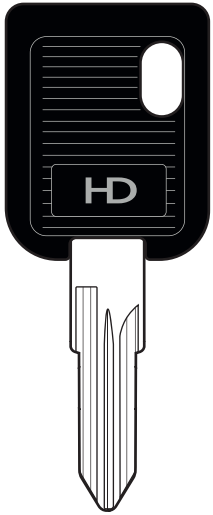

0/9...A/Z
1-9092


VC10P
PT050

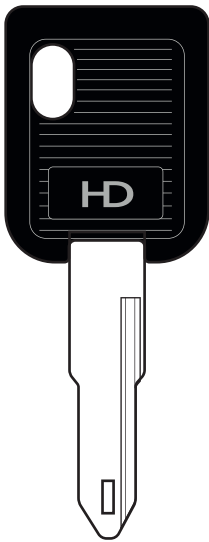

Use for
C119
NE68

1/9... A/Z
.1/9...A/Z
..1/9...A/Z
M-N-P-R-S


NE68P
PT029

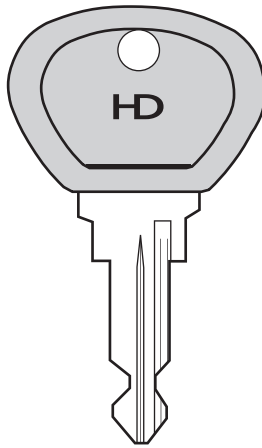

Use for
C104
NE34

...A/Z B-C-D-E
1/9...A/Z
.1/9...A/Z
B-D-E-G-H-J
1/9...A/Z
.1/9...A/Z
E-M-N-P-R


NE34P
PT014

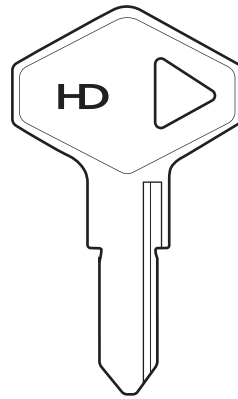

NE37
C118

2.../2...A/Z B-C-D-E-G


NE36
C117

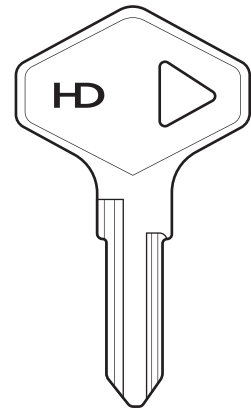

A/Z 2700-4816


NE46
C223

RENAULT

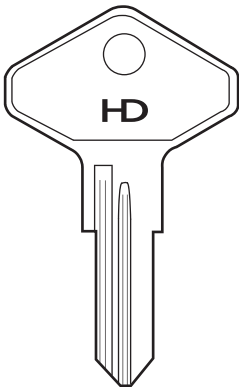


...8 A8...

R17
C120

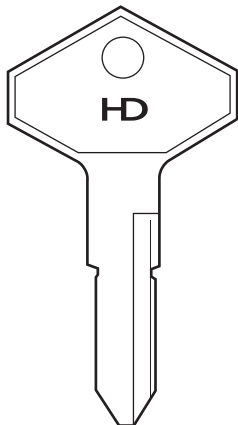


1/9...A/Z
M-N-P-R-S

NE75
C259

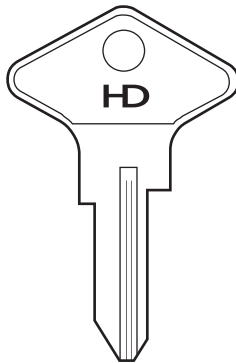

A/Z... 0-1-2-3-5
...4-6-8-9


NE14
C204

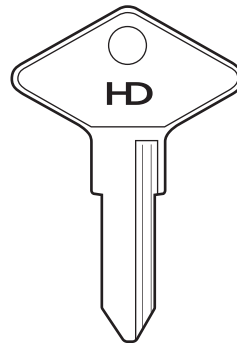

Use for
C113
NE16

A/Z 2-5-9

NE40
C222

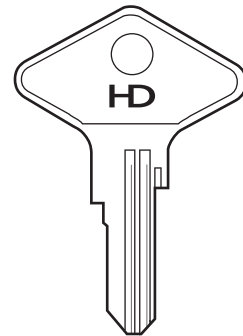

NE17
C114

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS


CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

RENAULT

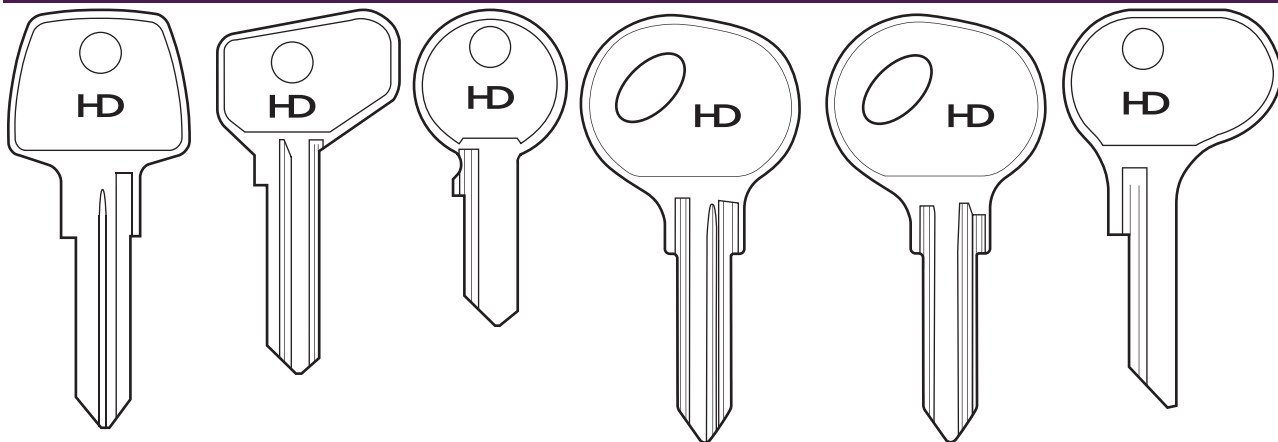

Use for
C105
NE45

Use for
C106
63P

20000-25527
50001-52500

E... 01-100

R... 0501-3278

Z... 100-309



LP4
C102



FA1
C170



V61S
H0332



LM1
C100




LM2
C101



NE10
C248

RENAULT

ROLLS ROYCE

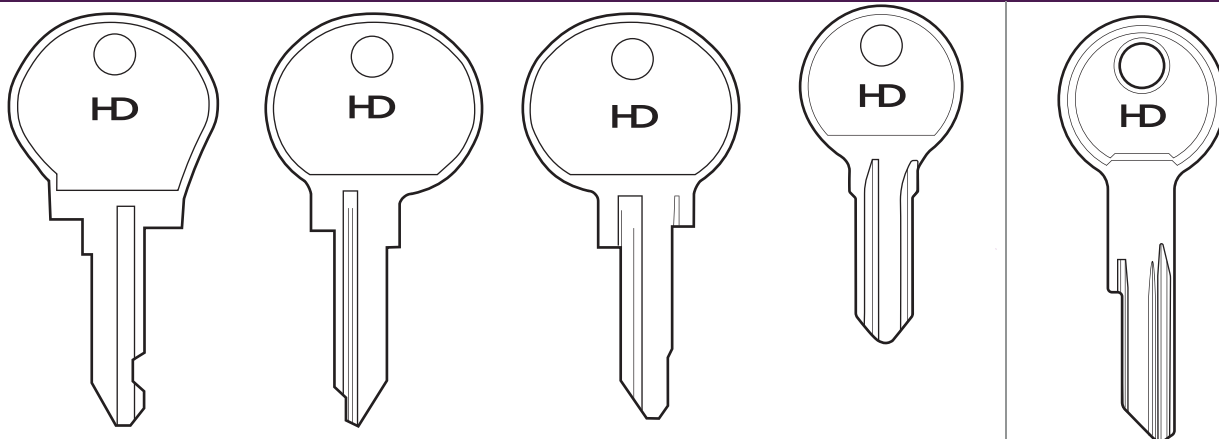

Use for
C116 NE20

Use for
C133
62HC

4-6-8-9

S-T-X-Y-Z-R 1-2-3-5-7

R... 001-224

RRL



NE18
C115



R63Q
C121



63Q
C296




KM8
C098



62HD
C234

ROLLS ROYCE

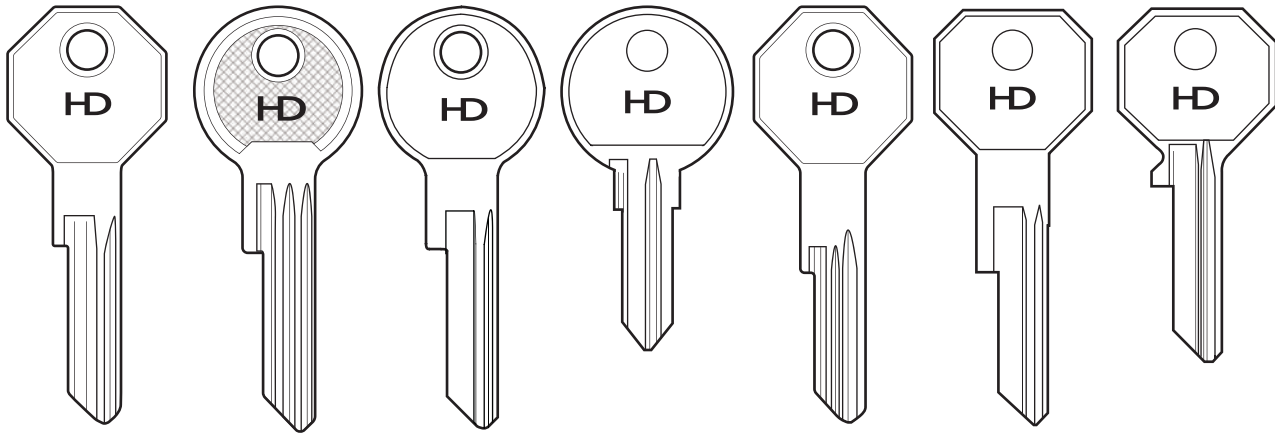

Use for
XC167
RR8R

Use for
XC267
RR1R

RRM



62HF
C236



RR2R
XC152



RR10R
XC264



KM3
C171



62HE
C235




RR5R
XC045



62HB
C233

ROVER

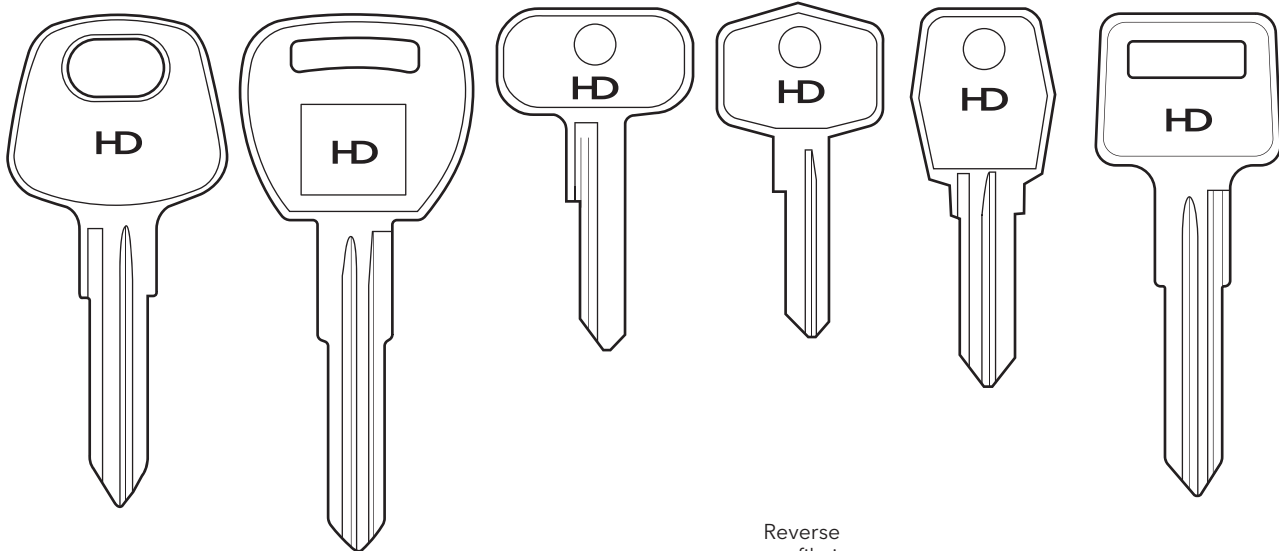

Reverse
profile is
XC115
UNI16R

E... 4001-5000
8090-8999
L... 8001-10000

001-099
876-955

751-875

101-225



NE21
C031



NE48
C249



FR
C023



FS
C024



FT / BC
C038



NE24
C026

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS






CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

ROVER

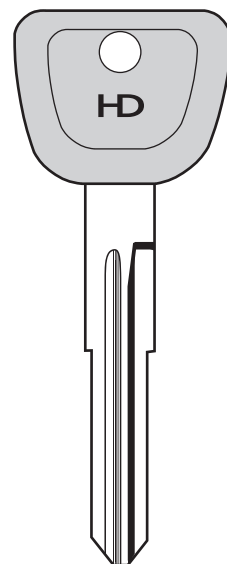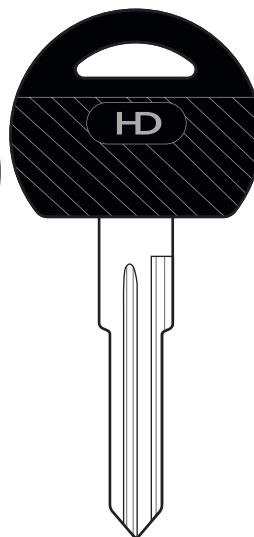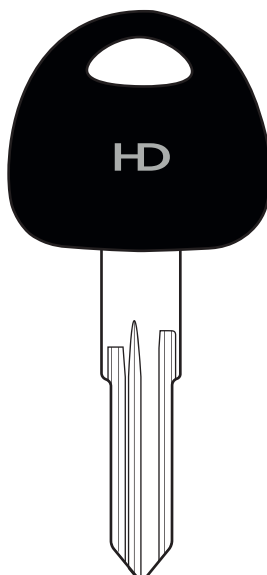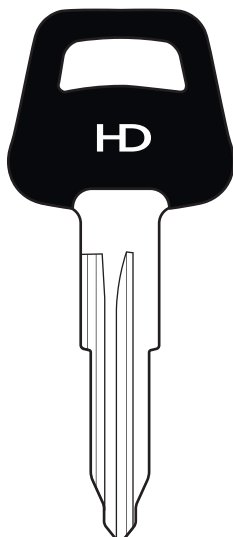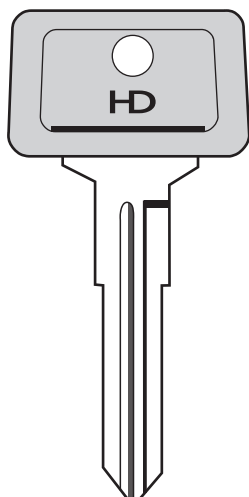

Use for
C016
LF17

E... 4001-5000
8090-8999
L... 8001-10000

BL/RO 1001-2000






NSP... 4000-4999
7001-9000
E... 2001-3000
4001-5000

NSP... 4000-4999
7001-9000
E... 2001-3000
4001-5000



ROVER

SAAB/SCANIA

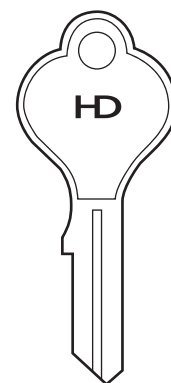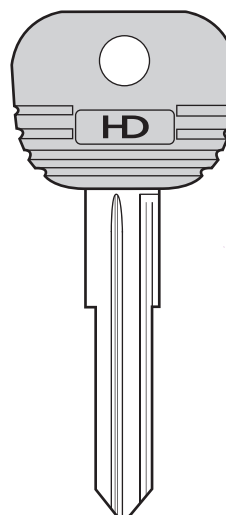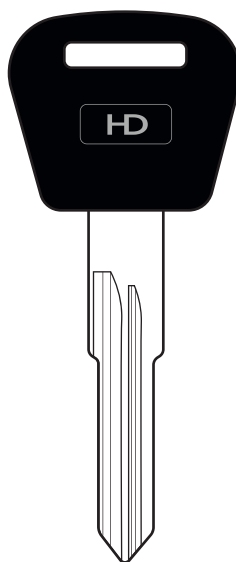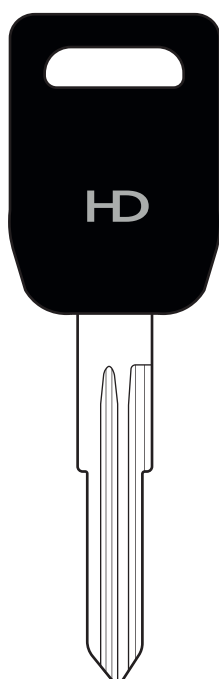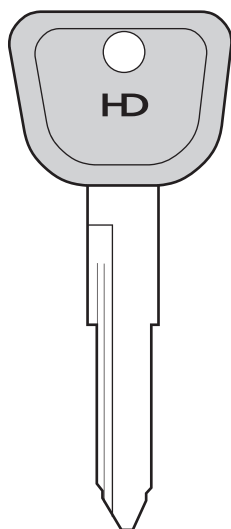

Use for
C079
HD70

Use for
C261
NE51


R4001-5000




- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL

- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI


SAAB/SCANIA

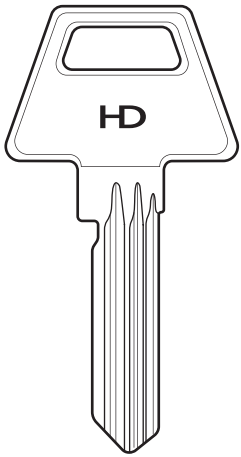


Use for
C224
SR61W

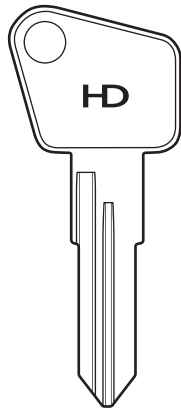

M100-174
W600-842

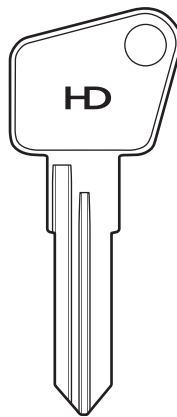

X1-4088
D1-4088

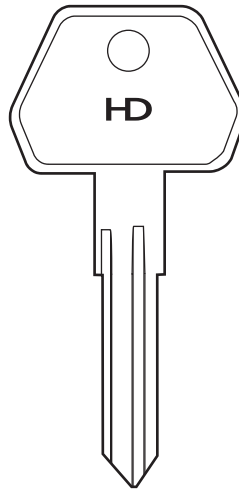

8001-8100




ASS172
XH680



WS12
C175


WS13
C176


WT14
C288



SB4
XC097

SAAB/SCANIA

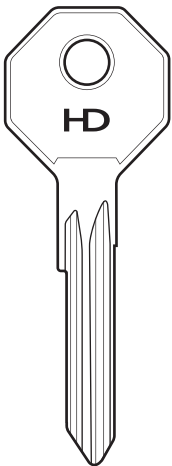


2... 1001-3300


SB7
C196

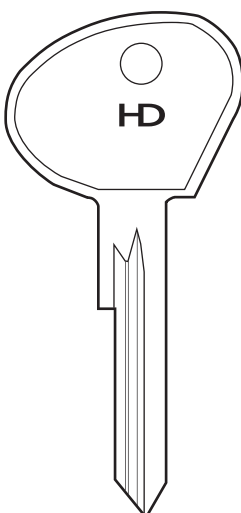


20... 1001-3300


SB8
C123

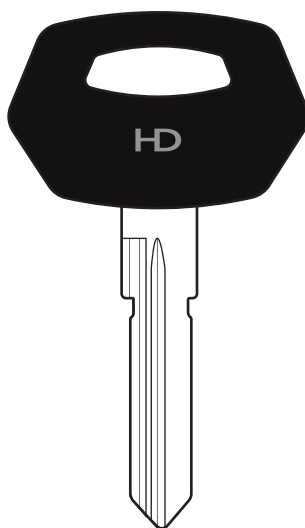



SB10
C125

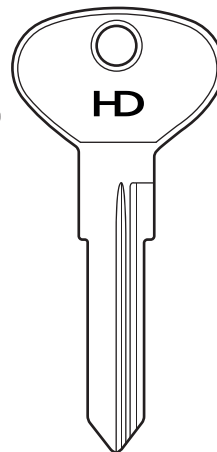

VB... 2001-2830
3001-3890
NV... 2001-2830
3001-3890
MD... 2001-2830
3001-3890


CA1
C149

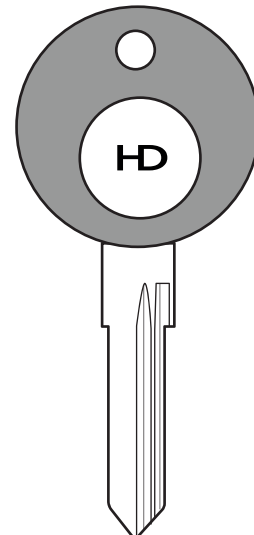

VB... 2001-2830
3001-3890
NV... 2001-2830
3001-3890
MD... 2001-2830
3001-3890


CA1P
PT017

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS


CHIPS

KEYLINE
HORSESHOES


KEY DIY

XHORSE
& VDI


SAAB/SCANIA

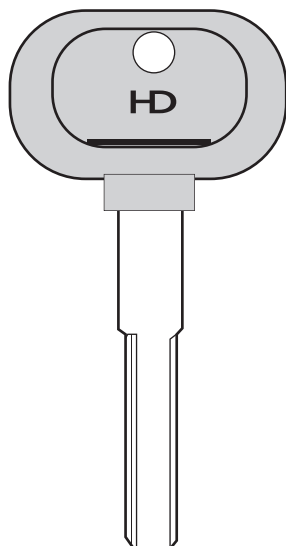

BC...
0001-2000

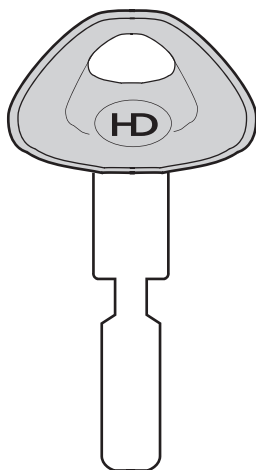


HU71P
XCV023

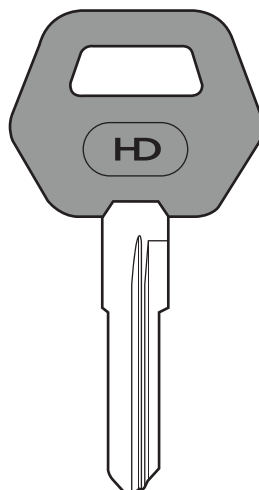

Use for
C124
YM22
SB9


YM22AP
XPT017

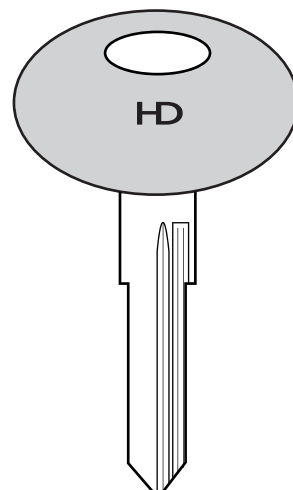


MD...
0001-8154
1001-9282

VO9DP
XPT089


SAFE

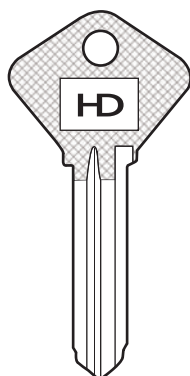


AF3B
XC009

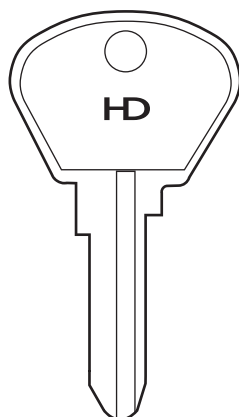

NE9
C064

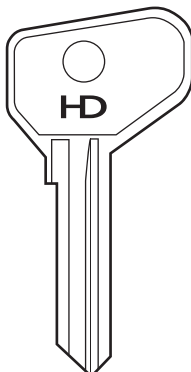


SF5
C066

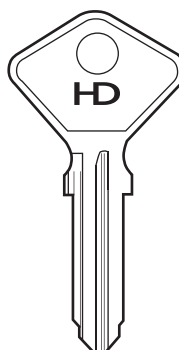


Use for
C067
SF6

SF3
C004

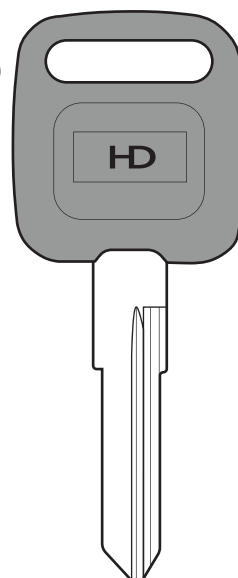

Use for
C157
WT9

WT9P
PT018

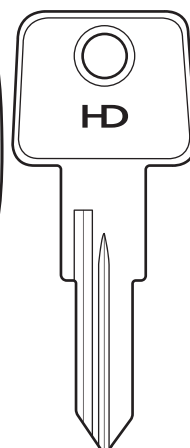

STC5
C275

AZ... 1-2-3-5-7-
A/Z 0-4-6-8-9

1... 501-1000

6... 100-309


...1-9282 VB. VH

S...A/Z

SEAT

SIPEA

SISPA

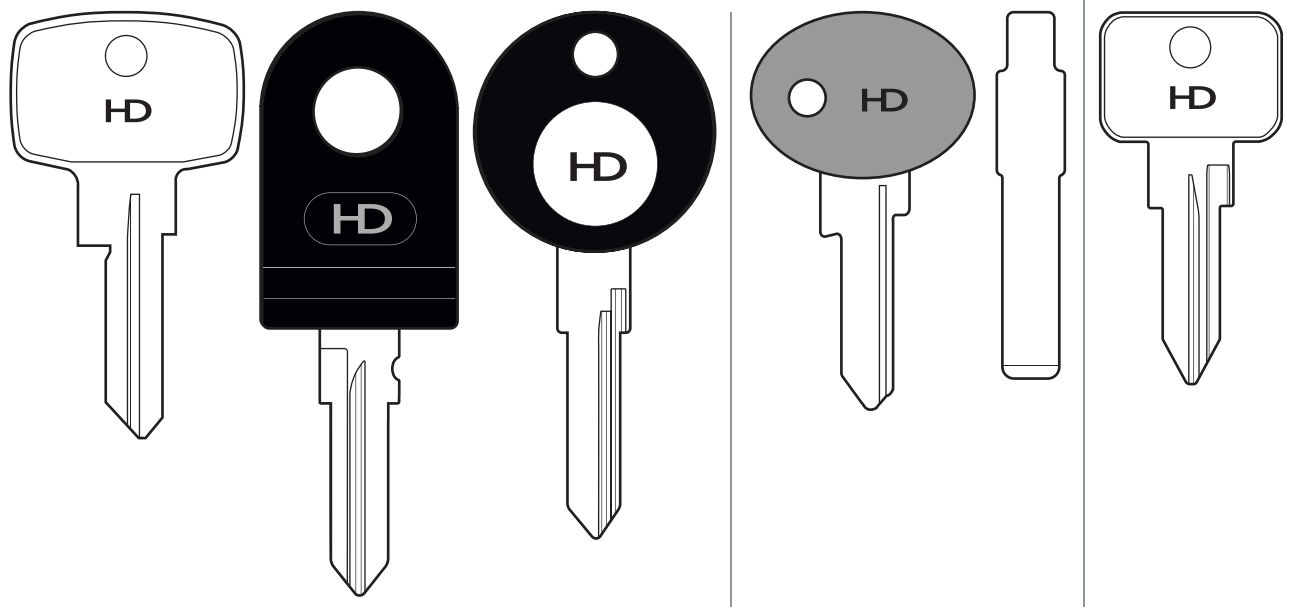

Use for
C059 G

Use for
C264 NE62
and XPT090
WT10P

2-3-4-5-6-7-8

G-Z... 7001-9956

AH... 1-9282

IM2
C338

G4P
PT006


NE62P
PT037

SIP5P
XPT131

SIP18T
XC280

SSA1
C332

SISPA

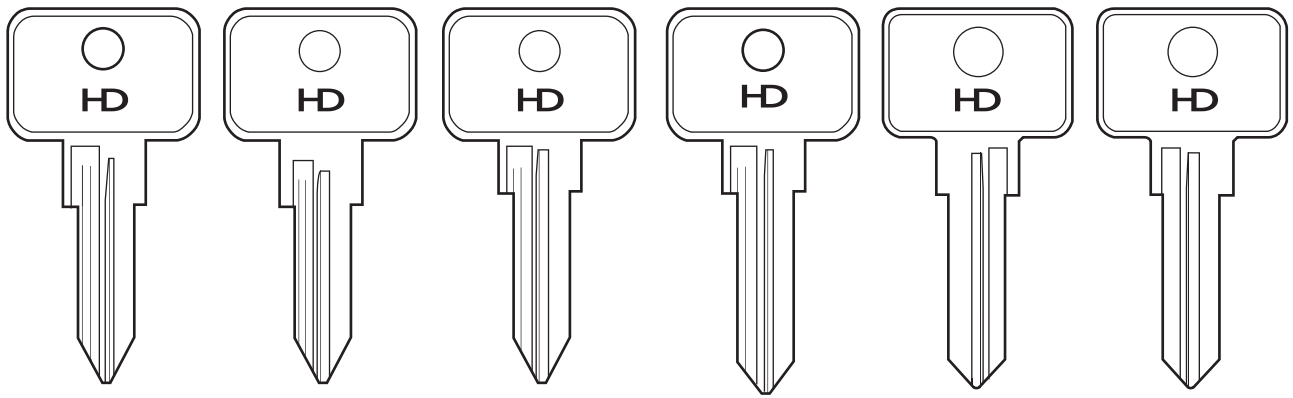

SSA1R
C318

SSA2R
C319

SSA3R
C320

SSA4R
C350


SSA5
XC175

SSA5R
XC046

NON TRANSPONDER

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL
- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VWDI

SKODA

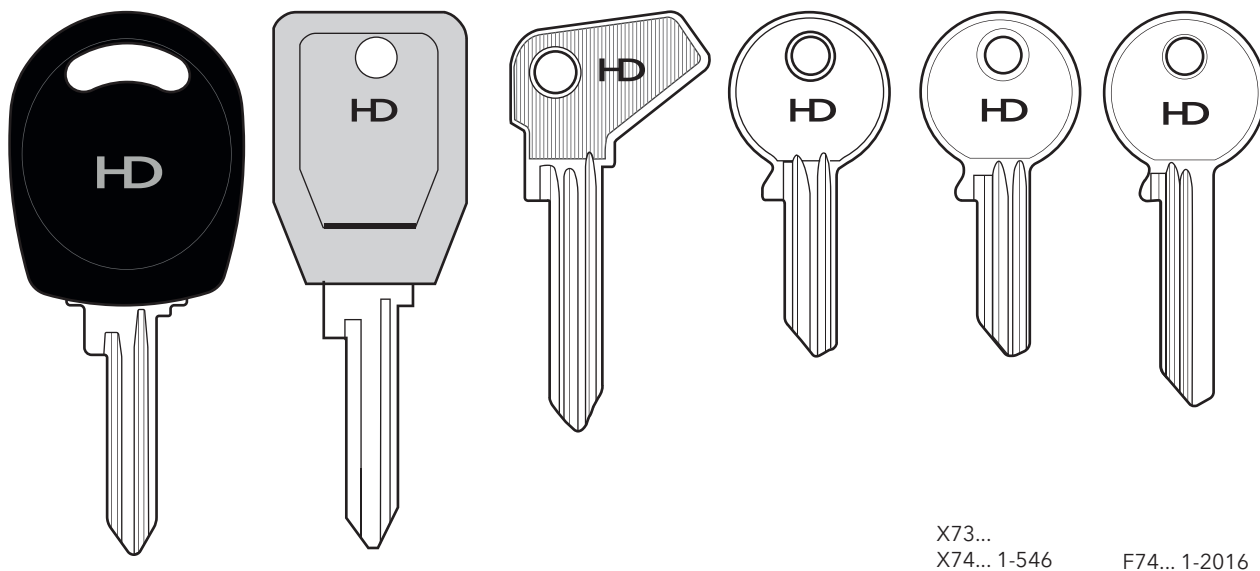

X73...
X74... 1-546

F74... 1-2016



FAB2
C189



FAB21
C164

4AB
1-2780

73X... 1-546



SK22RBP
XPT057



FAB33SP
PT034



SK17
XC048



SK19R
XC049




FAB1
C188



FB6
C301

SKODA

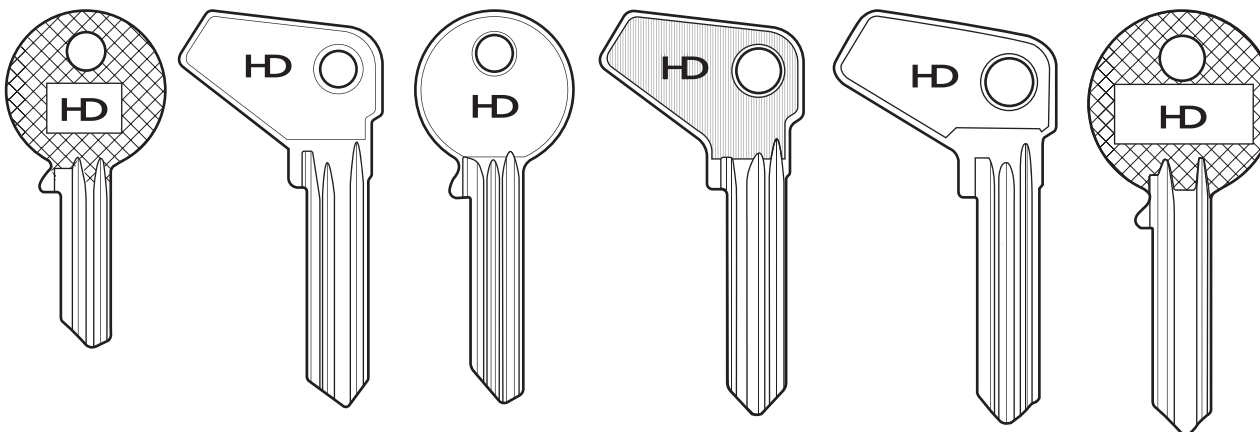

65CD
C242



FB5
XC078



FB7
C322



SK9R
XC171



65CB
C241



65CE
C243



65CF
C245







- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL

- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI

SKODA

SSANGYONG

STREBOR

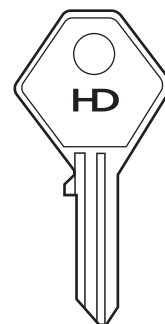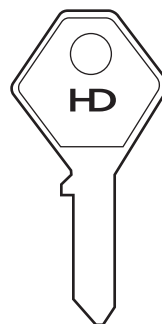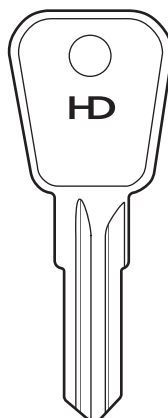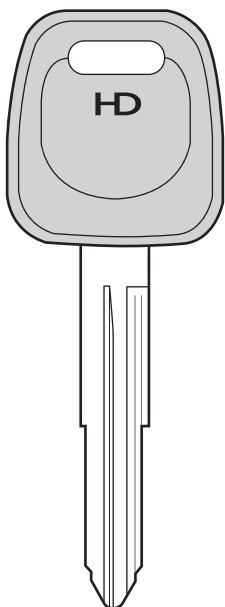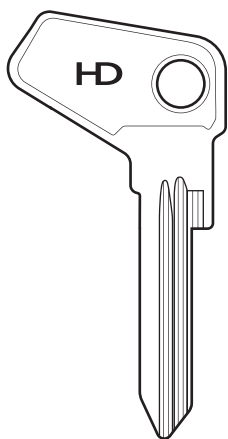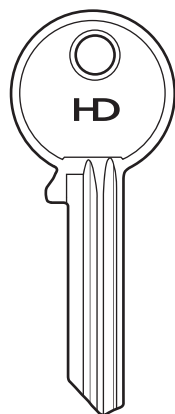

AA... 1-1269
BB... 1-2780



FAB5
C291



FAB29
C277



SSY2AP
XPT028



SS/SF
C181








SR2 STR4R
C183



SR1 STR4
C184

SUBARU

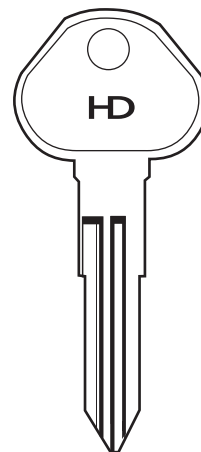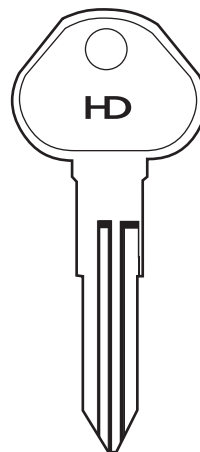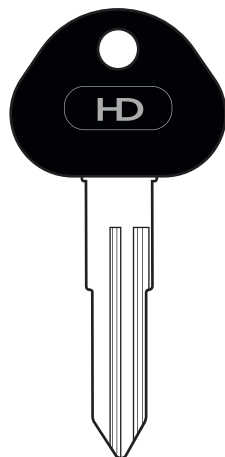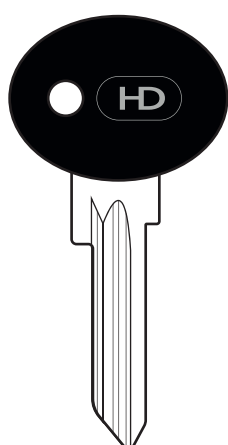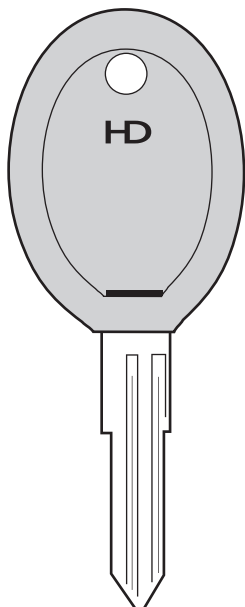

Use for
C056
DT23

X... 001-8000
8001-9000

X... 1-8000



DT23P1
PT053



DO1P
PT020



DT23P
PT022



DT25
C252



DAT12R
C304

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS


CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

SUBARU

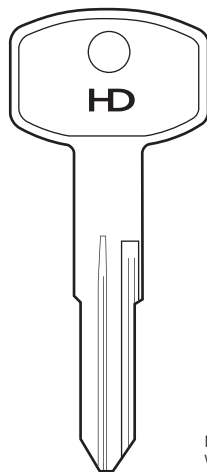

Use for
C050 DT17

M... 1-1000
5000-6000
N... 1001-2001



DT19
C052

M... 6001-7000
W... 1-1000



DT21
C054

M... 7001-7800



DT22
C055

Use for
C053 DT20





F... 1-100
1001-2000
M... 4001-5000



DT18
C051



DT24
C057

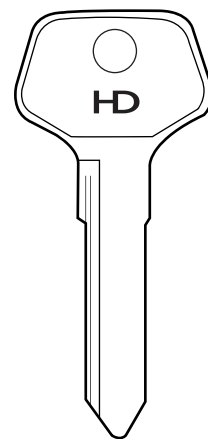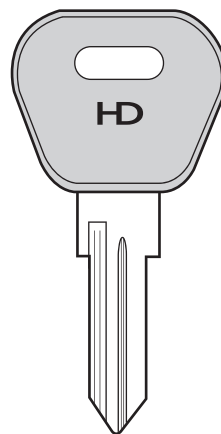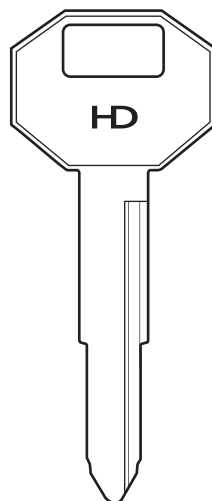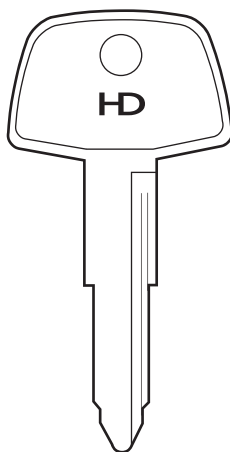

Use for
XC022
IM5R

Head shape
may vary

H...
0001-0400
2221-2620
4441-4640
4641-5143
E...
2001-3000

H... 0001-0400
U... 3001-4000
7001-8200



MS12
C262



MS20
C093









IM5RP
XPT029



SZ8R
C315

SUZUKI

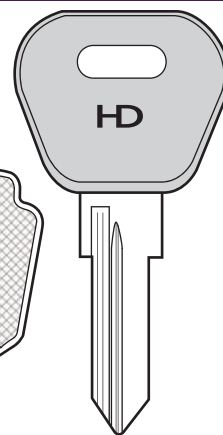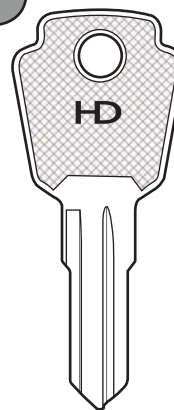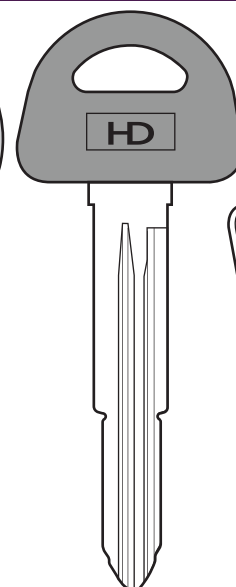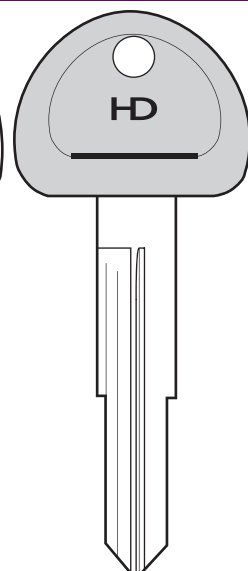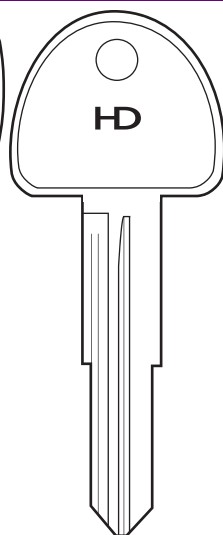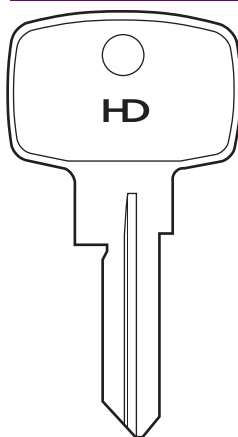

Use for
C340 SZ12

Use for
C337 IM4R

2-3-4-5-6-7-8

18100-19229

18100-19229



IM2
C338



SK9
C279



SK9P
PT031



SZ12P
PT035




IM3R
C339




IM4RP
XPT096

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL
- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VVDI


TALBOT

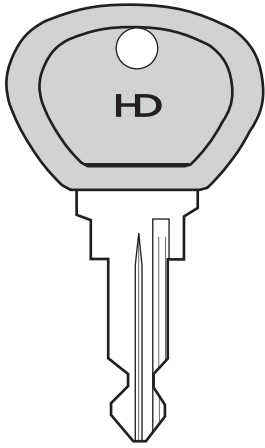


Use for
C104 NE34

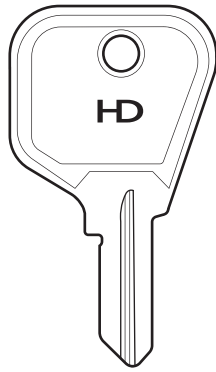


E... 01-649

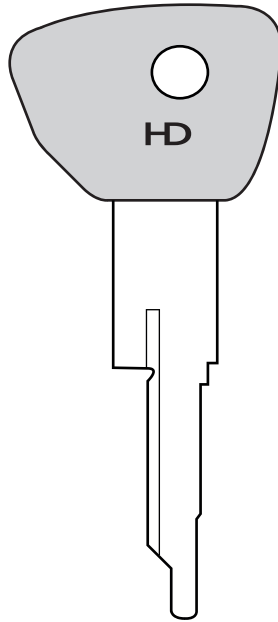

Use for
C178 SR
and C045
VC26

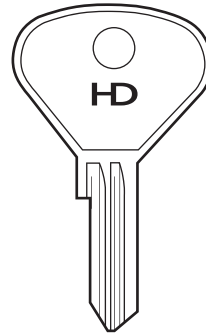

Head shape
may vary

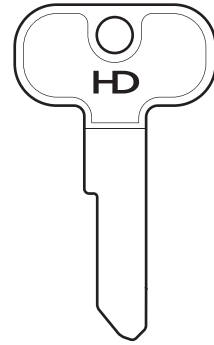

801-952



NE34P
PT014



63PX
C107



VAC27P
XPT136




ST6
C179



RL/RM
C040


TALBOT

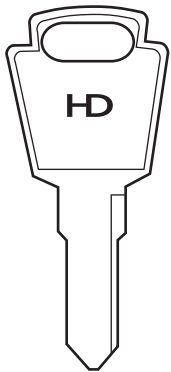

BT... TB
001-650




BT
C095

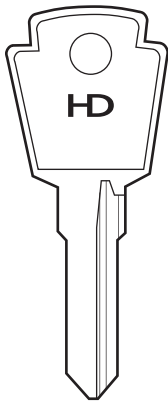

... 35001-36177




A/B
C094

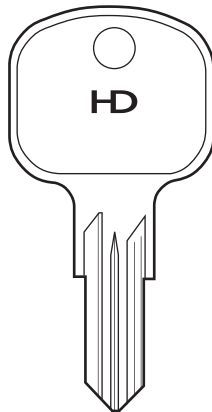

... E 01-649




VE12
C035

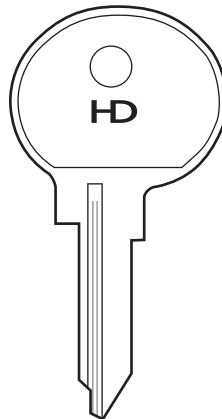

Use for
C116 NE20




R63Q
C121

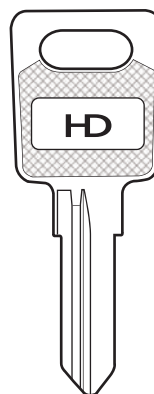

TAP4R
XC265

TAP-AGIS

TATA

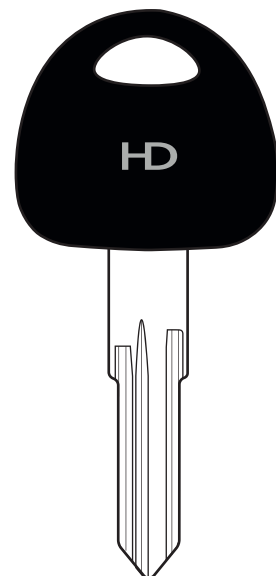

RV4P TAT1P
XPT114

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS

CHIPS






KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

TATA

TOYOTA

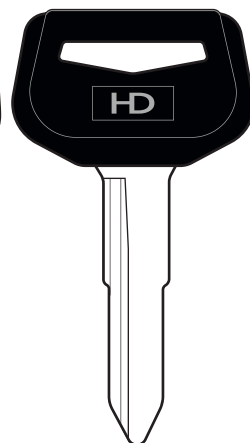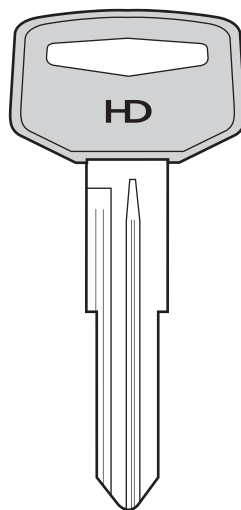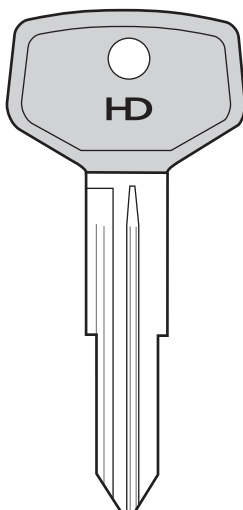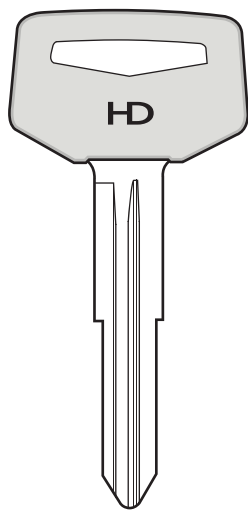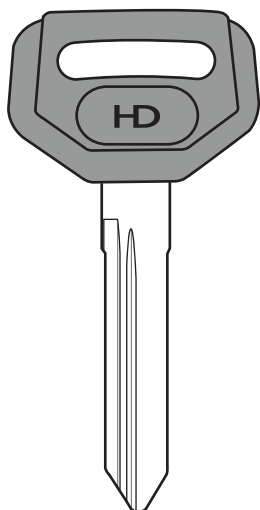

TAT2RP42
XPT153






TOY32RP
XPT088

TOY38RP
PT067

TOY24P
XPT050

TOY4BP
XPT013

TOYOTA

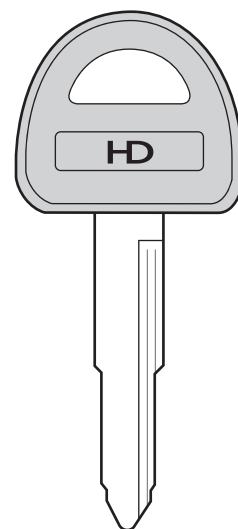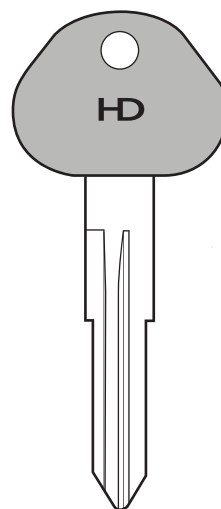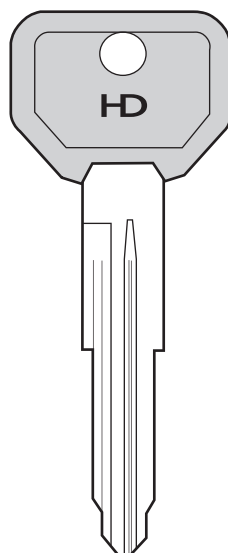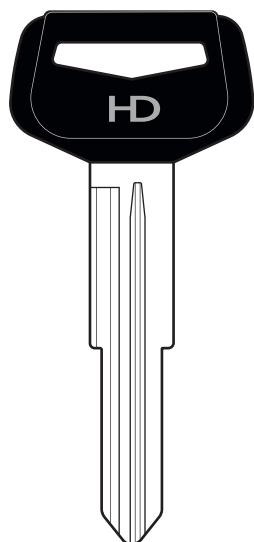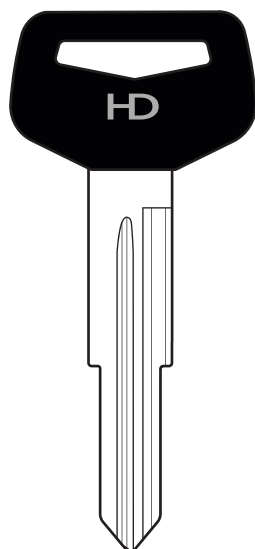

Use for
C255 TT27
& XPT012
TOY42P

Use for
C135 TT22

Use for
C281 TT23

Use for
XPT019
GM23P

K... 7001-9000

...
1001-2500
3001-4500

TOY30P
PT074

TOY36P
XPT015

TT23P
PT039


TOY18P
XPT071

TOY4RCP
XPT014

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL

- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI

TOYOTA

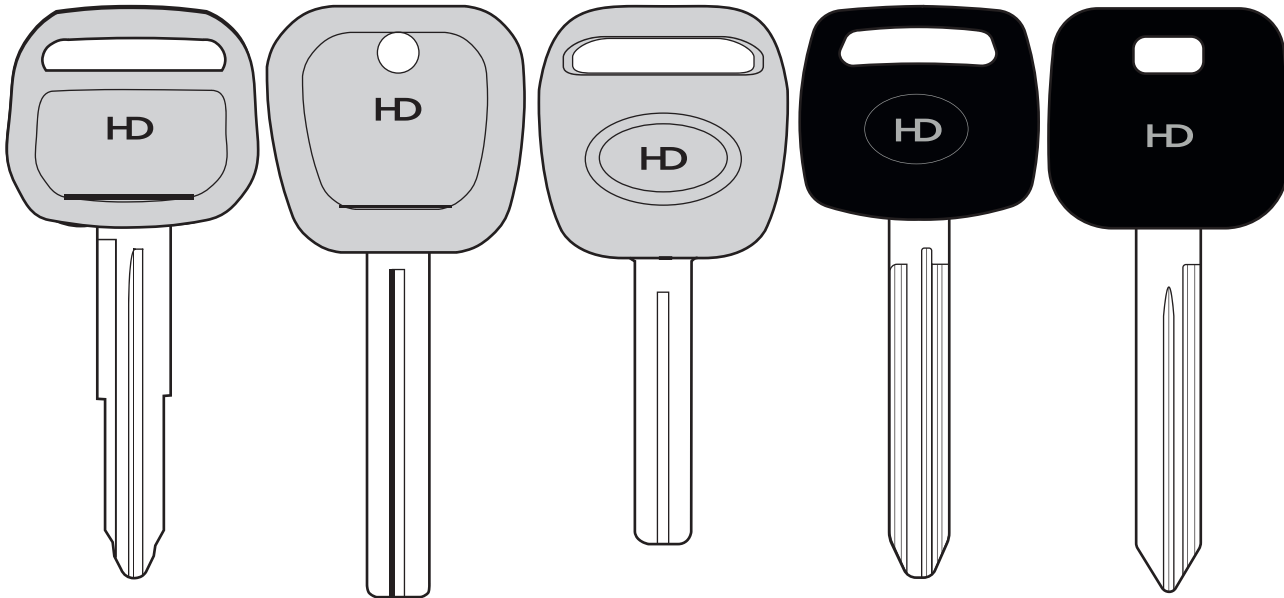

NON TRANSPONDER

N...1-2000

1-5000



TOY46RP
PT059



TOY40P
CV027



TOY48P
XCV015




TOY43P
PT045



TA30P
PT052

TOYOTA

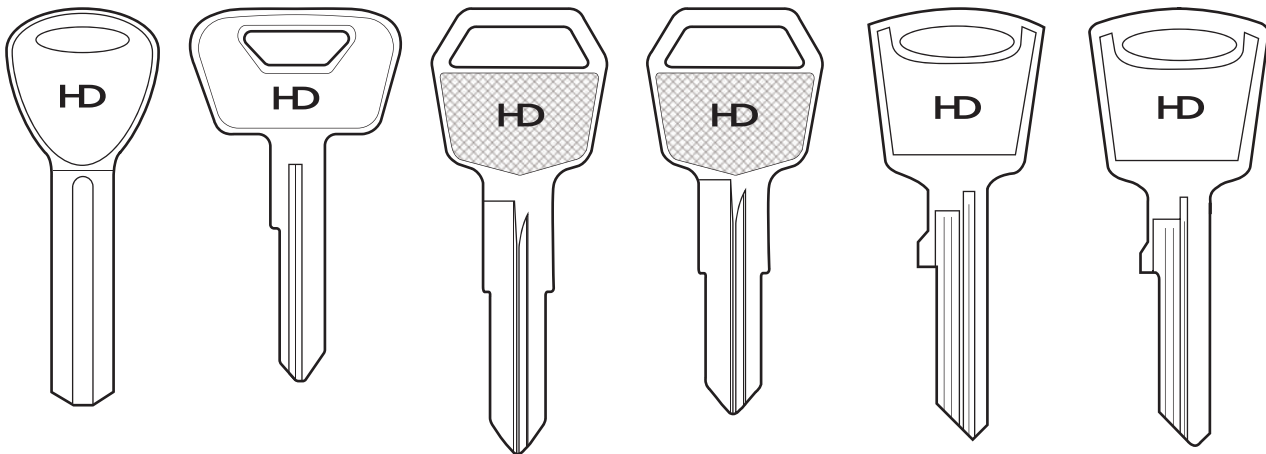

5... 11121-15543
11112-55424



TOY14
XC099



TOY3
XC140



TA13
C203




TA15
C205




TOY10R
XC100



TOY2
XC198

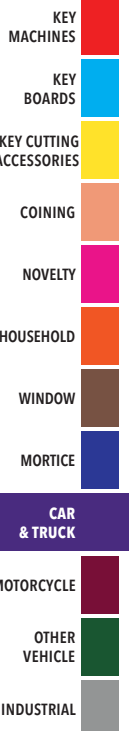

TOYOTA

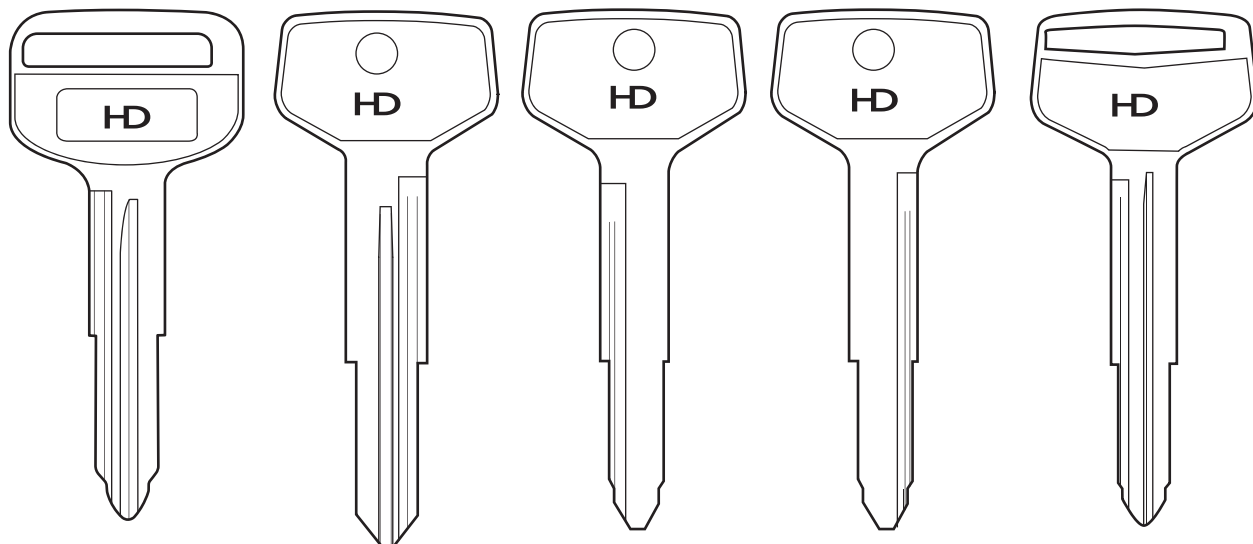

N... 1-2000

S... 0001-2878

K... 1-4130
R... 401-3790

K... 1-4130
R... 401-3790


TOY46R
C386



TOY31
C316


TA29
C276


TA29R
C303


TOY28
XC219

TOYOTA

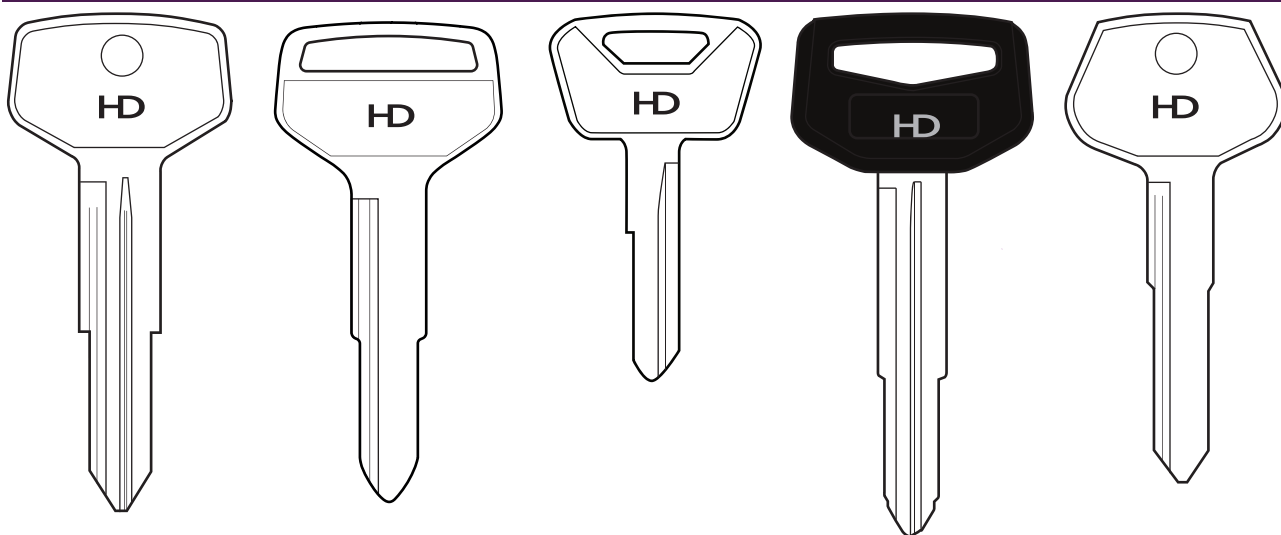

K... 0001-1400 S... 5951-6350
1511-1910 7061-7460
2221-2620 8171-8570
3731-4440 9281-9680
5001-6368 C... 6001-7042 (ISUZU)
R... 0401-0800
1112-1510
2621-3020
3331-3730
5001-6924
8001-9368

Use for
C131 TA24

Y 1-100000

G/P/W/X
1-2000


TT31
C256


TA17
C126


TOY3R
XC241







TOY28P
XPT093


TA25
C132

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL

- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VVDI

TOYOTA

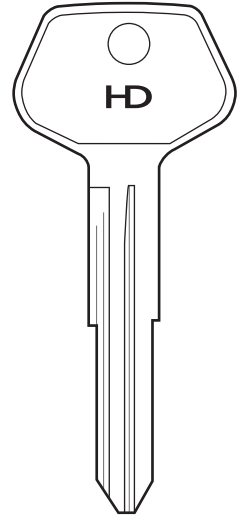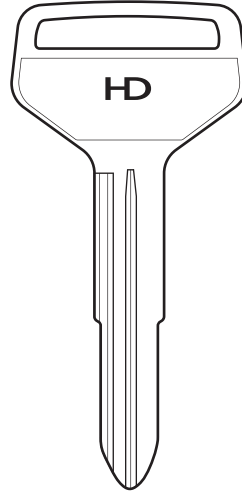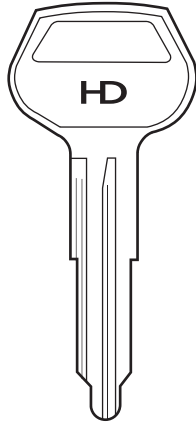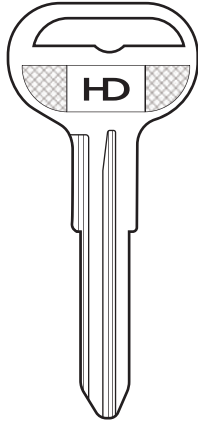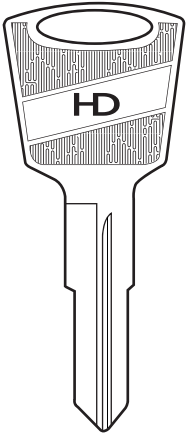

1001-2500
3001-4500


TA27
C134

Use for
C128 TA19

10001-2500
3001-4500


TA23
C212


TA20
C207

F... 5951-6350
7061-7460
8171-8970
9281-9710
P... 7001-8500


TA21
C129





F... 5951-6350
7061-7460
8171-8970
9281-9710
P... 7001-8500


TA22
C130

1001-1500


TT19
C283

TOYOTA

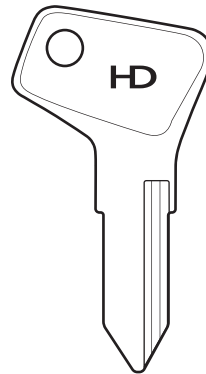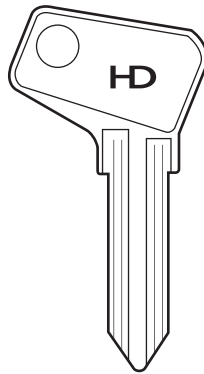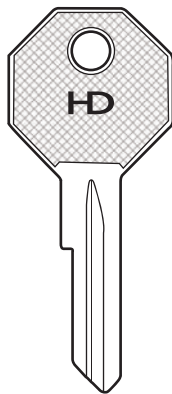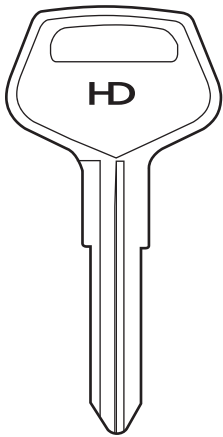


TB3R
XC135


TOY7
XC053


SWB2
XC157


TB3
XC036


TB1R
XC077


1051
C501

TRABANT

TRIMARK

NON TRANSPONDER

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS


CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

TRIUMPH

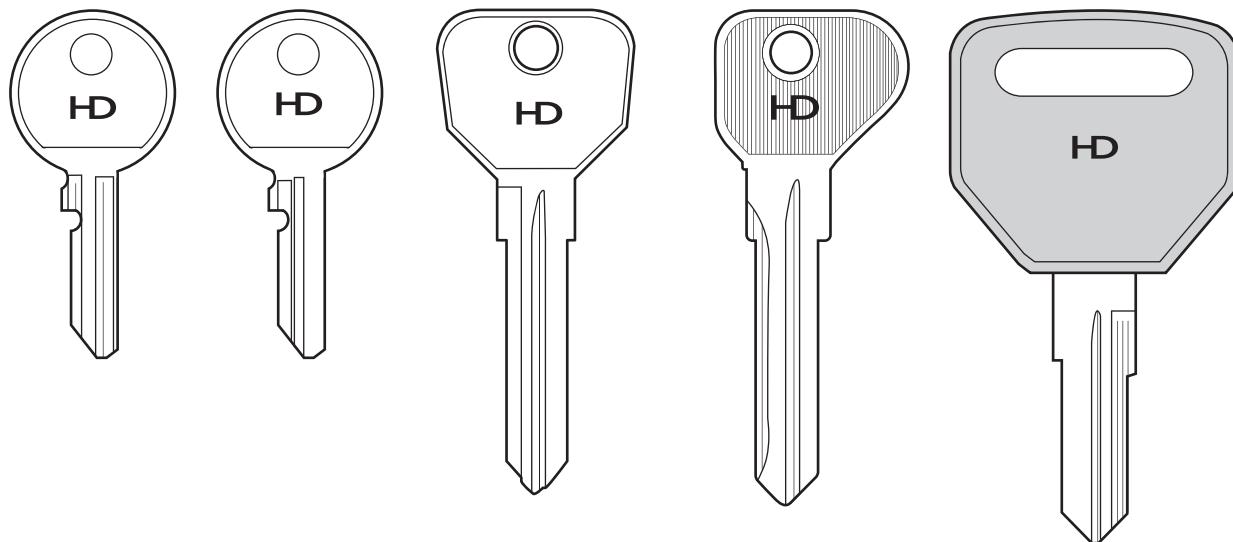

Use for
C017
WB1

Use for
C287
LF19

501-625

626-750

1001-2000

3001-4000



FA
C177



FP
C022



NH
C029




TM
C033



LF21RCP
PT068

TRIUMPH

UNION

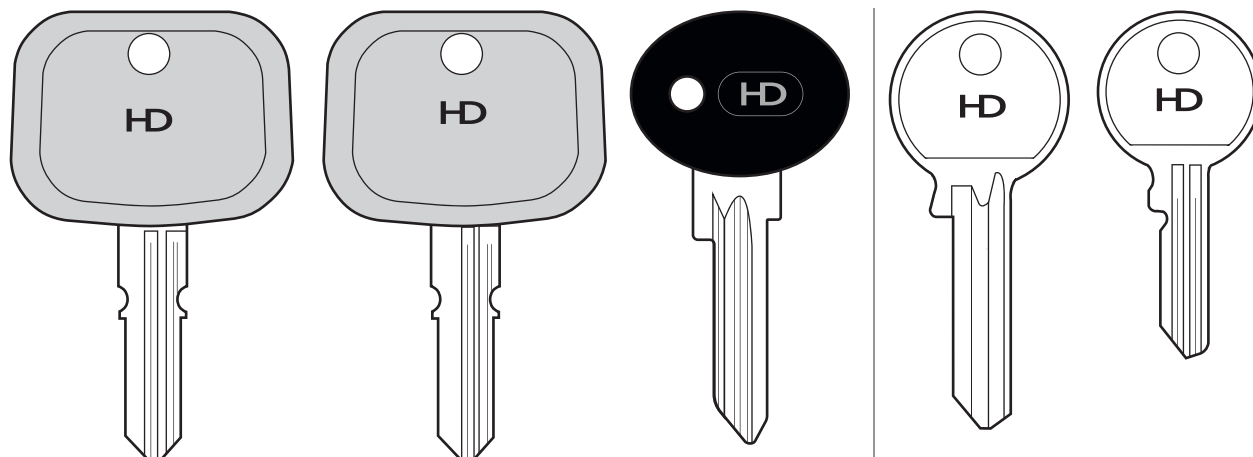

Use for
C077 HD54

Use for
C078
HD55

Use for
C030 NJ

Use for
C186 FNR

1... 001-700

2... 001-700

FR... 1-2000
2001-3040
4001-6000



HD54P
PT009



HD55P
PT010



DO1P
PT020



86B
H0073



62C
H0056


- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL

- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI

UNION


VACHETTE

VAUXHALL

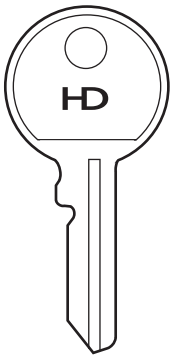


Use for
C187 FX



F49
H0174

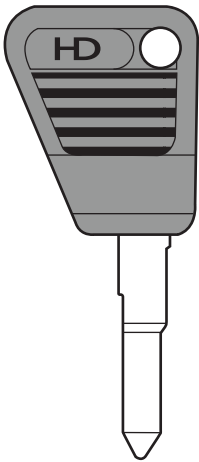


VAC64SP
CV044

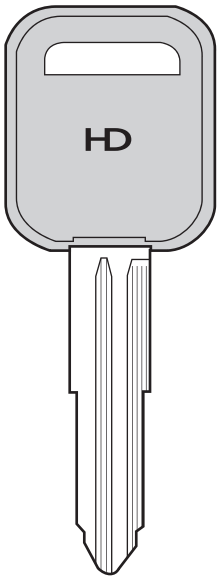



GM15P
PT075

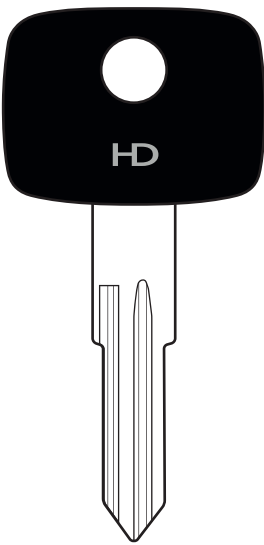

Use for
XCV024
YM28PL


HF58RP
PT003

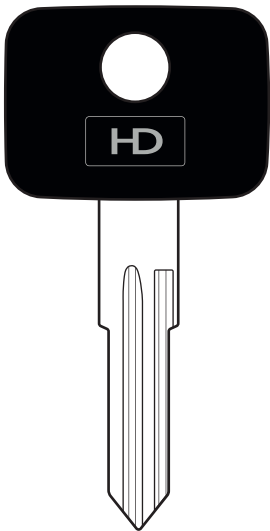


Use for
C141 HF58
& XCV025
HU46PL


HF58P
PT004

D... 1-5200

S... 1-5200


VAUXHALL

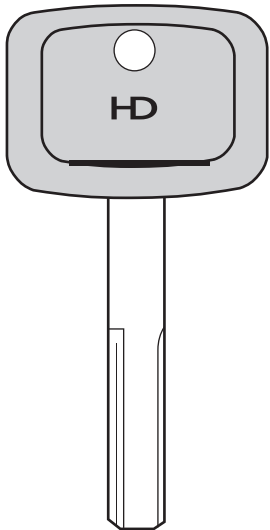

Use for
XCV016
HU43PL

WH...
H...
0001-3000



HF63P
CV014

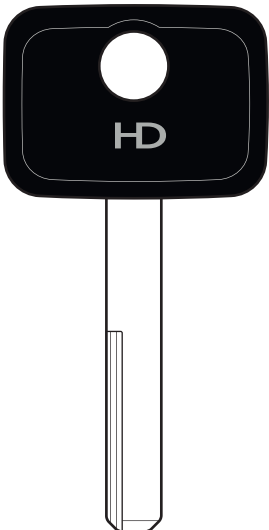

Use for
XCV017
YM27PL


WY...
Y...
0001-3000


YS27P
CV005

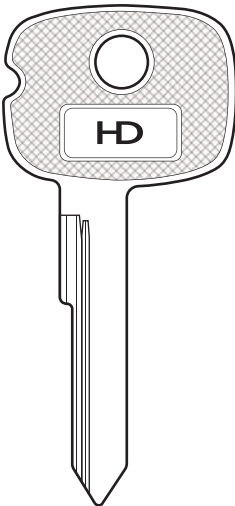


Use for
C137 BA


YM23
C146

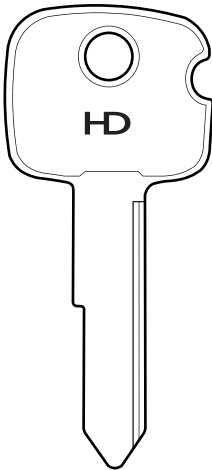

R... 1-1500


YM28
C147

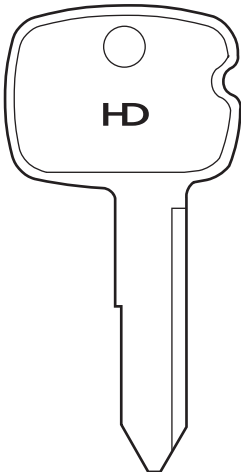

T... 1-500
501-1500



HF38
C139

NON TRANSPONDER

- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL

- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI

VAUXHALL

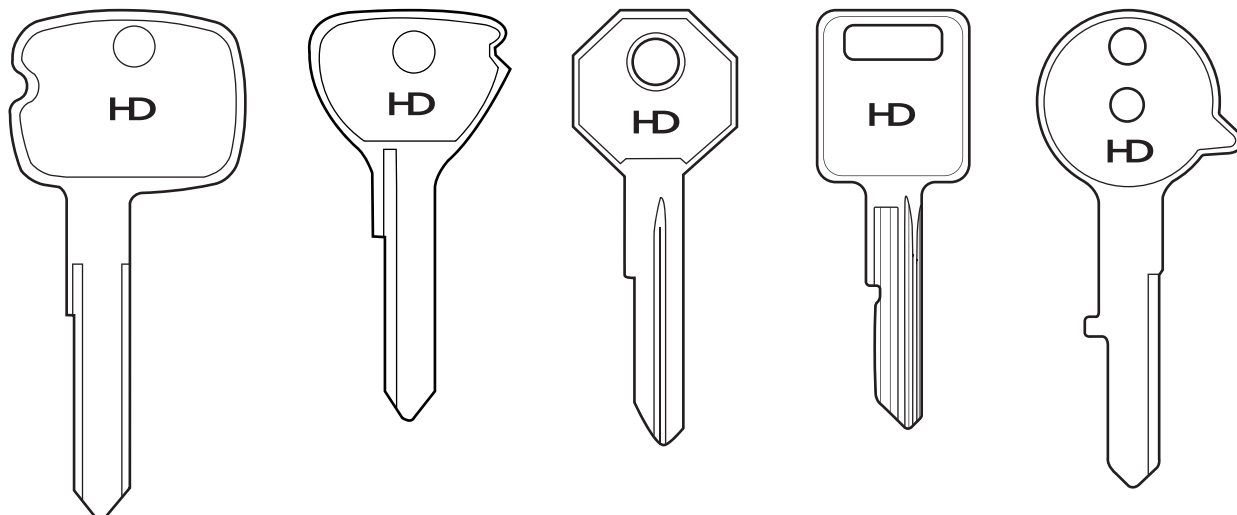

J... 1-2000

FF... 501-1000
1751 - 2000
2501 - 3000


HF43
C140


HF21
C208



YM1
XC229


P1098J
C334


VO6R
XC062

VAUXHALL

VOLKSWAGEN

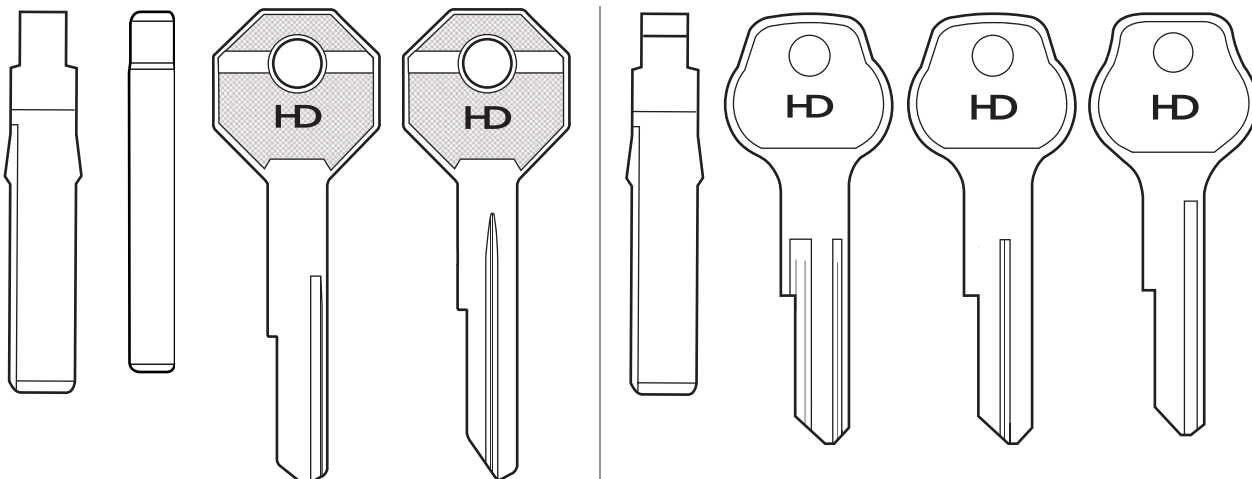


HU75T
XC234


HU100T
XC257


HU31R
XC020


YM2
XC151


HU75T
XC234

SZ... 1-240







LR62VA
C228

SZ... 1-240


L62VA
C344


HU13R
XC018

VOLKSWAGEN

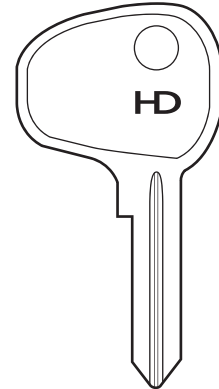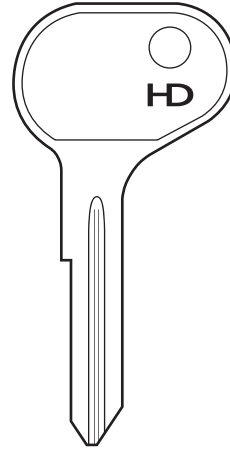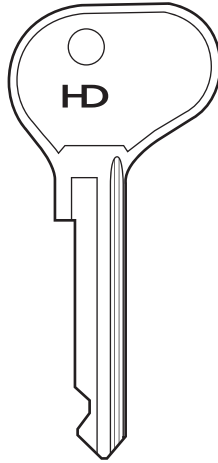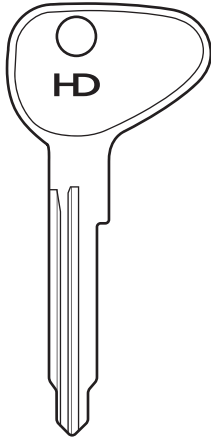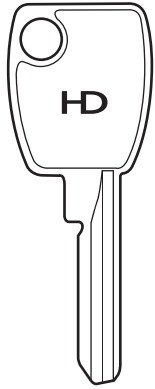

NON TRANSPONDER

..L... 11-7 2



NE58
XC112



WT4
C193



VO2R
XC093








HF18
C206



NS1
XC083

VOLKSWAGEN

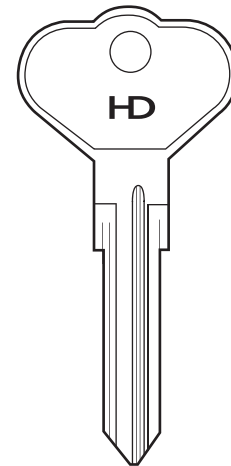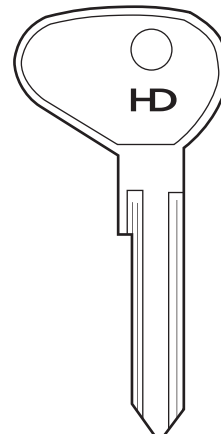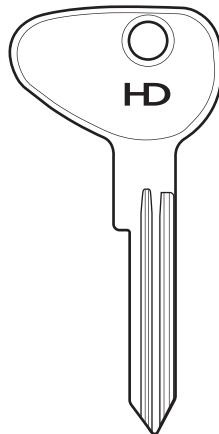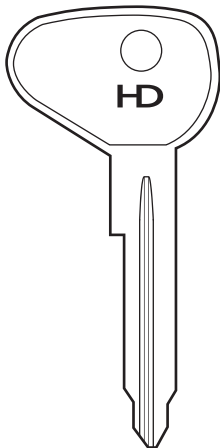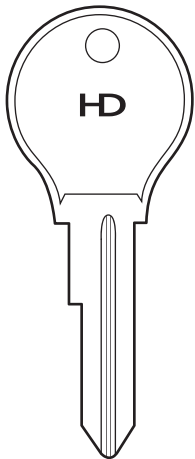

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS

CHIPS

KEYLINE
HORSESHOES

KEY DIY

XHORSE
& VDI

..K... 11-72
1-110

..R... 11-72
1-110

..M... 11-72
1-110

N... 1-8154
1001-9282



VO3
XC174



HF19
C151



HF32
C152




HF33
C153



CA5
C150

VOLKSWAGEN

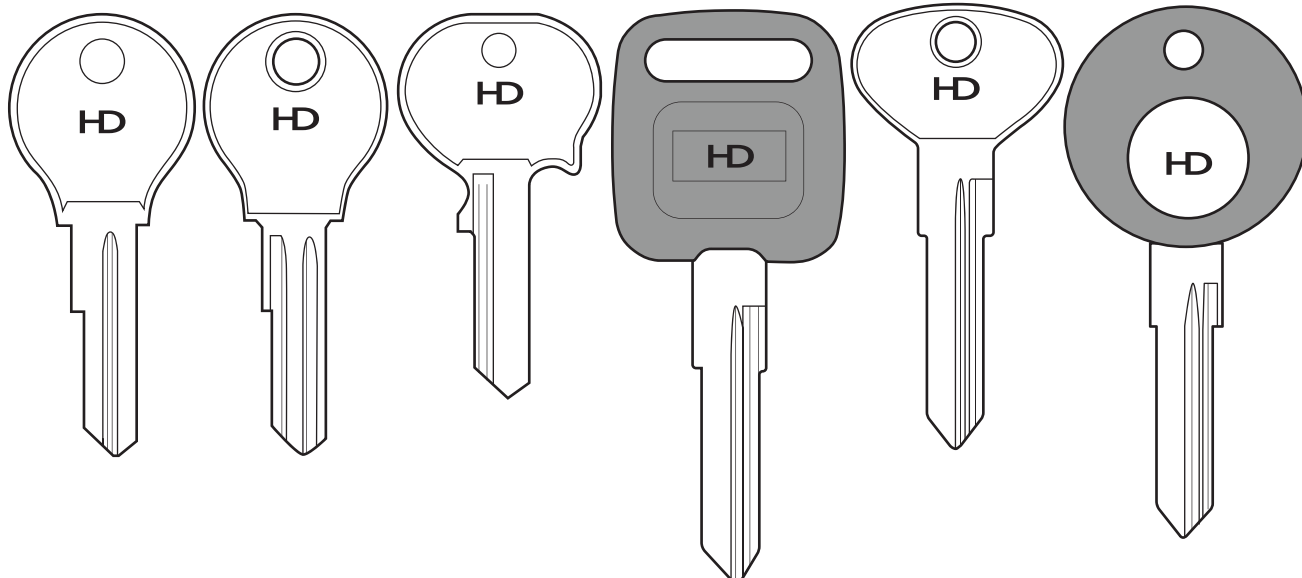

Use for
C157
WT9

VB... 2001-2830
3001-3890
NV... 2001-2830
3001-3890
MD... 2001-2830
3001-3890

VB... 2001-2830
3001-3890
NV... 2001-2830
3001-3890
MD... 2001-2830
3001-3890

HV...1-9282 VB. VH



HU1R
XC060



H62VN
XC239



SNE13
XC091



WT9P
PT018




CA1
C149



CA1P
PT017

VOLKSWAGEN

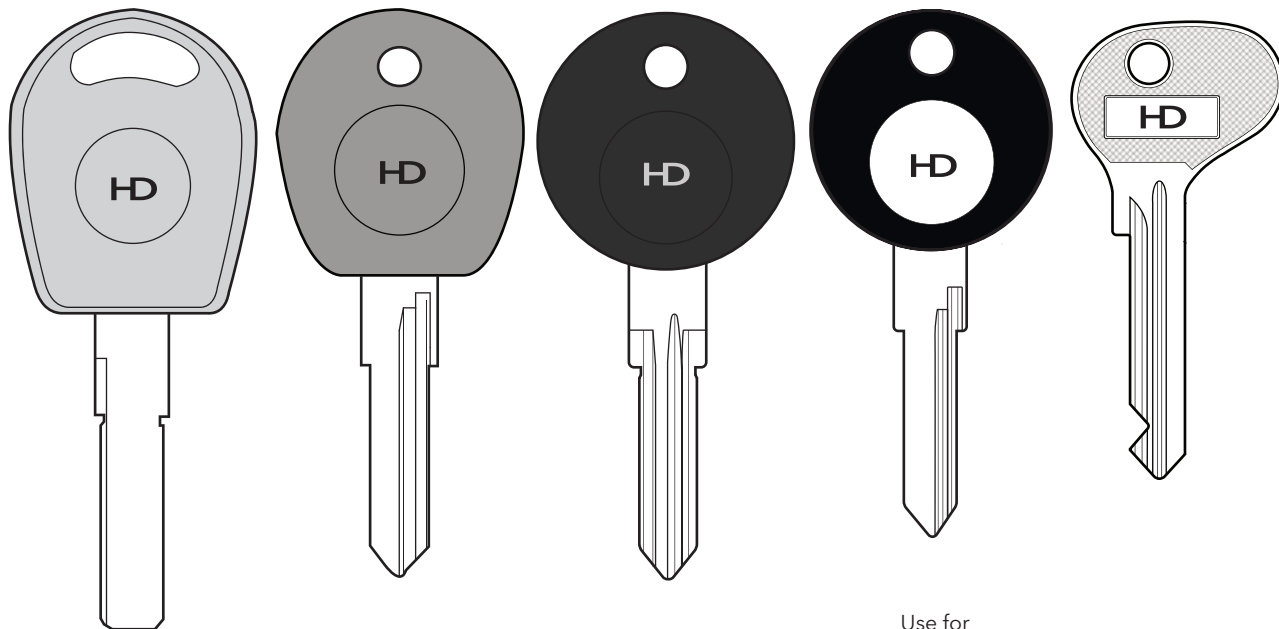

Use for
XCV026
HU66PL

Use for
C264 NE62
and XPT090
WT10P

AH... 1-9282



V66BP
CV004



HU49CP
XPT118



VO13P
XPT105



NE62P
PT037



VO2
XC204






- KEY MACHINES
- KEY BOARDS
- KEY CUTTING ACCESSORIES
- COINING
- NOVELTY
- HOUSEHOLD
- WINDOW
- MORTICE
- CAR & TRUCK
- MOTORCYCLE
- OTHER VEHICLE
- INDUSTRIAL

- NON TRANSPONDERS
- PETROL CAP
- PODS & INSERTS
- BLADES & HORSESHOES
- REMOTE KEY SHELLS
- CHIPS
- KEYLINE HORSESHOES
- KEY DIY
- XHORSE & VDI

VOLKSWAGEN

VOLVO

NON TRANSPONDER

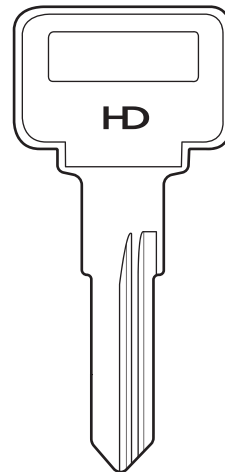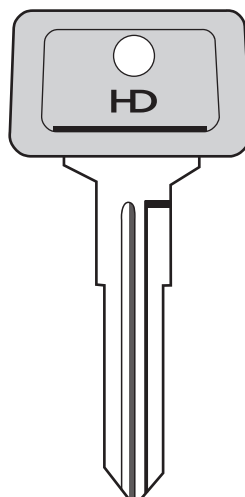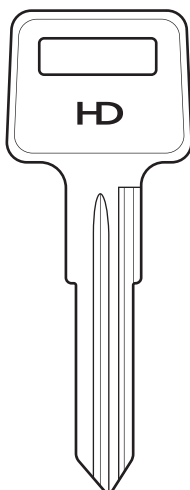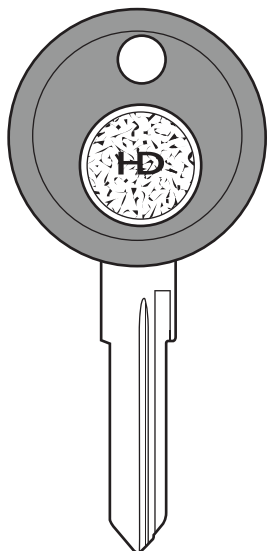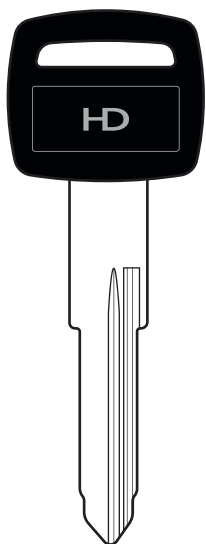

A/B.....
1 - 2 - 3 - 4

E... 4001-5000
8090-8999
L... 8001-10000

E... 4001-5000
8090-8999
L... 8001-10000

DF-F... 1-1975



VO9BP
XPT024



HU48P
XPT003



NE24
C026








NE24P
PT013



HF46
C160

VOLVO

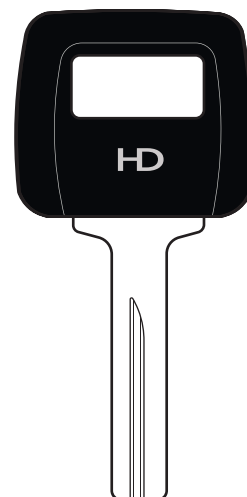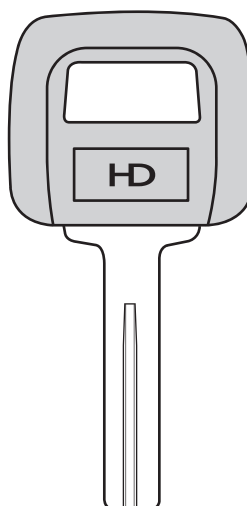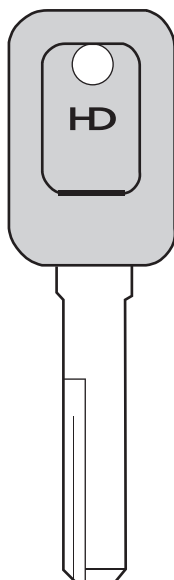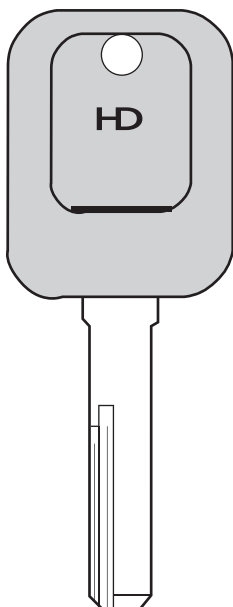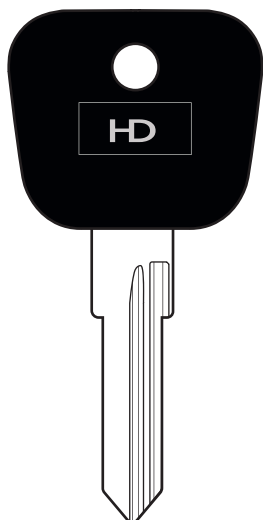

DF-F... 1-1975

DH... 6001-8000

H... 6001-8000



HF46P
PT002



VO1P
CV007



VO2P
CV008



VO3P
CV009



VO4P
CV010

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS


CHIPS

KEYLINE
HORSESHOES


KEY DIY

XHORSE
& VDI




VOLVO

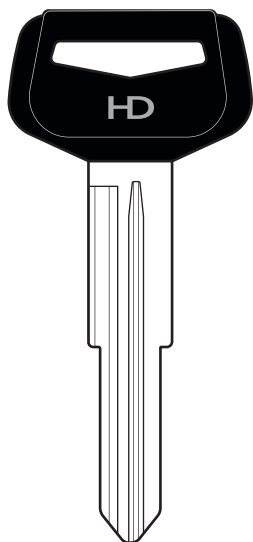

Use for
C166
NE35

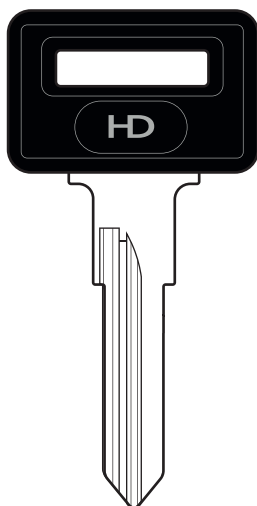

Use for
C167
NM65

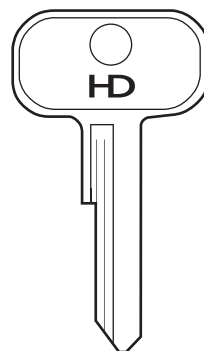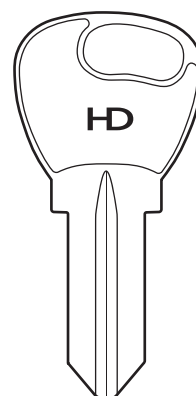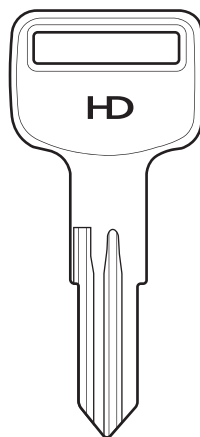

1A... 000-999
2A... 000-999
3A... 000-999
4A... 000-999
5A... 000-999
5B... 000-999

1A... 000-999
2A... 000-999
3A... 000-999
4A... 000-999
5A... 000-999
5B... 000-999

6250-6499

751-875



NE35P
PT015



NM65P
PT019



NE25
C165









NE50
XC114



FR
C023

VOLVO

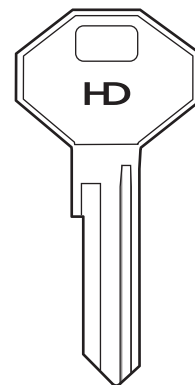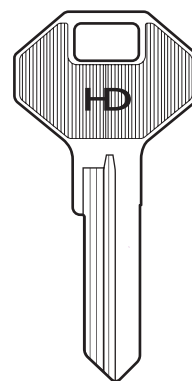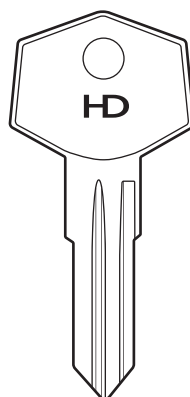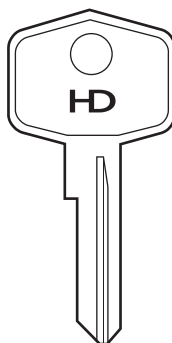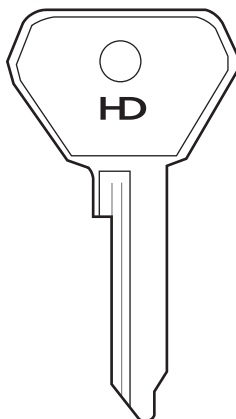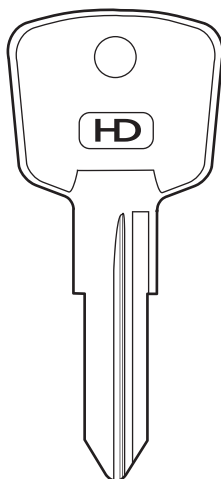

Reverse
profile is
XC115
UNI16R

E... 1-2-3-4-5

001-099
876-955



HU52
XC041



NE12
C163



FS
C024



AK3 (KA)
C161




TK5
XC170



TK5R
XC102

VOLVO

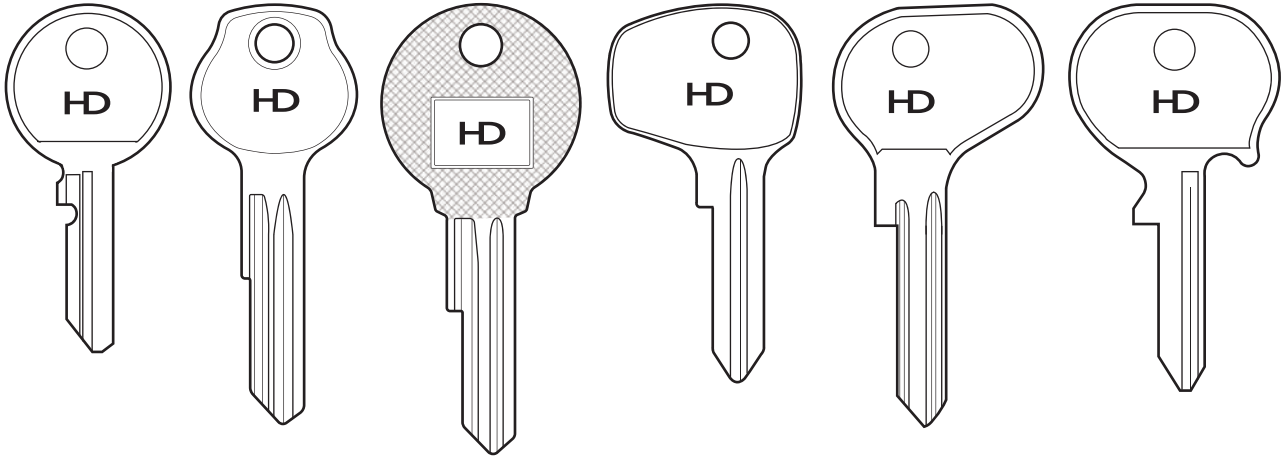

NON TRANSPONDER

626-750



FP
C022



R62VK
C227



62VK
C225



63VO
C237



POR5
XC168








NE6
C162

FL... 0001-1080

... 1-2-3-4-5

VOLVO

WASO

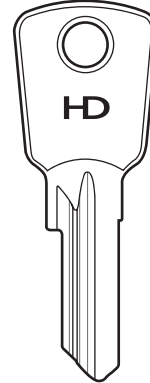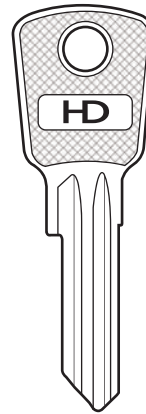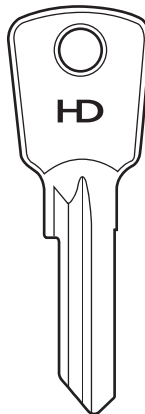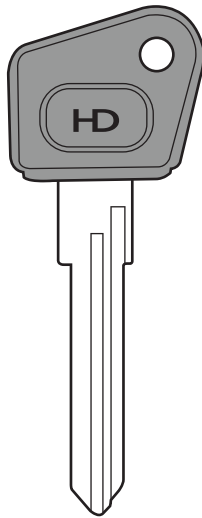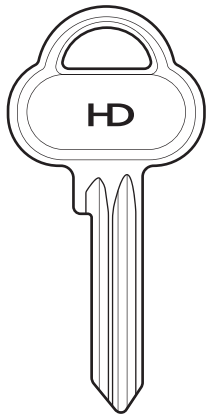

7... 1001-3300



S61W
C168



WAS10SP
PT005



WAS2
XC116



WAS2R
XC147



WAS3
XC117

KEY
MACHINES

KEY
BOARDS

KEY CUTTING
ACCESSORIES

COINING

NOVELTY

HOUSEHOLD

WINDOW

MORTICE

CAR
& TRUCK

MOTORCYCLE

OTHER
VEHICLE

INDUSTRIAL

NON
TRANSPONDERS

PETROL CAP

PODS & INSERTS

BLADES &
HORSESHOES

REMOTE KEY SHELLS

CHIPS


KEYLINE
HORSESHOES

KEY DIY


XHORSE
& VDI

NON TRANSPONDER

YMOS

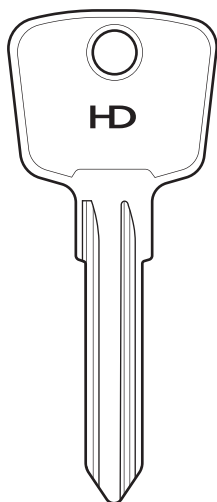


Use for
C090
YM18

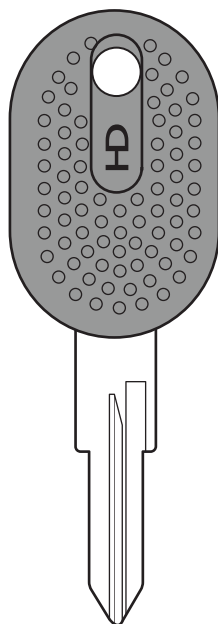


K... 3301-4886
K... 7001-8092
T... 5000-6027
T... 7001-8092
S... 501-3278


YUGO

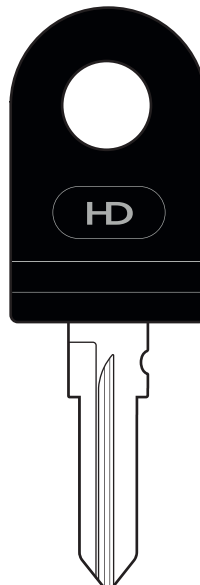

Use for C059 G

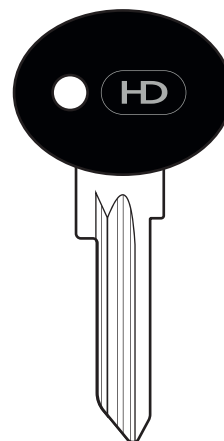

DO1P
PT020

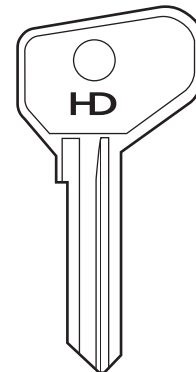

SF5
C066

1... 501-1000



YM12R
XC281



K4P
PT007



G4P
PT006




DO1P
PT020




SF5
C066


YUGO

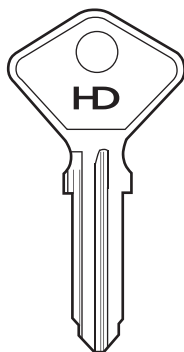


Use for
C067
SF6

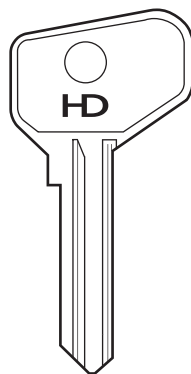


FA1
C170

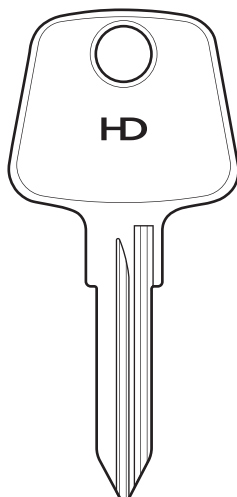

SIP14
C317

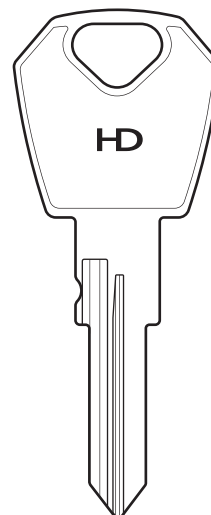

YO1
C269

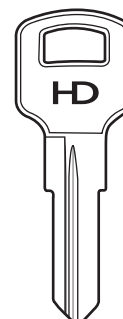

ZA12
C294

ZADI

3... 501-1000

Z... 100-309



SF3
C004